

5 Port Solenoid Valve

Series **VFR2000/3000/4000/5000/6000**

Rubber Seal

Series Variations



* 2 position single type
Passage: 4/2 → 5/3 (A/B → EA/EB)

Series	Sonic conductance* C [dm ³ /(s·bar)]	Type of actuation	Voltage	Electrical entry	With light/surge voltage suppressor (Option)	Manual override
Base Mounted	VFR2000 Plug-in type Non plug-in type P.1232	1/8, 1/4: 3.0 2 position single 		Plug-in Conduit terminal (F) Non plug-in Grommet (G) Conduit terminal (T) L plug connector (L) Grommet terminal (E) DIN terminal (D, Y) M plug connector (M)	☐ With light/surge voltage suppressor - Plug-in type Conduit terminal (FZ) - Non plug-in type Grommet terminal (EZ) Conduit terminal (TZ) DIN terminal (DZ, YZ) L plug connector (LZ) M plug connector (MZ) ☐ With surge voltage suppressor - Non plug-in type Grommet (GS) Note) Surge voltage suppressor is equipped midway on the lead wire for grommet type.	
	VFR3000 Plug-in type Non plug-in type P.1251	1/4: 7.5 3/8: 8.7 2 position double 3 position closed center 	(Standard) 100 VAC ⁵⁰ /60 Hz 200 VAC ⁵⁰ /60 Hz 24 VDC (Option) 110 to 120 V ⁵⁰ /60 Hz 220 VAC ⁵⁰ /60 Hz 240 VAC ⁵⁰ /60 Hz 12 VDC	Plug-in Conduit terminal (F) Non plug-in (VFR3□10/4□10) Grommet terminal (E) DIN terminal (D) Non plug-in (VFR3□40/4□40) Grommet (G) Grommet terminal (E) Conduit terminal (T) DIN terminal (D, Y)	☐ With light/surge voltage suppressor - Plug-in type Conduit terminal (FZ) - Non plug-in type (VFR3□10/4□10) DIN terminal (DZ) Grommet terminal (EZ) Conduit terminal (TZ) ☐ With surge voltage suppressor - Non plug-in type (VFR3□40/4□40) Grommet (GS) Note) Surge voltage suppressor is equipped midway on the lead wire for grommet type.	Non-locking push type Non-locking push type A (Extended) Locking type B (Tool required) Locking type C (Lever)
	VFR4000 Plug-in type Non plug-in type P.1274	3/8, 1/2: 14 3 position exhaust center 3 position pressure center 		Plug-in Conduit terminal (F) Non plug-in Grommet terminal (E) DIN terminal (D)	☐ With light/surge voltage suppressor - Plug-in type Conduit terminal (FZ) - Non plug-in type (VFR3□40/4□40) Grommet (GS) Note) Surge voltage suppressor is equipped midway on the lead wire for grommet type.	
	VFR5000 Plug-in type Non plug-in type P.1297	3/8: 18 1/2: 23 3/4: 25 		Plug-in Conduit terminal (F) Non plug-in Grommet terminal (E) DIN terminal (D)	☐ With light/surge voltage suppressor - Plug-in type Conduit terminal (FZ) - Non plug-in type DIN terminal (DZ) Grommet terminal (EZ)	Non-locking push type
	VFR6000 Plug-in type Non plug-in type P.1312	3/4: 41 1: $\left(\frac{\text{Effective area}}{191 \text{ mm}^2} \right)$		Plug-in Conduit terminal (F) Non plug-in Grommet terminal (E) DIN terminal (D)	☐ With light/surge voltage suppressor - Plug-in type Conduit terminal (FZ) - Non plug-in type DIN terminal (DZ) Grommet terminal (EZ)	Non-locking push type

SJ

SY

SV

SYJ

SZ

VP4

S0700

VQ

VQ4

VQ5

VQC

VQZ

SQ






VFS

VFR

VQ7

Series VFR2000/3000/4000/5000/6000

Manifold Variations


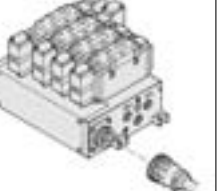
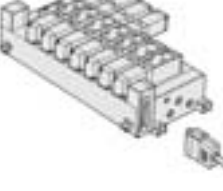
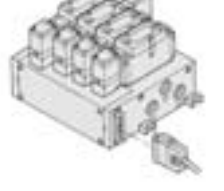
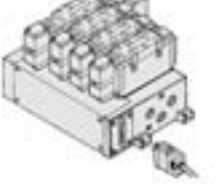
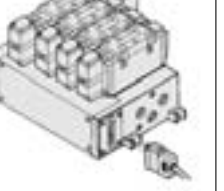
		Base Mounted Plug-in Type			
		VFR2000 P.1240	VFR3000 P.1259	VFR4000 P.1282	VFR5000 P.1303
Manifold	With multi-connector				
	With terminal block				
	With D-sub connector				

Manifold Option Parts	Individual SUP spacer	●	●	●	●
	Individual EXH spacer	●	●	●	●
	SUP block disk	●	●	●	●
	EXH block disk	●	●	●	●
	Throttle valve spacer	●	●	●	●
	Interface regulator	●	●	●	●
	Blanking plate	●	●	●	●
	Air release valve spacer	●	●	●	
	SUP stop valve spacer	● (1)	●		

Note 1) Used with the manifold base. Please contact SMC for details.
 Note 2) There is no manifold base in Series VFR6000.

Manifold Option	 With exhaust cleaner Plug-in type, Non plug-in type • High noise reduction effect: 35 dB or more • Collects oil mist: collecting rate 99.9% or more • Piping work is reduced.
	 With control unit Note) Plug-in type, Non plug-in type • Filter, regulator, pressure switch and air release valve in one unit • Piping work eliminated

Note) There is no option with control unit in Series VFR5000.

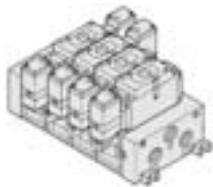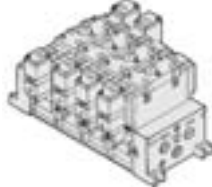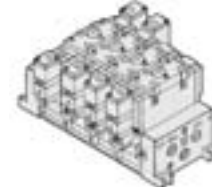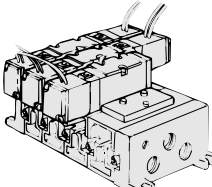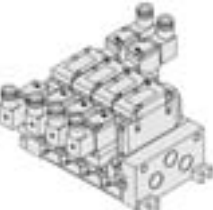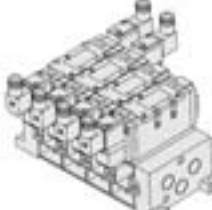		Base Mounted Non Plug-in Type			
		VFR2000 P.1241	VFR3000 P.1260	VFR4000 P.1283	VFR5000 P.1304
Manifold	Common electrical entry • Grommet terminal • DIN terminal	—			
	Individual electrical entry • Grommet • Grommet terminal • Conduit terminal • DIN terminal • L plug connector (Note) • M plug connector (Note)				

Note) Series VFR2000 only

Manifold Option Parts	Individual SUP spacer	●	●	●	●
	Individual EXH spacer	●	●	●	●
	SUP block disk	●	●	●	●
	EXH block disk	●	●	●	●
	Throttle valve spacer	●	●	●	●
	Interface regulator	●	●	●	●
	Blanking plate	●	●	●	●
	Air release valve spacer	●	●	●	
	SUP stop valve spacer	● (1)	●		

Note 1) Used with the manifold base. Please contact SMC for details.
Note 2) There is no manifold base in Series VFR6000.


Manifold Option	With exhaust cleaner
	 Plug-in type, Non plug-in type • High noise reduction effect: 35 dB or more • Collects oil mist: collecting rate 99.9% or more • Piping work is reduced.
Manifold Option	With control unit (Note)
	 Plug-in type, Non plug-in type • Filter, regulator, pressure switch and air release valve in one unit • Piping work eliminated

Note) There is no option with control unit in Series VFR5000.

5 Port Pilot Operated Solenoid Valve

Rubber Seal, Plug-in/Non Plug-in

Series VFR2000

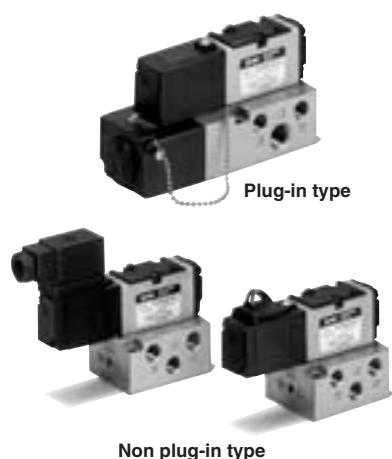

JIS Symbol

2 position	3 position
Single	Closed center
Double	Exhaust center
	Pressure center

Standard Specifications

Valve specifications	Fluid		Air	
	Operating pressure range	2 position single/3 position	0.2 to 0.9 MPa	
		2 position double	0.1 to 0.9 MPa	
	Ambient and fluid temperature		−10 to 50°C (No freezing. Refer to page 5.)	
	Lubrication		Not required ⁽¹⁾	
	Manual override		Non-locking push type	
	Mounting orientation		Unrestricted	
	Shock/Vibration resistance		300/50 m/s ² ⁽²⁾	
Enclosure		Dustproof		
Electricity specifications	Coil rated voltage		100, 200 VAC (50/60 Hz), 24 VDC	
	Allowable voltage fluctuation		−15 to −10% of rated voltage	
	Apparent power (AC) ⁽³⁾	Inrush	5.6 VA/50 Hz, 5.0 VA/60 Hz	
		Holding	3.4 VA (2.1 W)/50 Hz, 2.3 VA (1.5 W)/60 Hz	
	Power consumption (DC) ⁽³⁾		1.8 W	
	Electrical entry	Plug-in type	Conduit terminal	
		Non plug-in type	Grommet, Grommet terminal Conduit terminal, DIN terminal L plug connector, M plug connector	



Note 1) Use turbine oil Class 1 (ISO VG32), if lubricated.

Note 3) At rated voltage

Note 2) Impact resistance: No malfunction occurred when it is tested with a drop tester in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition. (Values at the initial period)

Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was performed at both energized and de-energized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)

Option Specifications

Pilot type	External pilot ^{Note)}
Manual override	Non-locking push type A (Extended), Locking type B (Tool required), Looking type C (Lever)
Coil rated voltage	110 to 120, 220, 240 VAC 50/60 Hz 12 VDC
Porting specifications	Bottom ported
Option	With light/surge voltage suppressor



Note) Operating pressure: 0 to 0.9 MPa

Pilot pressure: 2 position single/3 position 0.2 to 0.9 MPa

2 position double 0.1 to 0.9 MPa

Model

Type of actuation		Model		Port size Rc	Flow characteristics ⁽¹⁾						Max. operating cycle ⁽²⁾ (Hz)	Response time ⁽³⁾ (ms)	Mass ⁽⁴⁾ (kg)
		Plug-in	Non plug-in		1 → 4/2 (P → A/B)			4/2 → 5/3 (A/B → EA/EB)					
					C [dm³/(s·bar)]	b	Cv	C [dm³/(s·bar)]	b	Cv			
2 position	Single	VFR2100	VFR2110	1/8	2.5	0.18	0.58	3.0	0.27	0.70	10	20 or less	0.34 (0.32)
				1/4	2.8	0.24	0.62	3.0	0.27	0.70			
	Double	VFR2200	VFR2210	1/8	2.4	0.21	0.56	3.1	0.28	0.74	10	20 or less	0.42 (0.44)
				1/4	2.6	0.27	0.62	3.1	0.28	0.74			
3 position	Closed center	VFR2300	VFR2310	1/8	1.3	0.45	0.36	1.4	0.46	0.41	5	30 or less	0.43 (0.45)
				1/4	1.3	0.45	0.36	1.4	0.46	0.41			
	Exhaust center	VFR2400	VFR2410	1/8	0.79	0.53	0.24	3.1 [0.89]	0.24 [0.51]	0.74 [0.27]	5	30 or less	0.43 (0.45)
				1/4	0.79	0.53	0.24	3.1 [0.89]	0.24 [0.51]	0.74 [0.27]			
	Pressure center	VFR2500	VFR2510	1/8	2.8 [0.65]	0.24 [0.60]	0.68 [0.21]	0.89	0.53	0.27	5	30 or less	0.43 (0.45)
				1/4	3.2 [0.75]	0.26 [0.55]	0.73 [0.23]	0.89	0.53	0.27			



Note 1) [] : Denotes the normal position.

Note 2) Min. operating frequency is once in 30 days.

Note 3) Based on dynamic performance test, JIS B 8375-1981. (0.5 MPa, Coil temperature: 20°C, at rated voltage, without surge voltage suppressor)

Note 4) For VFR2□00-□FZ-⁰¹/₀₂, (): VFR2□10-□DZ-⁰¹/₀₂

5 Port Pilot Operated Solenoid Valve Rubber Seal, Plug-in/Non Plug-in *Series VFR2000*


How to Order



Plug-in

Electrical entry

F: Plug-in type

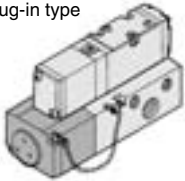

Option

Nil	None
Z	With light/surge voltage suppressor

Piping (P, A, B, EA, EB port)

Nil	Side ported
B *	Bottom ported

* Option

Port size (P, A, B port)

Nil	Without sub-plate
01	1/8
02	1/4

EA, EB port: Rc 1/8

Thread type

Nil	Rc
F	G
N	NPT
T	NPTF

CE-compliant

Nil	—
Q	CE-compliant *

* Electrical entry: D/DO, Y/YO and F only

Pilot valve manual override

Nil: Non-locking push type	A*: Non-locking push type A (Extended)	B*: Locking type B (Tool required)	C*: Locking type C (Lever)
----------------------------	--	------------------------------------	----------------------------



* Option


Option

Nil	None
Z	With light/surge voltage suppressor
S *	With surge voltage suppressor

* Indicator light is not available for grommet type.
With surge voltage suppressor is available for grommet type only.


Electrical entry

G: Grommet	E: Grommet terminal	T: Conduit terminal	D, Y: DIN terminal
------------	---------------------	---------------------	--------------------

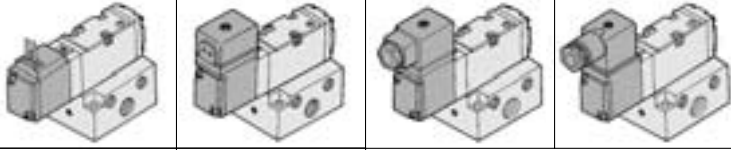


L: L plug connector

M: M plug connector

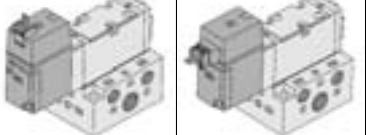

Symbol

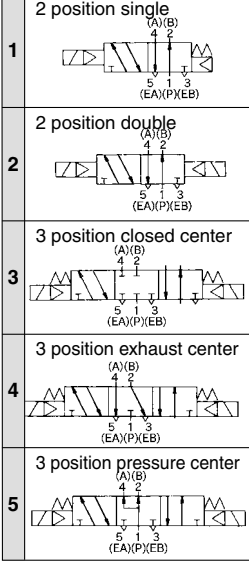

Pilot type

Nil	Internal pilot
R *	External pilot

* Option (External pilot is available only on sub-plate type.)

Coil rated voltage

1	100 VAC, 50/60 Hz
2	200 VAC, 50/60 Hz
3 *	110 to 120 VAC, 50/60 Hz
4 *	220 VAC, 50/60 Hz
5	24 VDC
6 *	12 VDC
7 *	240 VAC, 50/60 Hz (Note)
9 *	Other

* Option
Note) L and M plug connectors: Max. 220 VAC

SJ
SY
SV
SYJ
SZ
VP4
S0700
VQ
VQ4
VQ5
VQC
VQZ
SQ
VFS
VFR
VQ7

How to Order Pilot Valve Assembly

SF4-1 DZ -60 -

Manual override

Nil	Non-locking push type
A *	Non-locking push type A (Extended)
B *	Locking type B (Tool required)
C *	Locking type C (Lever)

* Option

CE-compliant

Nil	—
Q	CE-compliant *

* Electrical entry: D/DO, Y/YO and F only

Coil rated voltage

1	100 VAC, 50/60 Hz
2	200 VAC, 50/60 Hz
3 *	110 to 120 VAC, 50/60 Hz
4 *	220 VAC, 50/60 Hz
5	24 VDC
6 *	12 VDC
7 *	240 VAC, 50/60 Hz (Note)
9 *	Other

* Option

Note) L and M plug connectors:
Max. 220 VAC

Electrical entry, Light/Surge voltage suppressor


Symbol	Electrical entry	Indicator light	With surge voltage suppressor	Body type
F	Plug-in	—	—	Plug-in type
G	Grommet	—	—	Non plug-in type
GS		—	●	
D	DIN terminal	With connector	—	
DZ		Without connector	—	
DO	DIN terminal (DIN43650B)	With connector	—	
DOZ		Without connector	—	
Y	DIN terminal (DIN43650B)	With connector	—	
YZ		Without connector	—	
YO	DIN terminal (DIN43650B)	With connector	—	
YOZ		Without connector	—	

Symbol	Electrical entry	Indicator light	With surge voltage suppressor	Body type
T	Conduit terminal	—	—	Non plug-in type
TZ		●	●	
E	Grommet terminal	—	—	
EZ		●	●	
L	L plug connector	—	—	
LZ		●	●	
LO	L plug connector (Without connector)	—	—	
LOZ		●	●	
M	M plug connector	—	—	
MZ		●	●	
MO	M plug connector (Without connector)	—	—	
MOZ		●	●	

Series VFR2000

Use as a guide for selection.
Please confirm the actual conditions with SMC
Sizing Program.

Cylinder Speed Chart

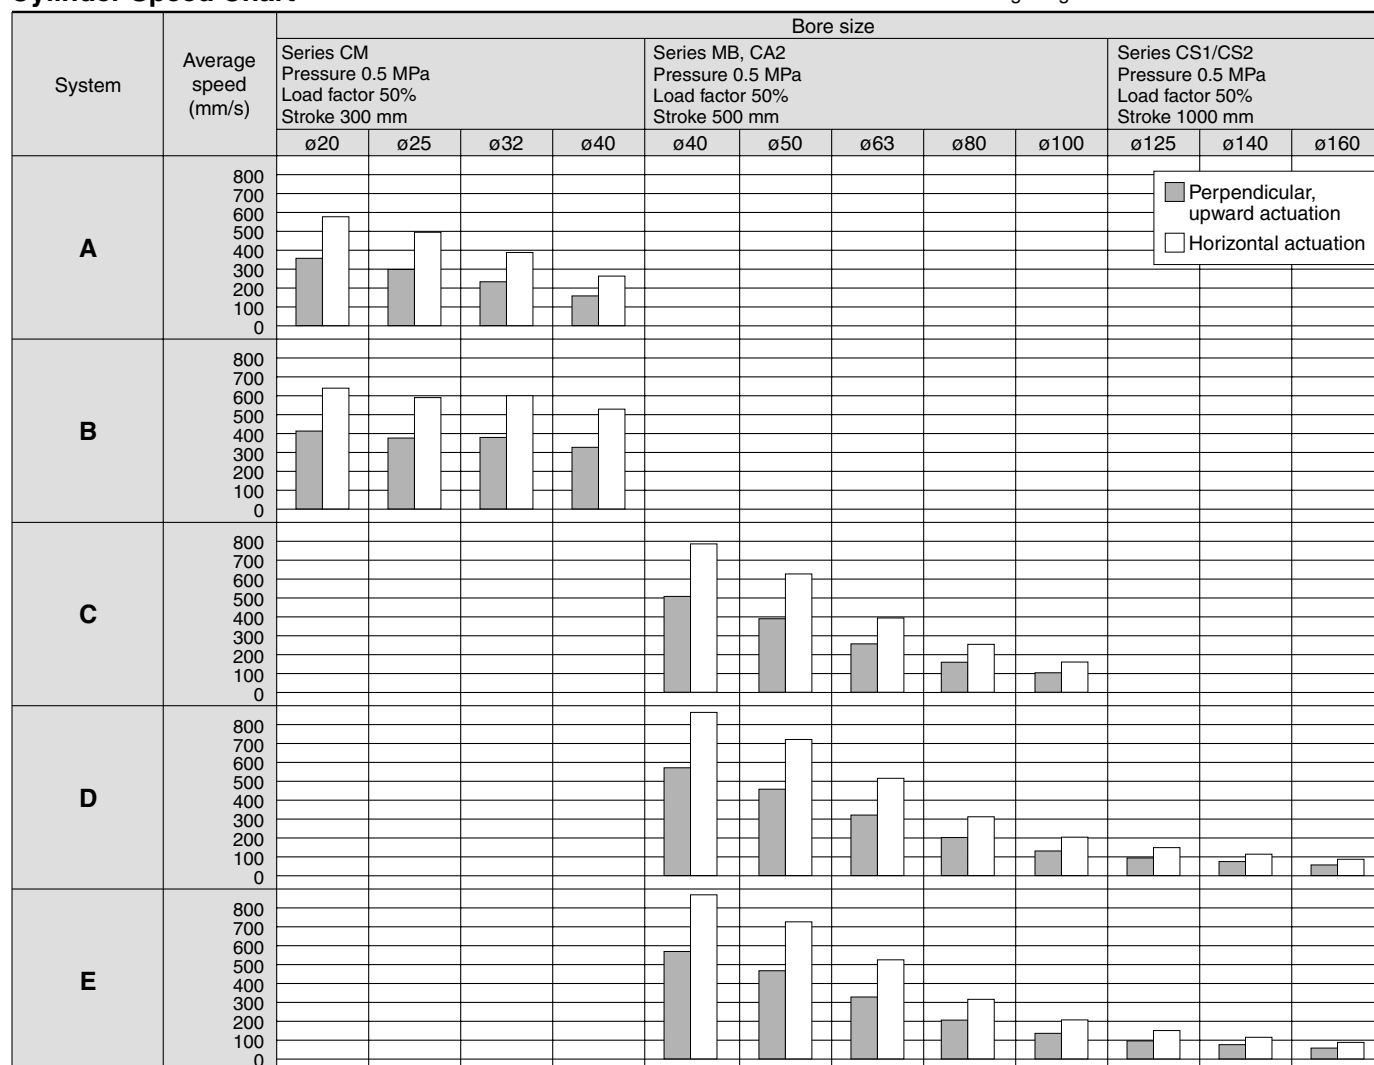


-  * It is when the cylinder is extending that is meter-out controlled by speed controller which is directly connected with cylinder, and its needle valve with being fully open.
- * The average velocity of the cylinder is what the stroke is divided by the total stroke time.
- * Load factor: ((Load weight x 9.8)/Theoretical force) x 100%


System Components

System	Solenoid valve	Speed controller	Silencer	Tube bore x Length
A	Series VFR2000 Rc 1/8	AS2000-01 (S = 2.5 mm ²)	AN110-01 (S = 35 mm ²)	T0425 x 1 m
B		AS3000-02 (S = 12 mm ²)	AN110-01 (S = 35 mm ²)	T0604 x 1 m
C		AS3000-02 (S = 12 mm ²)	AN110-01 (S = 35 mm ²)	T0806 x 1 m
D	Series VFR2000 Rc 1/4	AS4000-02 (S = 21 mm ²)	AN110-01 (S = 35 mm ²)	T1075 x 1 m
E		AS4000-02 (S = 21 mm ²)	AN110-01 (S = 35 mm ²)	T1209 x 1 m

How to Order Sub-plate Assembly

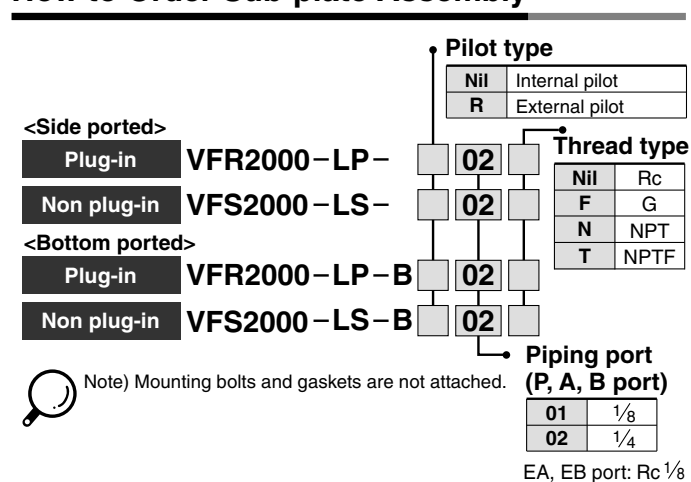

Construction

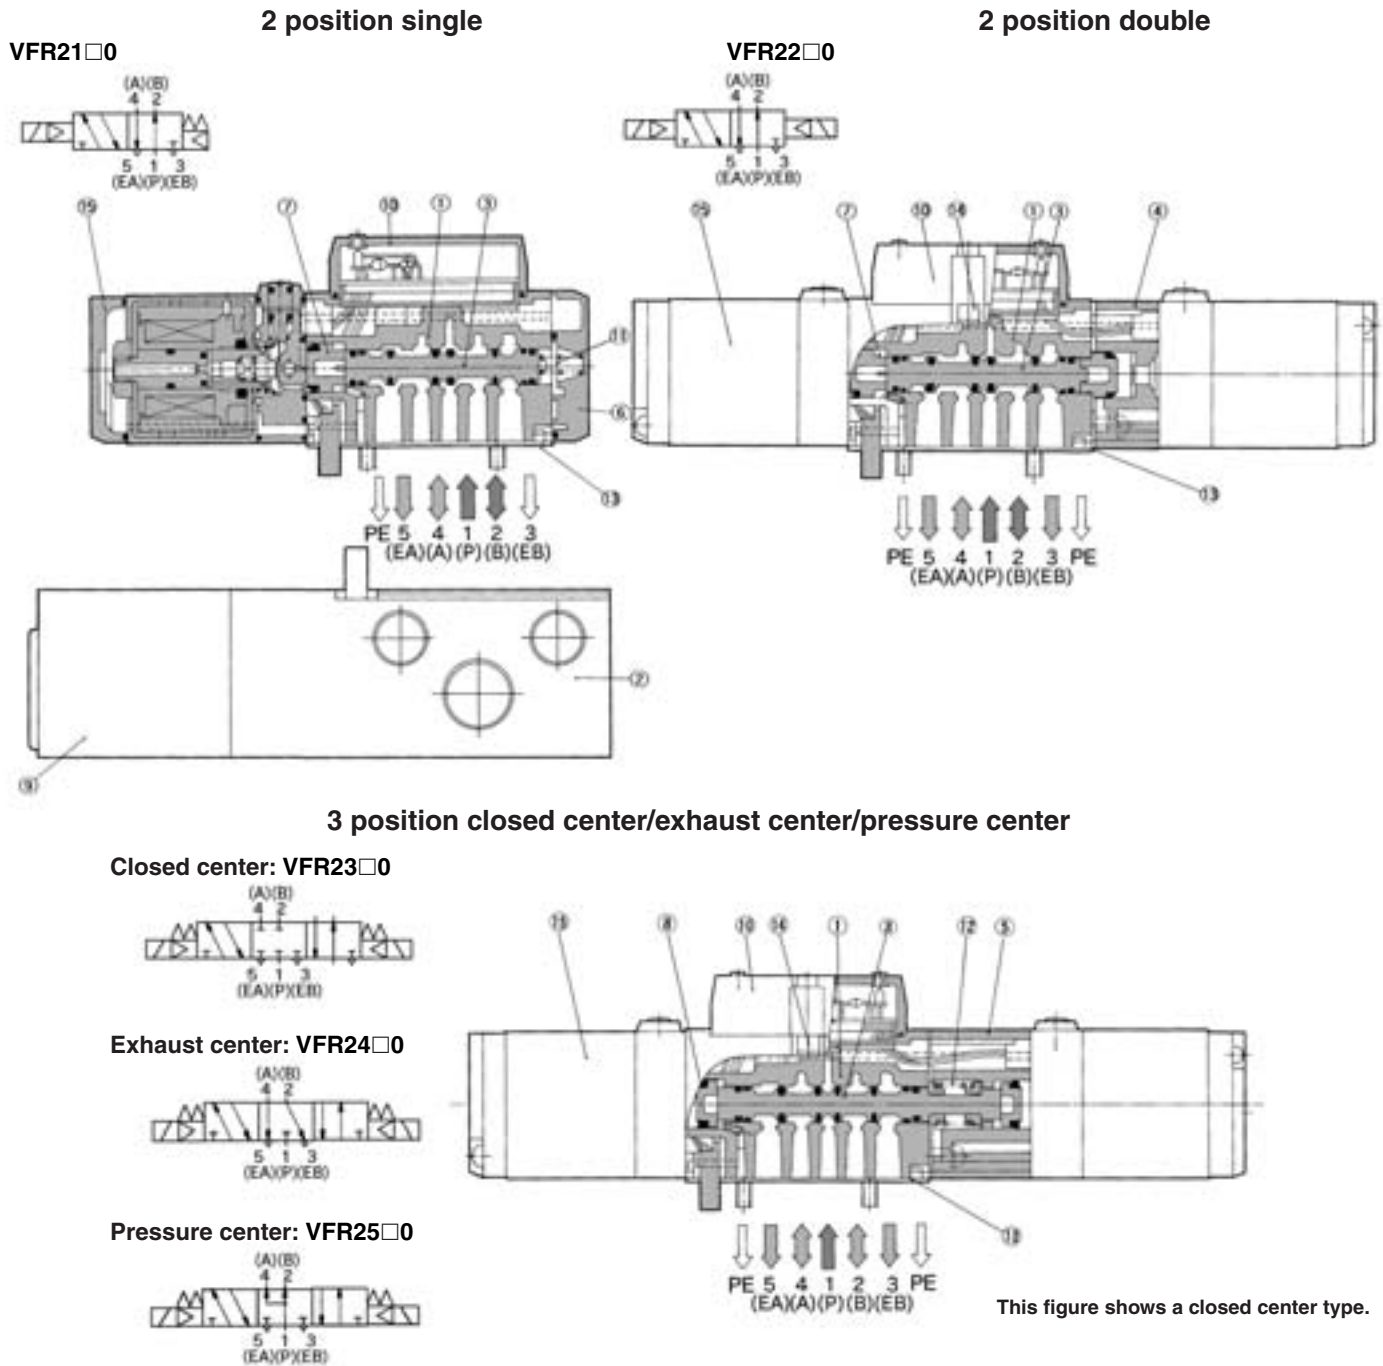

Component Parts

No.	Description	Material	Note
1	Body	Aluminum die-casted	Platinum silver
2	Sub-plate	Aluminum die-casted	Platinum silver
3	Spool valve	Aluminum, NBR	
4	Adapter plate	Aluminum die-casted	Platinum silver
5	Adapter plate	Aluminum die-casted	Platinum silver
6	End plate	Resin	Black

Component Parts

No.	Description	Material	Note
7	Piston	Resin	
8	Piston	Resin	
9	Junction cover	Resin	
10	Light cover assembly	Resin	
11	Spool spring	Stainless steel	
12	Return spring	Stainless steel	


Replacement Parts

No.	Description	Material	Part no.		
			VFR21□0	VFR22□0	VFR23□0/24□0/25□0
13	Gasket	NBR	AXT624-20-2	AXT624-20-2	AXT624-20-2
14	Hexagon socket head screw	Steel	AXT624-26 (M3 x 31)	AXT624-26 (M3 x 31)	AXT624-26 (M3 x 31)
15	Pilot valve assembly	—	Refer to "How to Order Pilot Valve Assembly" on page 1233.		
—	Sub-plate assembly	—	Refer to "How to Order Sub-plate Assembly" on page 1234.		

Series VFR2000


Plug-in: 2 Position Single/Double, 3 Position Closed Center/Exhaust Center/Pressure Center

2 position single: VFR2100-□F-⁰¹₀₂

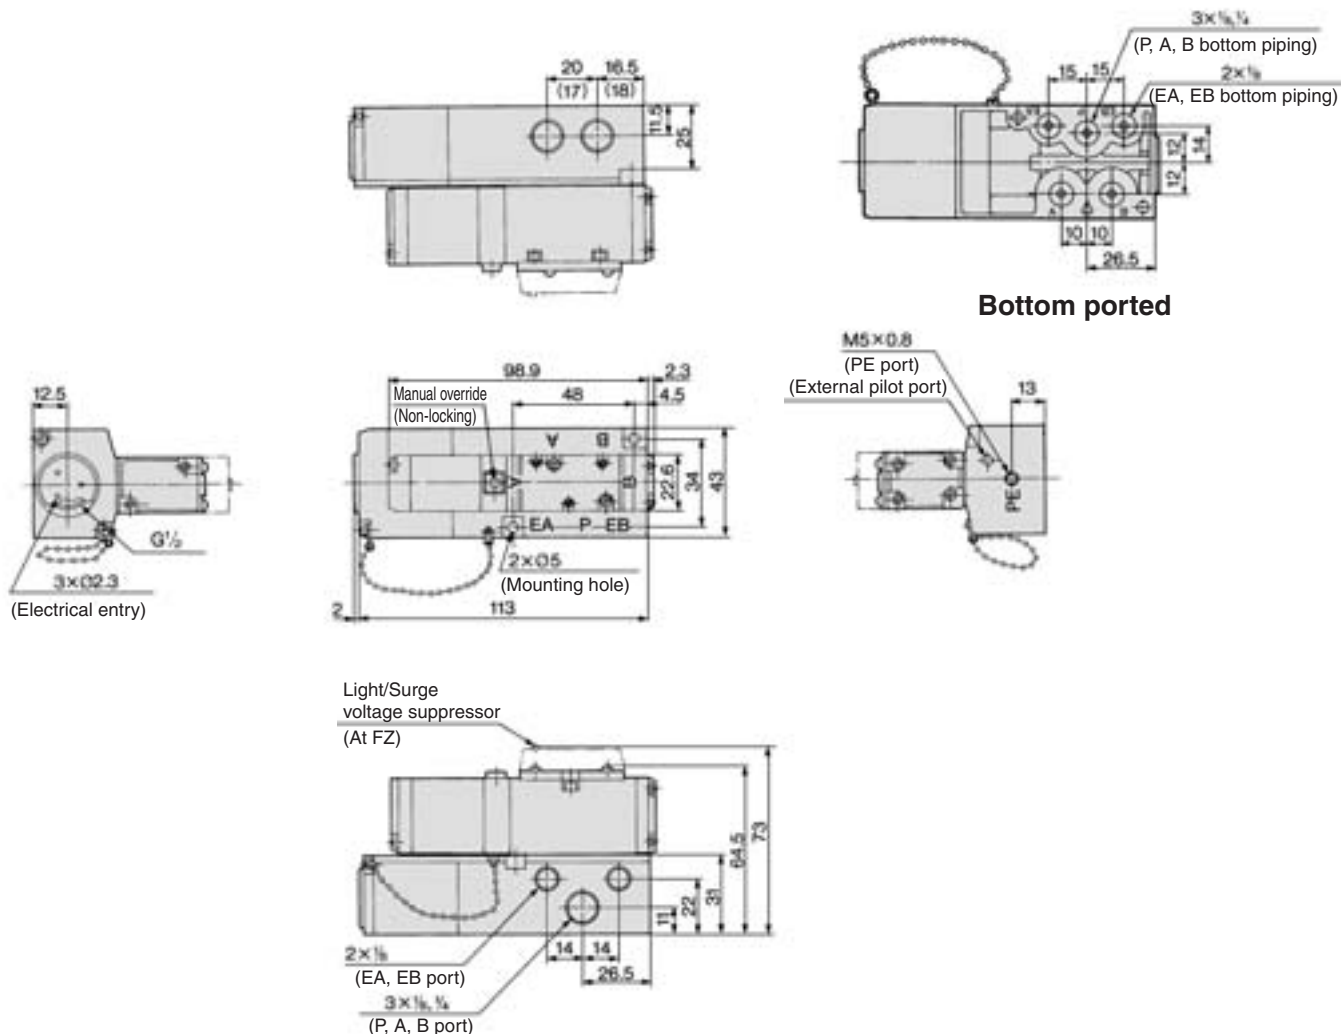


() : Rc 1/8

2 position double: VFR2200-□F-⁰¹₀₂

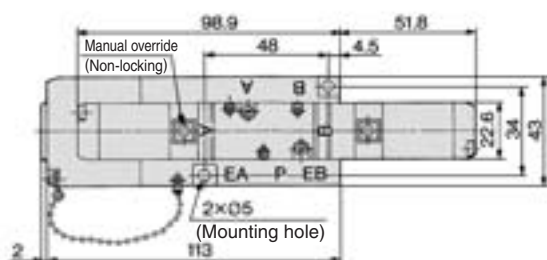

* Other dimensions are the same as the single type.

3 position closed center: VFR2300-□F-⁰¹₀₂
 3 position exhaust center: VFR2400-□F-⁰¹₀₂
 3 position pressure center: VFR2500-□F-⁰¹₀₂

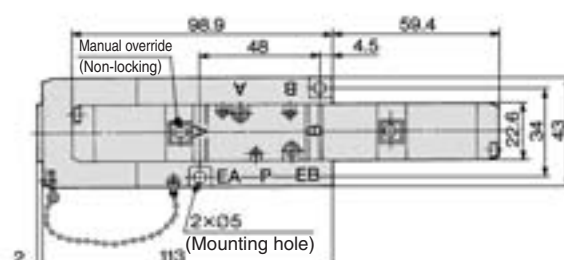


* Other dimensions are the same as the single type.

5 Port Pilot Operated Solenoid Valve Rubber Seal, Plug-in/Non Plug-in **Series VFR2000**


Non Plug-in: 2 Position Single

Grommet: VFR2110-□G-⁰¹₀₂

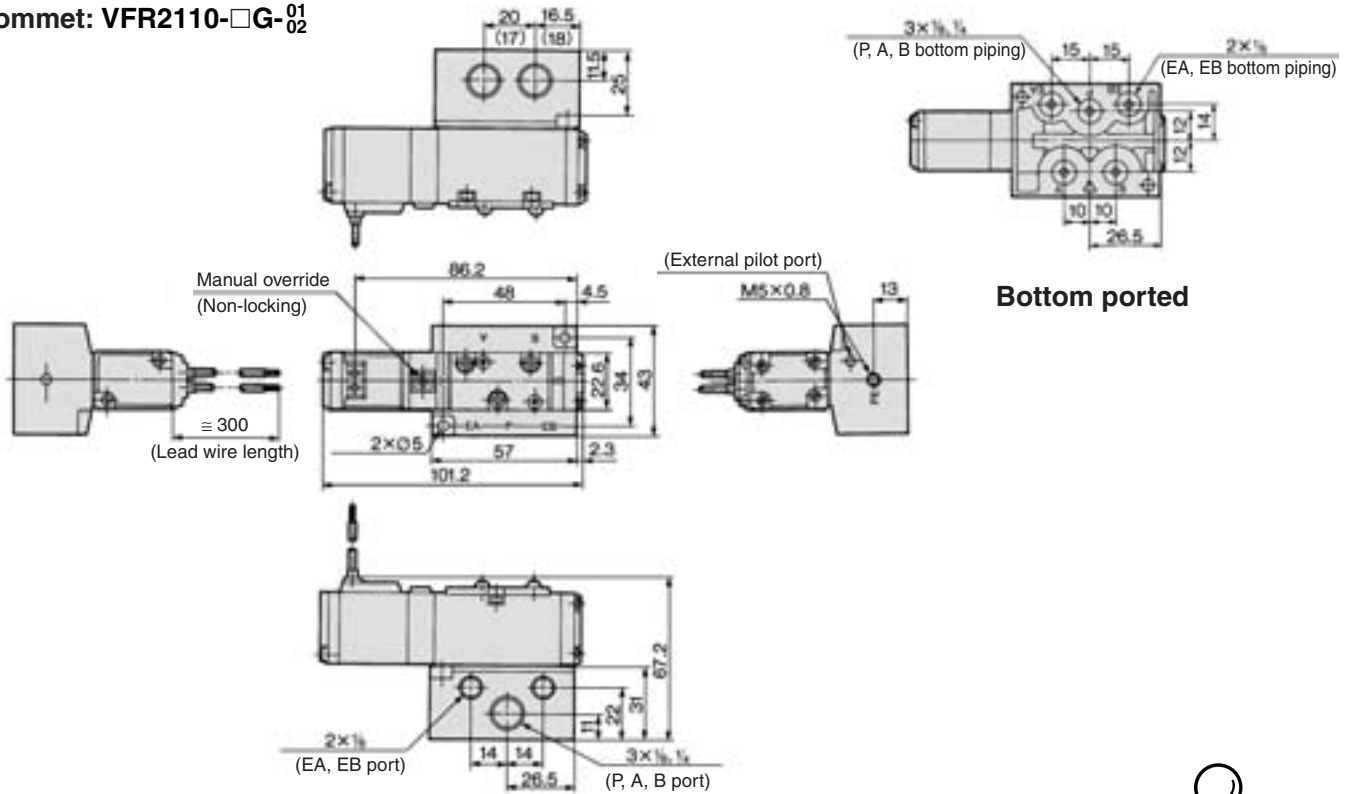


() : Rc 1/8

Grommet terminal: VFR2110-□E-⁰¹₀₂

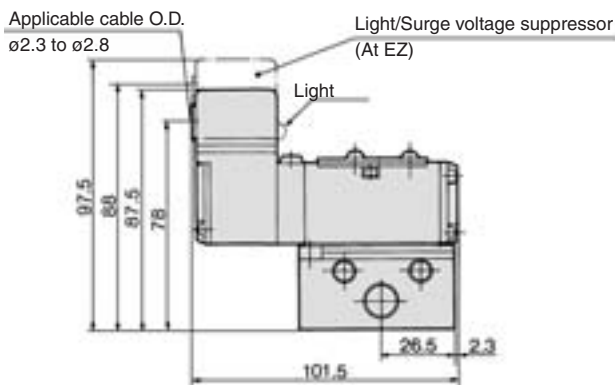


* Other dimensions are the same as the grommet type.

Conduit terminal: VFR2110-□T-⁰¹₀₂

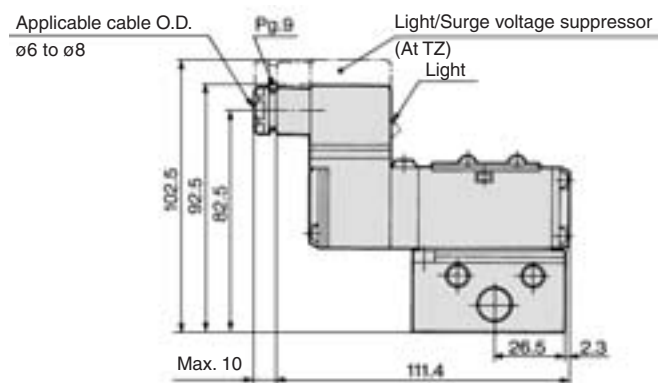


* Other dimensions are the same as the grommet type.

DIN terminal: VFR2110-□D-⁰¹₀₂

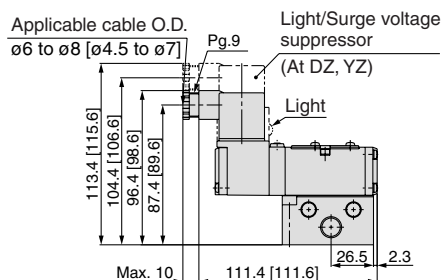


* [] : Type Y
* Other dimensions are the same as the grommet type.

L plug connector: VFR2110-□L-⁰¹₀₂

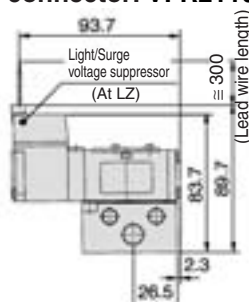

* Other dimensions are the same as the grommet type.

M plug connector: VFR2110-□M-⁰¹₀₂

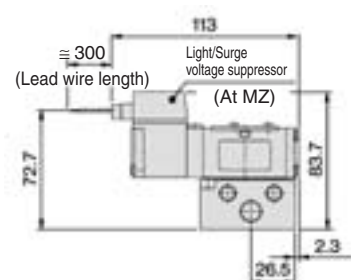


* Other dimensions are the same as the grommet type.

Series VFR2000


Non Plug-in: 2 Position Double

Grommet: VFR2210-□G-⁰¹₀₂

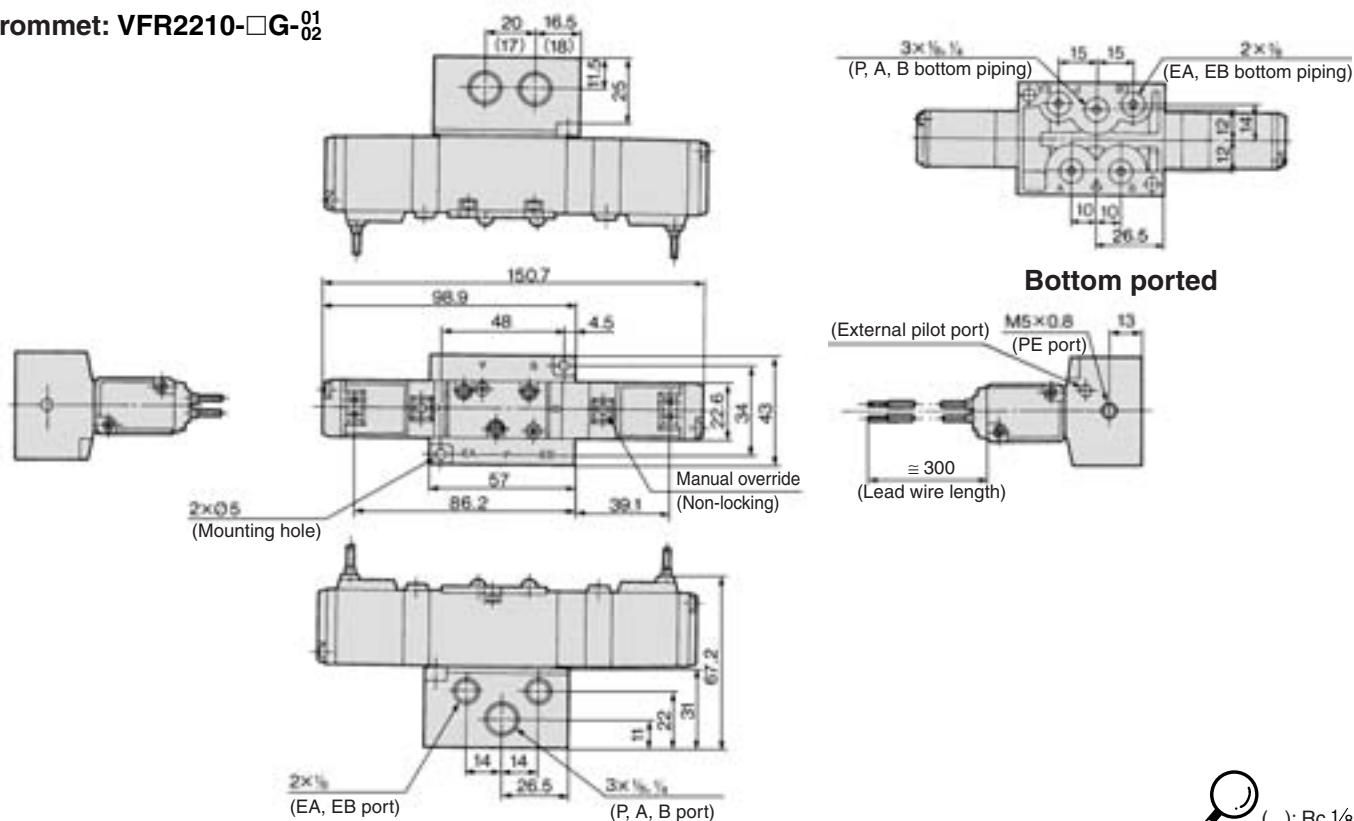


() : Rc 1/8

Grommet terminal: VFR2210-□E-⁰¹₀₂

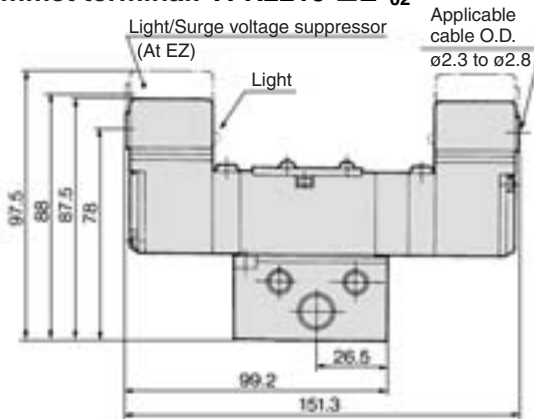


* Other dimensions are the same as the grommet type.

Conduit terminal: VFR2210-□T-⁰¹₀₂

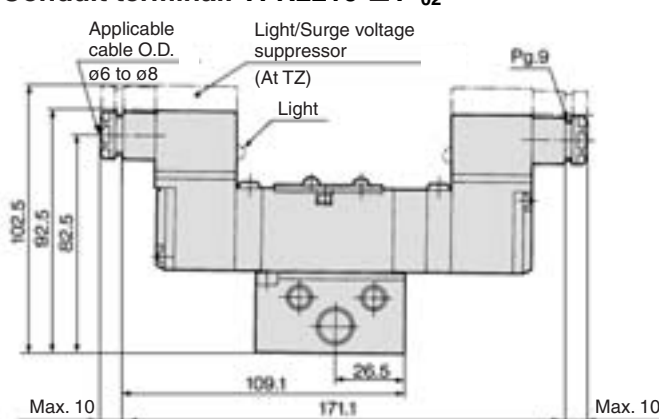


* Other dimensions are the same as the grommet type.

DIN terminal: VFR2210-□D-⁰¹₀₂

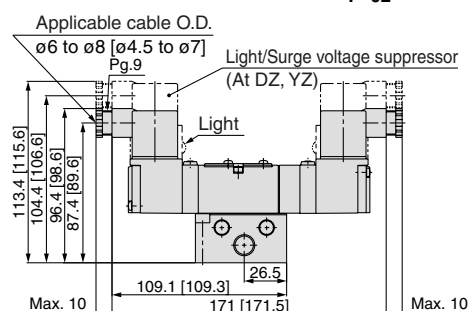


* [] : Type Y
* Other dimensions are the same as the grommet type.

L plug connector: VFR2210-□L-⁰¹₀₂

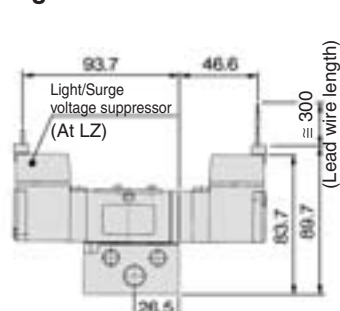

* Other dimensions are the same as the grommet type.

M plug connector: VFR2210-□M-⁰¹₀₂

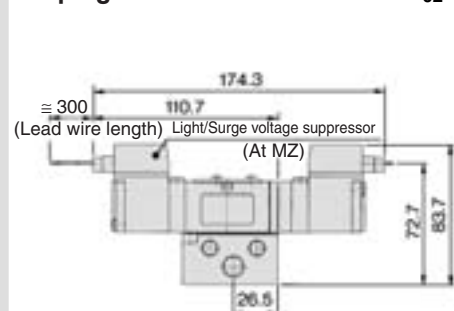

* Other dimensions are the same as the grommet type.

Series VFR2000 Manifold Specifications

Manifold Specifications

Base model	Wiring	Porting specifications	Port size		Stations	Applicable valve model
		A, B port	P, EA, EB	A, B		
Plug-in type VV5FR2-01□(-Q)	• With terminal block	Side/Bottom (Note)	1/4	1/8, 1/4 C6, C8	2 to 15	VFR2□00-□F(-Q)
	• With multi-connector				2 to 8	
Non plug-in type VV5FR2-10(-Q)	• Grommet • Grommet terminal • Conduit terminal • DIN terminal • L plug connector • M plug connector				2 to 15	VFR2 10-□G VFR2□10-□E VFR2□10-□T VFR2□10-□D(-Q) VFR2□10-□L VFR2□10-□M

 Note) Side ported and bottom ported cannot be taken at the same time.

How to Order Manifold Assembly

<Example> Plug-in type with terminal block (6 stations, one-piece junction cover)

VV5FR2-01T1-061-02 1 set (Manifold base part no.)
 *VFR2100-5FZ 3 sets (2 position single part no.)
 *VFR2200-5FZ 2 sets (2 position double part no.)
 *VVFS2000-10A 1 set (Blanking plate assembly part no.)
 ↳ The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

Valve arrangement is counted from the D side.
 When ordering, specify the part nos. in order from the 1st. station in the D side.
 When entry of part numbers becomes complicated, indicate on the manifold specification sheet.


<Example> Non plug-in type: 6 stations

VV5FR2-10-061-01 1 set (Manifold base part no.)
 *VFR2110-5D 5 sets (2 position single part no.)
 *VFR2410-5D 1 set (3 position exhaust part no.)
 *VVFS2000-R-01-2 1 set (Individual EXH spacer part no.)
 ↳ The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

Valve arrangement is counted from the D side.
 When ordering, specify the part nos. in order from the 1st. station in the D side.
 When entry of part numbers becomes complicated, indicate on the manifold specification sheet.

Plug-in Type: With Terminal Block

- Since lead wires of solenoid valve are connected with the terminals on upper surface of terminal block corresponding lead wires from power source can be wired at the bottom of terminal block.

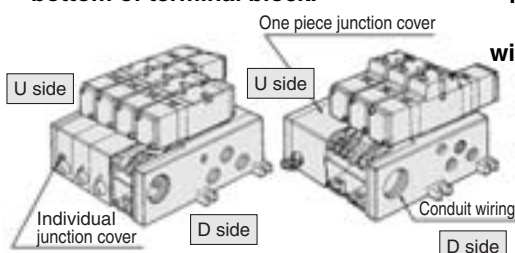

 Note) P port or EA/EB port of symbol "3" to "8" can be individual port with block plate. Therefore, if using individual SUP spacer or individual EXH spacer for individual port, its symbol is "1".

VV5FR2-01T 1-08 1-02

Series VFR2000 Manifold

Plug-in type with terminal block

Junction cover

Nil	Individual junction cover
1	One-piece junction cover

Stations

02	2 stations
15	15 stations

Symbol

Symbol	Passage	Porting specification
	P, EA, EB	A, B
1	Common	Side
2 *	Common	Bottom
3 *	Common	Side
4 *	Common	Bottom
5 *	Individual	Side
6 *	Common	Bottom
7 *	Individual	Side
8 *	Individual	Bottom

* Option
When an individual passage is used, P, EA and EB ports will be bottom ported.

Port size

Symbol	P, EA, EB *	A, B *
01	1/4	1/8
02		1/4
C6		One-touch fitting for ø6
C8		One-touch fitting for ø8
M		Mixed

* For bottom ported, 1/8 is only available.

CE-compliant


Nil	—
Q	CE-compliant

Thread type

Nil	Rc
F	G
N	NPT
T	NPTF

Plug-in Type: With Multi-connector (For wiring specifications, refer to page 1326.)

- Master connection of power and solenoid valves.
- Quick wiring permits ease of installation.

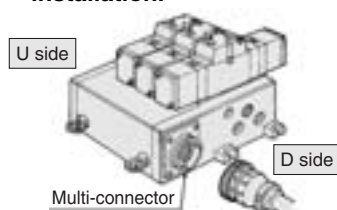

 Note) P port or EA/EB port of symbol "3" to "8" can be individual port with block plate. Therefore, if using individual SUP spacer or individual EXH spacer for individual port, its symbol is "1".

VV5FR2-01C D 1-05 1-01

Series VFR2000 Manifold

Plug-in type with multi-connector

Connector mounting direction

D	D side mounting
U	U side mounting

Junction cover

1	One-piece junction cover
---	--------------------------

Stations

02	2 stations
08	8 stations

* Max. 8 stations

Symbol

Symbol	Passage	Porting specification
	P, EA, EB	A, B
1	Common	Side
2 *	Common	Bottom
3 *	Common	Side
4 *	Common	Bottom
5 *	Individual	Side
6 *	Common	Bottom
7 *	Individual	Side
8 *	Individual	Bottom

* Option
When an individual passage is used, P, EA and EB ports will be bottom ported.

Port size

Symbol	P, EA, EB *	A, B *
01	1/4	1/8
02		1/4
C6		One-touch fitting for ø6
C8		One-touch fitting for ø8
M		Mixed

* For bottom ported, 1/8 is only available.

CE-compliant

Nil	—
Q	CE-compliant


Thread type

Nil	Rc
F	G
N	NPT
T	NPTF

5 Port Pilot Operated Solenoid Valve Rubber Seal, Plug-in/Non Plug-in *Series VFR2000*

Plug-in Type: With D-sub Connector (For wiring specifications, refer to page 1326.)

- Wide range of interchangeability (D-sub connector (25P) conforming to MIL standard)
- Quick wiring permits easier installation.

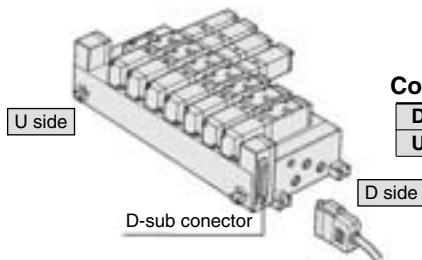

VV5FR2 - 01F U 1 - 06 1 - 01

Series VFR2000 Manifold

Plug-in type with D-sub connector

Connector mounting direction

D D side mounting
U U side mounting

Junction cover

1 One-piece junction cover

Stations

02 2 stations
...
08 8 stations

* Max. 8 stations

Symbol

Symbol	Passage	Porting specification A, B
1	Common	Common
2 *	Common	Bottom
3 *	Common	Side
4 *	Common	Bottom
5 *	Individual	Common
6 *	Individual	Side
7 *	Individual	Bottom
8 *	Individual	Bottom

* Option
When an individual passage is used, P, EA and EB ports will be bottom ported.

Thread type

Nil	Rc
F	G
N	NPT
T	NPTF

Port size

Symbol	P, EA, EB *	A, B *
01	1/4	1/8
02		1/4
C6		One-touch fitting for ø6
C8		One-touch fitting for ø8
M		Mixed

* For bottom ported, 1/8 is only available.


CE-compliant

Nil	—
Q	CE-compliant

Note) P port or EA/EB port of symbol "3" to "8" can be individual port with block plate.
Therefore, if using individual SUP spacer or individual EXH interface for individual port, its symbol is "1".

Non Plug-in Type: Grommet, Grommet Terminal, Conduit Terminal, DIN Terminal

- Wiring for every valve

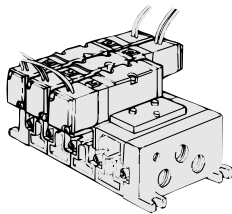

VV5FR2 - 10 - 05 1 - 01

Series VFR2000 Manifold

Non plug-in type

Stations

02 2 stations
...
15 15 stations

Symbol

Symbol	Passage	Porting specification A, B
1	Common	Common
2 *	Common	Bottom
3 *	Common	Side
4 *	Common	Bottom
5 *	Individual	Common
6 *	Individual	Side
7 *	Individual	Bottom
8 *	Individual	Bottom

* Option
When an individual passage is used, P, EA and EB ports will be bottom ported.

Thread type

Nil	Rc
F	G
N	NPT
T	NPTF

Port size

Symbol	P, EA, EB *	A, B *
01	1/4	1/8
02		1/4
C6		One-touch fitting for ø6
C8		One-touch fitting for ø8
M		Mixed

* For bottom ported, 1/8 is only available.

CE-compliant

Nil	—
Q	CE-compliant


Note) P port or EA/EB port of symbol "3" to "8" can be individual port with block plate.
Therefore, if using individual SUP spacer or individual EXH spacer for individual port, its symbol is "1".

Manifold/Option Parts Assembly

Individual SUP spacer

Setting individual SUP spacer on the manifold block enables individual SUP port for each valve.


Body type		Plug-in type	Non plug-in type
Part no.	Rc 1/8	VVFS2000-P-01-1	VVFS2000-P-01-2
	Rc 1/4	VVFS2000-P-02-1	VVFS2000-P-02-2



Individual EXH spacer

Setting individual EXH spacer on the manifold block enables individual EXH port for each valve.

Body type		Plug-in type	Non plug-in type
Part no.	Rc 1/8	VVFS2000-R-01-1	VVFS2000-R-01-2
	Rc 1/4	VVFS2000-R-02-1	VVFS2000-R-02-2

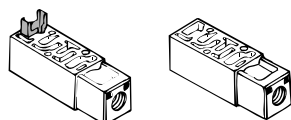

SUP block disk

When supplying manifold with more than two different kinds of pressure, high and low, insert a block disk in between stations subjected to different pressures.

Body type	Plug-in type	Non plug-in type
Part no.		AXT625-12A

EXH block disk

When valve exhaust affects the other stations in the circuit, insert EXH block disk in between stations to separate valve exhaust.


Body type	Plug-in type	Non plug-in type
Part no.		AXT625-12A



Throttle valve spacer

Needle valve set on the manifold block can control cylinder speed by throttling exhaust.

Body type	Plug-in type	Non plug-in type
Part no.	VVFS2000-20A-1	VVFS2000-20A-2

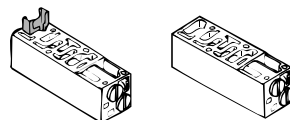


Interface regulator



Interface regulator set on the manifold block can regulate pressure for each valve. (Refer to "Flow Characteristics" on page 1324 before operation.)

Body type	Plug-in type	Non plug-in type
P port regulation	ARBF2000-00-P-1	ARBF2000-00-P-2

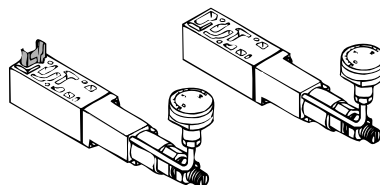


Air release valve spacer

Valve VFR21□0 (single) can be used as air release valve by combining with release valve spacer.

Body type	Plug-in type	Non plug-in type
Part no.	VVFS2000-24A-1 _L	VVFS2000-24A-2 _R



(Note) L: U side mount R: D side mount

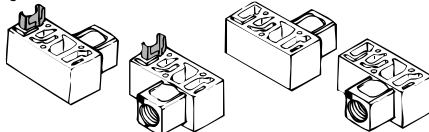

SUP stop valve spacer (Note)

If SUP stop valve spacer is set, valve can be removed for maintenance without stopping air pressure supply for other valves.

Body type	Plug-in type	Non plug-in type
Part no.	VVFS2000-37A-1	VVFS2000-37A-2

(Height will be 23.2 mm higher.)



(Note) Used with manifold base.

Please contact SMC for details.

Blanking plate

It is used by attaching on the manifold block for being prepared for removing a valve for maintenance reasons or planning to mount a spare valve, etc.


Body type	Plug-in type	Non plug-in type
Part no.		VVFS2000-10A

Manifold Option

With control unit

Plug-in/Non Plug-in type

- Filter, regulation valve, pressure switch and air release valve all combine to form one unit.
- Piping processes are eliminated.

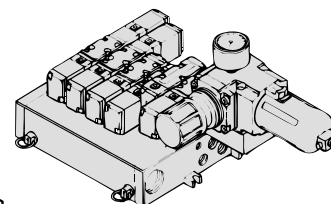


For details, refer to page 1247.

5 Port Pilot Operated Solenoid Valve Rubber Seal, Plug-in/Non Plug-in *Series VFR2000*


Manifold/Plug-in Type

With terminal block (Individual junction cover): VV5FR2-01T-Station 1-Port size

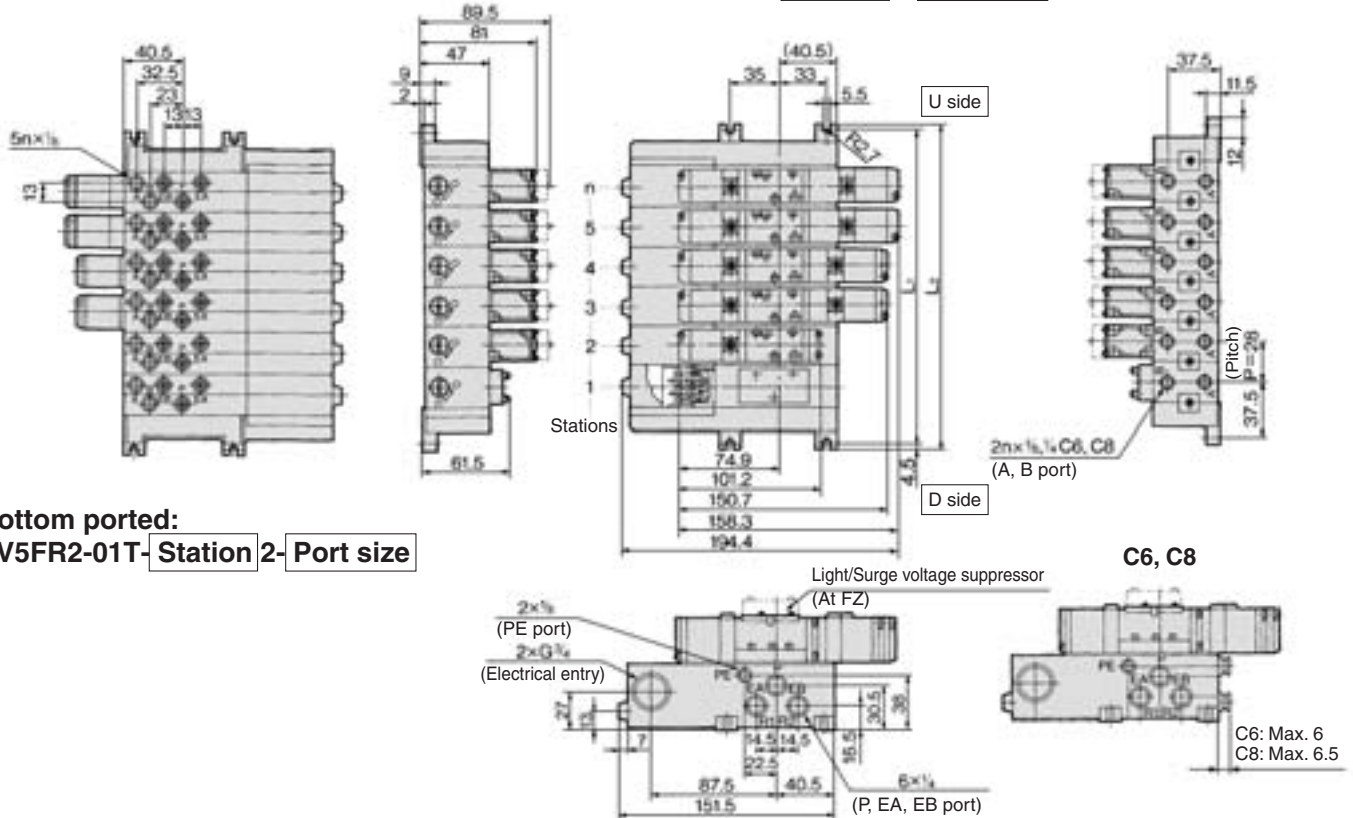

Bottom ported:
VV5FR2-01T-Station 2-Port size

With terminal block (One-piece junction cover): VV5FR2-01T1-Station 1-Port size

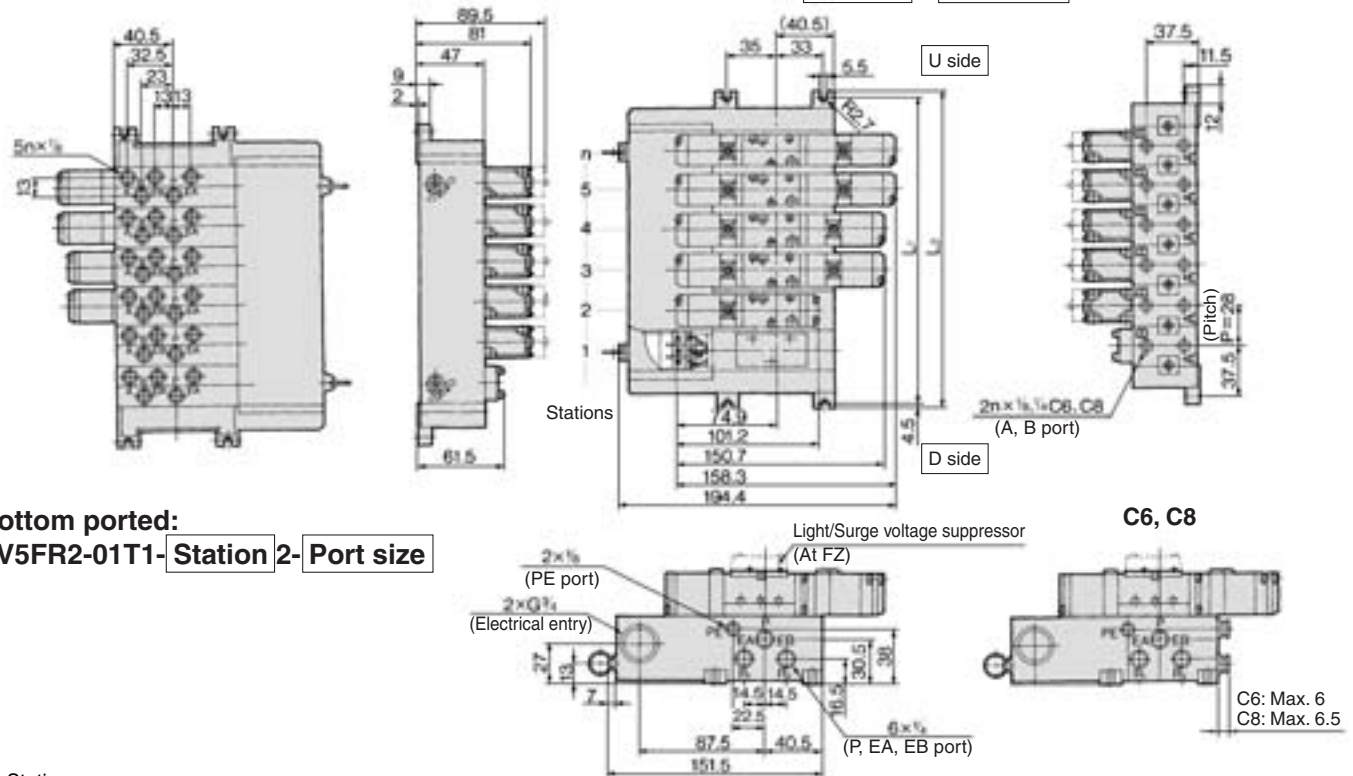


Bottom ported:
VV5FR2-01T1-Station 2-Port size

n: Stations	1	2	3	4	5	6	7	8	9	10	Formula
L ₁	75	103	131	159	187	215	243	271	299	327	L ₁ = 28 x n + 47
L ₂	84	112	140	168	196	224	252	280	308	336	L ₂ = 28 x n + 56

Series VFR2000


Manifold/Plug-in Type

With multi-connector: VV5FR2-01CD1-Station 1-Port size, VV5FR2-01CU1-Station 1-Port size

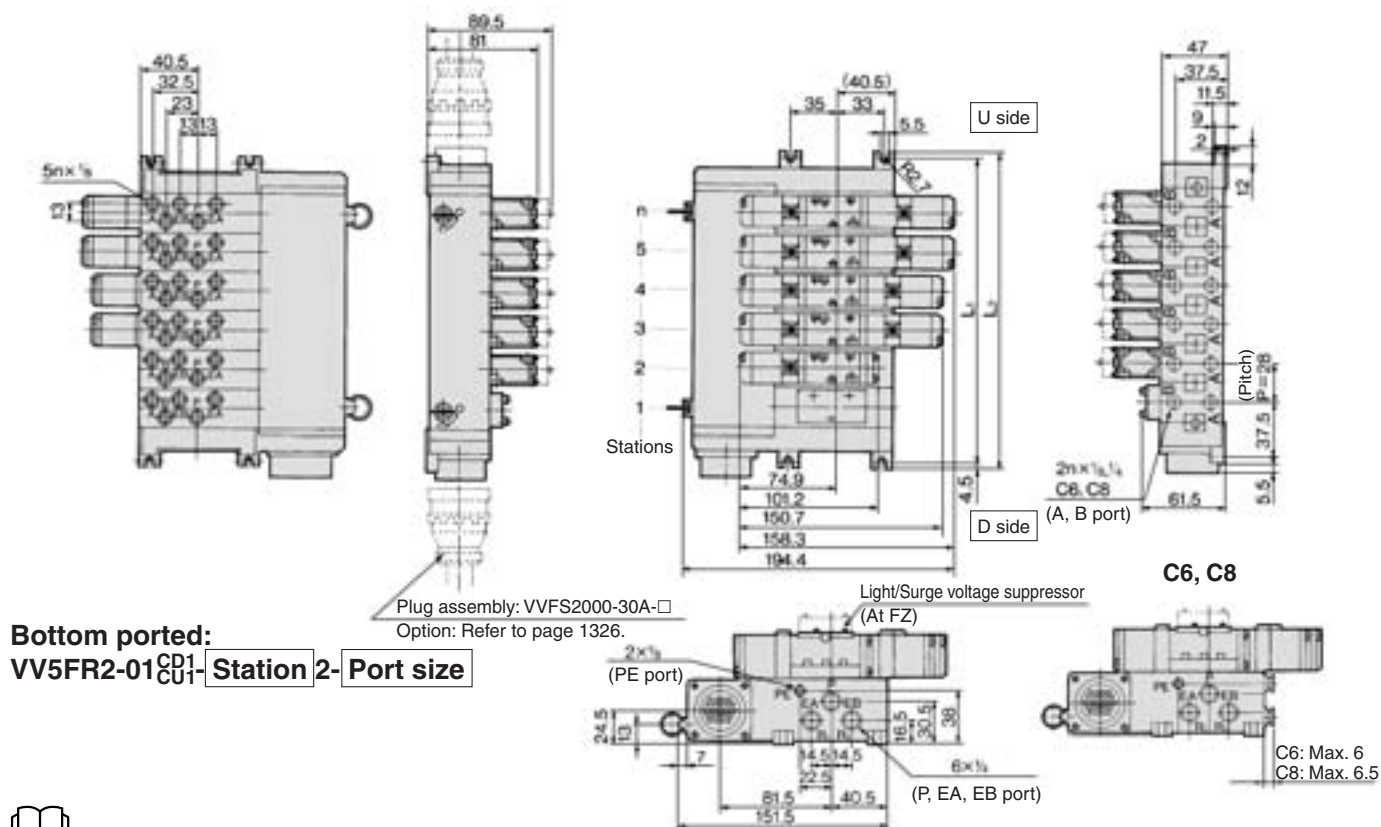

For wiring specifications, refer to page 1326.

With D-sub connector: VV5FR2-01FD1-Station 1-Port size, VV5FR2-01FU1-Station 1-Port size

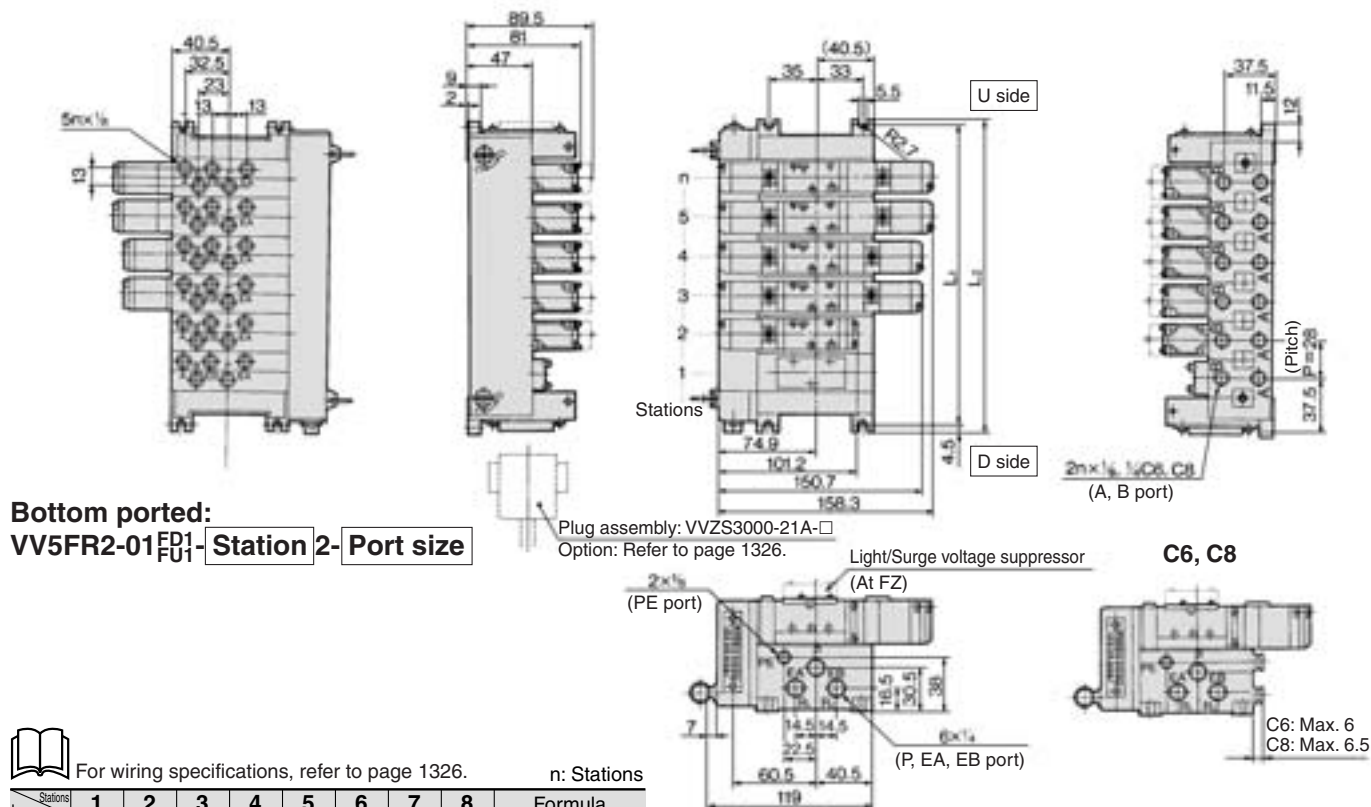

For wiring specifications, refer to page 1326.


n: Stations

Stations	1	2	3	4	5	6	7	8	Formula
L₁	75	103	131	159	187	215	243	271	$L_1 = 28 \times n + 47$
L₂	84	112	140	168	196	224	252	280	$L_2 = 28 \times n + 56$

5 Port Pilot Operated Solenoid Valve Rubber Seal, Plug-in/Non Plug-in *Series VFR2000*


Manifold/Non plug-in type: VV5FR2-10- Station 1- Port size

Grommet: G

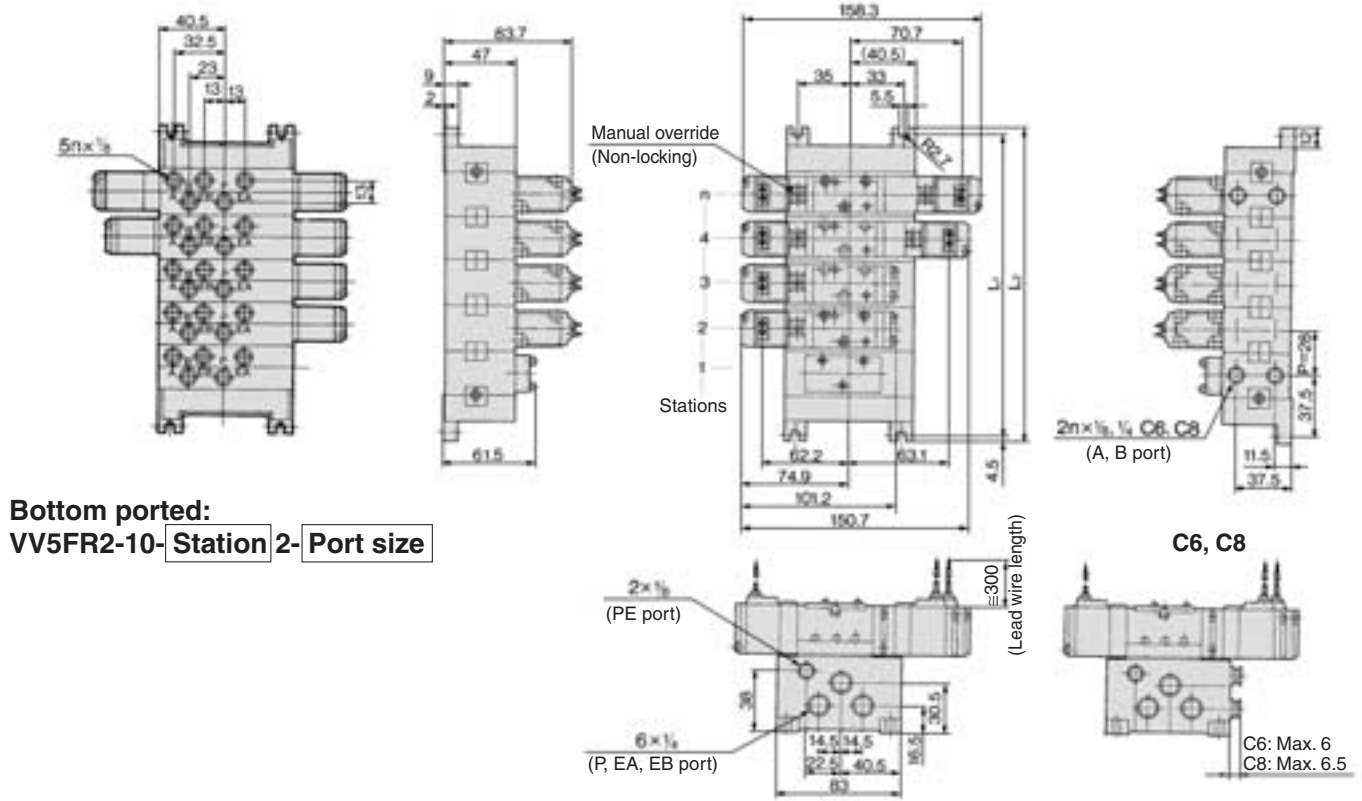


Bottom ported: VV5FR2-10- Station 2- Port size


Grommet terminal: E

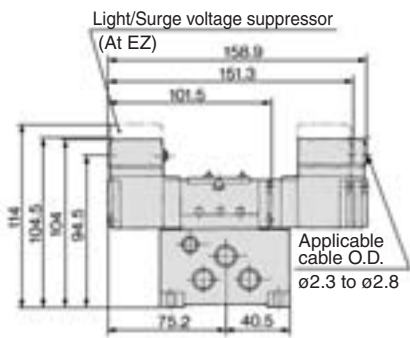


Conduit terminal: T

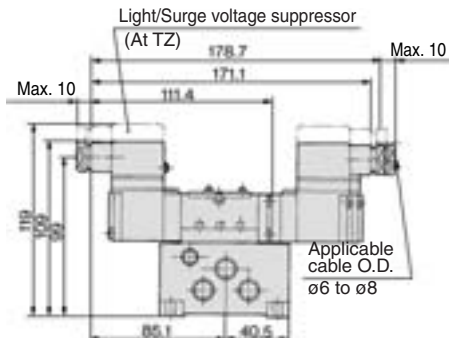


DIN terminal: D, Y

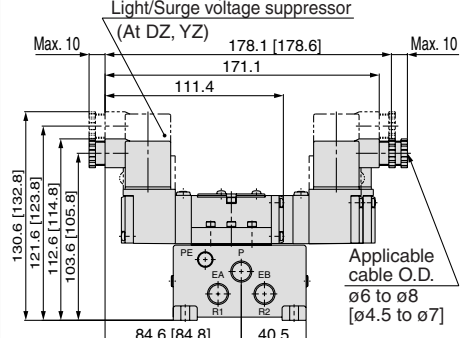

L plug connector: L

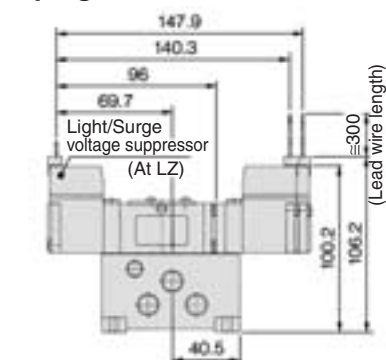

M plug connector: M

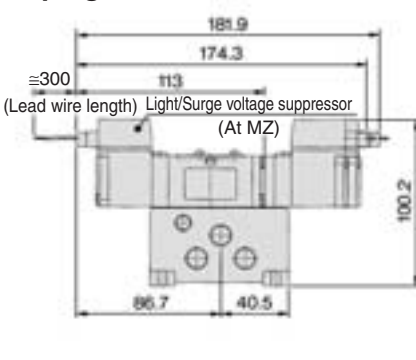

Stations	1	2	3	4	5	6	7	8	9	10	Formula
L ₁	75	103	131	159	187	215	243	271	299	327	L ₁ = 28 x n + 47
L ₂	84	112	140	168	196	224	252	280	308	336	L ₂ = 28 x n + 56


Series VFR2000

Manifold/Option Parts Assembly: Plug-in Type/Non Plug-in Type

Individual SUP spacer:

VVFS2000-P-⁰¹₀₂-1 (Plug-in type)


VVFS2000-P-⁰¹₀₂-2 (Non plug-in type)

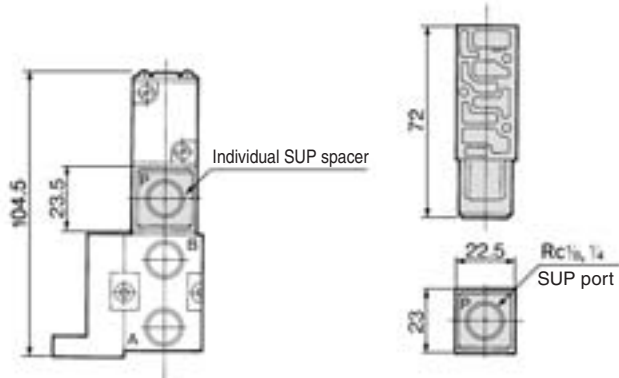

Throttle valve spacer:

VVFS2000-20A-1 (Plug-in type)


VVFS2000-20A-2 (Non plug-in type)

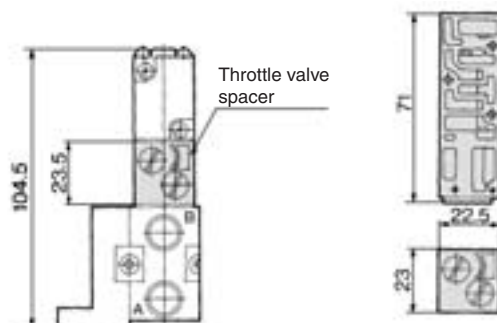

Individual EXH spacer:

VVFS2000-R-⁰¹₀₂-1 (Plug-in type)


VVFS2000-R-⁰¹₀₂-2 (Non plug-in type)

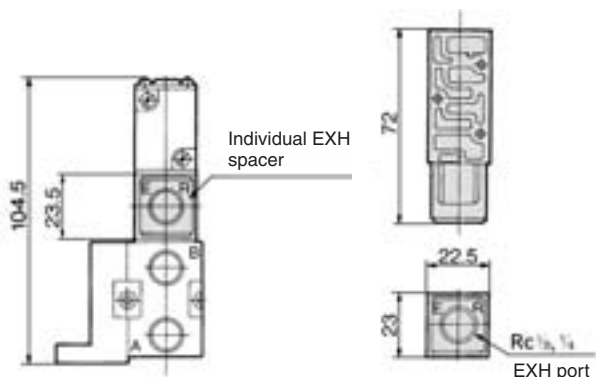

Interface regulator


ARBF2000-00-P-1 (Plug-in type)

ARBF2000-00-P-2 (Non plug-in type)

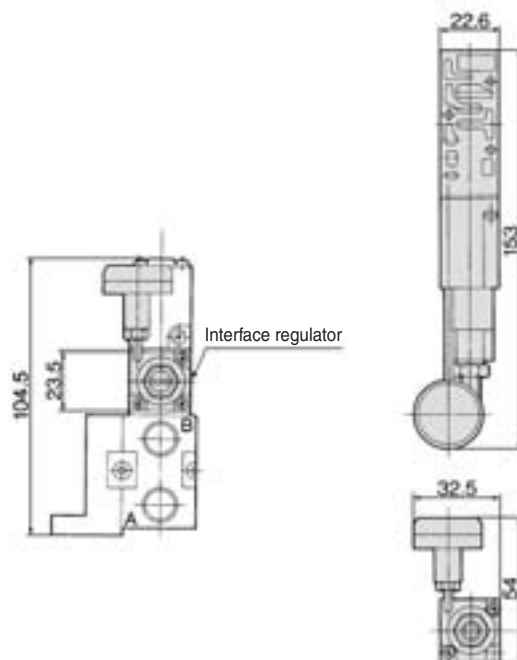

SUP block disk: AXT625-12A


EXH block disk: AXT625-12A

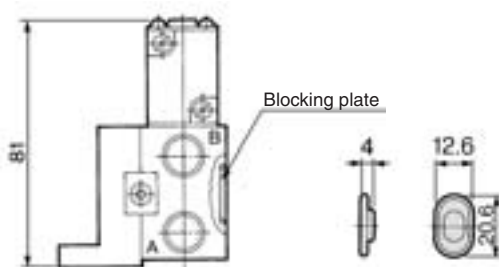

Release valve spacer

VVFS2000-24A-1^R_L (Plug-in type)

VVFS2000-24A-2^R_L (Non plug-in type)

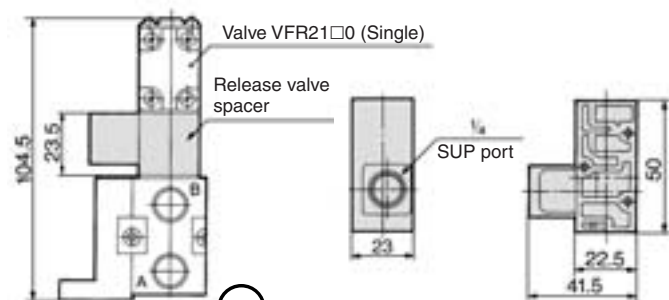


Note) VVFS2000-24A-1/2R (D side mounting)

Manifold with Control Unit

- Control unit (Filter, Regulator, Pressure switch, Air release valve) are all standardized to the one unit, and can be mounted on the manifold base without any attachments.
- Piping processes are eliminated.



Plug-in type

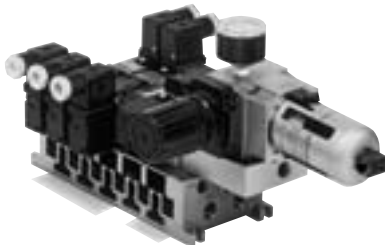

Non plug-in type

⚠ Caution

Air filter with auto-drain or manual drain must be mounted with the air filter at the bottom.

Manifold Specifications

Manifold	Plug-in type: VV5FR2-01□(-Q)	Non plug-in type: VV5FR2-10(-Q)
Wiring	With terminal block With multi-connector With D-sub connector	Grommet, Grommet terminal Conduit terminal, DIN terminal L plug connector, M plug connector
Applicable valve model	VFR2□00-□F(-Q)	VFR2□10-□G, VFR2□10-□E VFR2□10-□T, VFR2□10-□DY(-Q) VFR2□10-□L, VFR2□10-□M
Porting specifications	Common SUP, Common EXH	
Rc	A, B port	Side: Rc 1/8, 1/4, C6, C8, Bottom: Rc 1/8 (Option)
	P, EA, EB port	Side: Rc 1/4, Bottom: Rc 1/8 (Option)
Stations	2 to 15 stations * (With multi-connector/D-sub connector: 2 to 8 stations)	



* Including station of control unit

Control Unit Specifications

Air filter (With auto-drain/With manual drain)	
Filtration degree	5 μm
Regulator	
Set pressure (Outlet pressure)	0.05 to 0.85 MPa
Pressure switch	
Set pressure range: OFF	0.1 to 0.6 MPa
Differential	0.08 MPa
Contact	1a
Indicator light	LED (RED)
Max. switch capacity	2 VA AC, 2 W DC
Max. operating current	24 VAC, DC or less: 50 mA 100 VAC, DC: 20 mA
Inside voltage drop	4 V or less
Air release valve (Single only)	
Operating pressure range	0.2 to 0.9 MPa

Control Unit/Option

Air release valve spacer	<Plug-in type>	
	VVFS2000-24A-1R (D side mounting) VVFS2000-24A-1L (U side mounting)	
	<Non plug-in type>	
	VVFS2000-24A-2R (D side mounting) VVFS2000-24A-2L (U side mounting)	
Pressure switch	IS1000P-2-1	
Blanking plate	For filter regulator	MP2-2
	For pressure switch	MP3-2
	For air release valve	AXT625-18A
Filter element	111511-5B	



Note 1) Refer to "Manifold Option" on page 1246.

Note 2) Pressure switch cannot be mounted later on non plug-in type.

SJ

SY

SV

SYJ

SZ

VP4

S0700

VQ

VQ4

VQ5

VQC

VQZ

SQ

VFS

VFR

VQ7

How to Order

VV5FR2 – **10** – **08** **1** – **01** – **AP** – **Q** – **1**

Series VFR2000 Manifold

Base model

Symbol	Electrical entry	Connector mounting direction	Junction cover
01T	Plug-in type terminal block	—	Stacking type
01T1	Plug-in type terminal block	—	Integrated type
01CD1	Plug-in type multi-connector	D side	Integrated type
01CU1	Plug-in type multi-connector	U side	Integrated type
01FD1	Plug-in type D-sub connector	D side	Integrated type
01FU1	Plug-in type D-sub connector	U side	Integrated type
10	Non plug-in type	—	—

Stations

02	2 stations
15 Note)	15 stations

Note) • 01CD1, 01CU1, 01FD1, 01FU1: Max. 8 stations
• 01T, 01T1, 10: Max. 15 stations
• Including station of control unit

CE-compliant

Nil	—
Q	CE-compliant

Air release valve coil rating

Nil	None
1	100 VAC, 50/60 Hz
5	24 VDC
9	Other

Control unit type

Control equipment	Symbol	Nil	MP	AP	M	A	G	F	C	E
Air release valve		●	●	●	●				●	●
Air filter regulator with manual drain		●		●			●			
Air filter regulator with auto-drain			●		●			●		
Pressure switch		●	●							
Blanking plate (Air release valve)							●	●		
Blanking plate (Filter regulator)									●	
Blanking plate (Pressure switch)					●	●	●	●	●	
Required stations										1 station

Note) Control unit is D side mounting only.

Thread type

Nil	Rc
F	G
N	NPT
T	NPTF

Port size

Symbol	P, EA, EB *	A, B *
01	1/4	1/8
02		1/4
C6		One-touch fitting for ø6
C8		One-touch fitting for ø8
M		Mixed

* For bottom ported, 1/8 is only available.

Symbol

Symbol	Passage	Porting specifications
	P	EA, EB
1	Common	Common
2 *		
3 *	Common	Individual
4 *		
5 *	Individual	Common
6 *		
7 *	Individual	Individual
8 *		

* Option
P port or EA/EB port of symbol "3" to "8" can be individual port with block disk. Therefore, if using individual SUP spacer or individual EXH spacer for individual port, its symbol is "1".
When an individual passage is used, P, EA and EB ports will be bottom ported.

How to Order Manifold Assembly

<Example> Plug-in type with terminal block

VV5FR2-01T1-091-02-MP5 1 set (Manifold base part no.)
 *VFR2100-5FZ 5 sets (2 position single part no.)
 *VFR2200-5FZ 2 sets (2 position double part no.)

→ The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

The 1st and 2nd station are used for control unit mounting.
 When ordering, specify the part nos. in order from the 3rd. station in the D side.
 When entry of part numbers becomes complicated, indicate on the manifold specification sheet.

<Example> Non plug-in type

VV5FR2-10-071-01-M5 1 set (Manifold base part no.)
 *VFR2110-5D 5 sets (2 position single part no.)


→ The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

The 1st and 2nd station are used for control unit mounting.
 When ordering, specify the part nos. in order from the 3rd. station in the D side.
 When entry of part numbers becomes complicated, indicate on the manifold specification sheet.


Manifold with Control Unit: Plug-in Type/Non Plug-in Type

Plug-in type:

VV5FR2-01T-	Station 1-	Port size	Control unit	Voltage of air release valve
-------------	------------	-----------	--------------	------------------------------

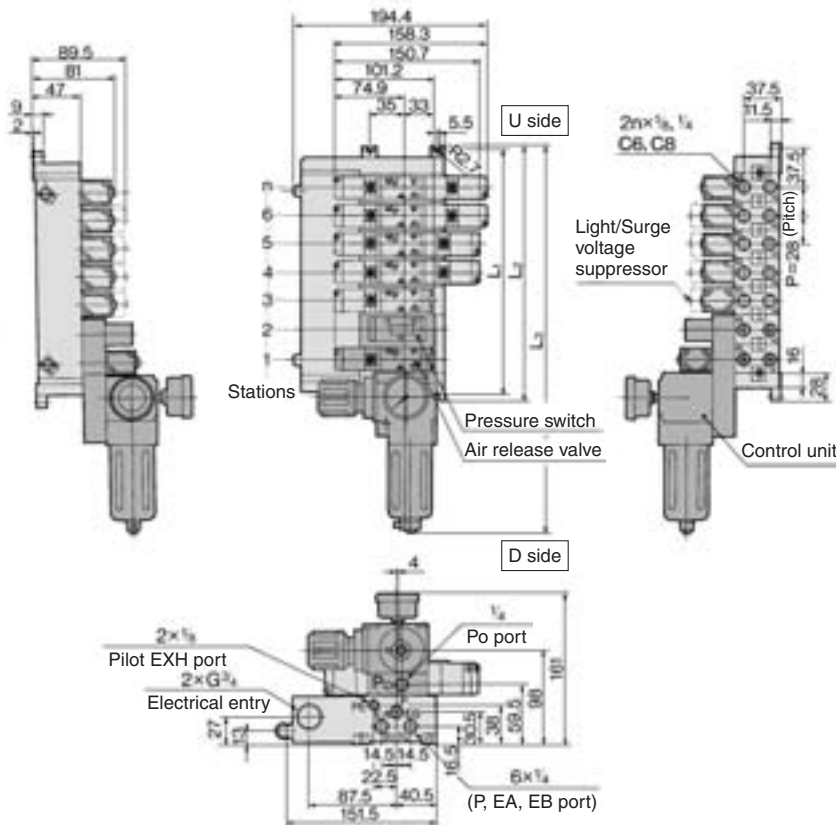


Example for manifold

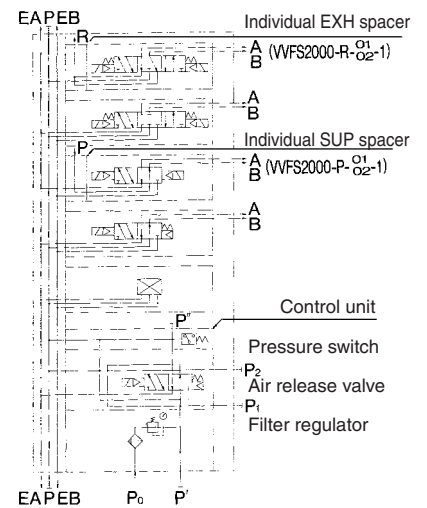


Non plug-in type:

VV5FR2-10-	Station 1-	Port size	Control unit	Voltage of air release valve
------------	------------	-----------	--------------	------------------------------

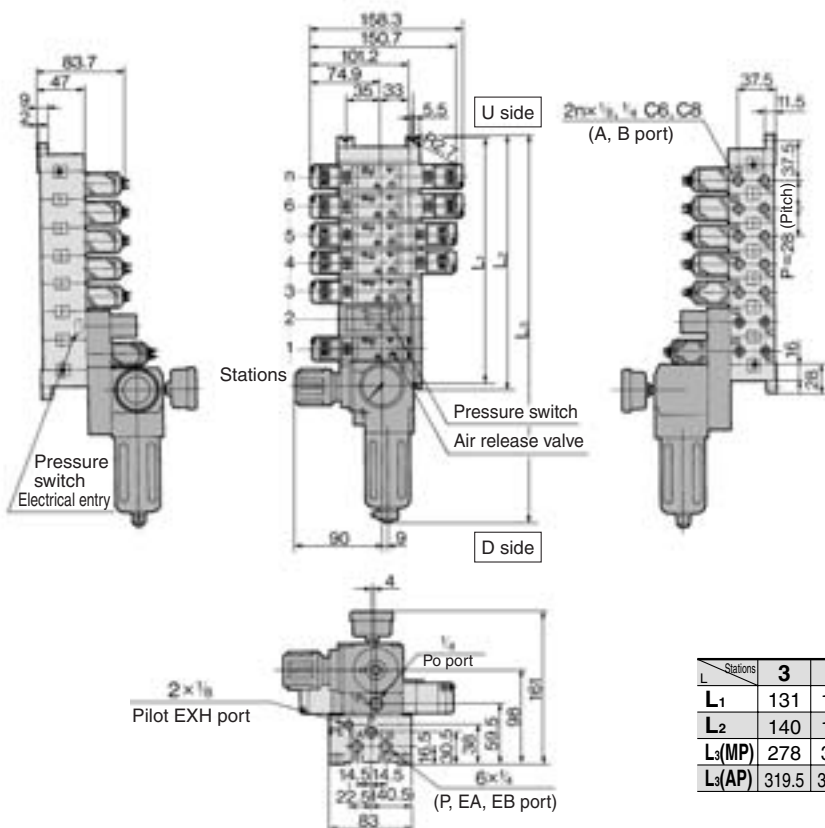


Example for manifold

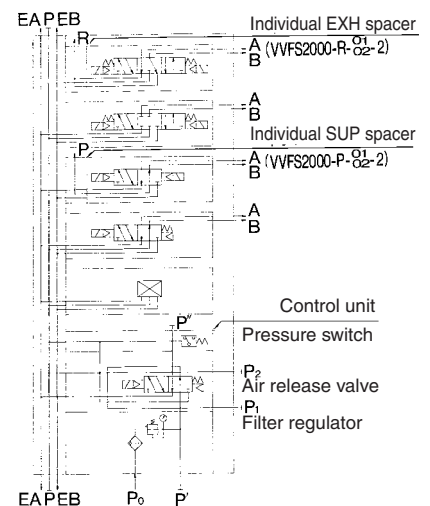

n: Stations									
Stations	3	4	5	6	7	8	9	10	Formula
L ₁	131	159	187	215	243	271	299	327	L ₁ = 28 x n + 47
L ₂	140	168	196	224	252	280	308	336	L ₂ = 28 x n + 56
L ₃ (MP)	278	306	334	362	390	418	446	474	L ₃ = 28 x n + 194
L ₃ (AP)	319.5	347.5	375.5	403.5	431.5	459.5	487.5	515.5	L ₃ = 28 x n + 235.5

Series VFR2000

Manifold Base Construction — Plug-in Type, Non Plug-in Type

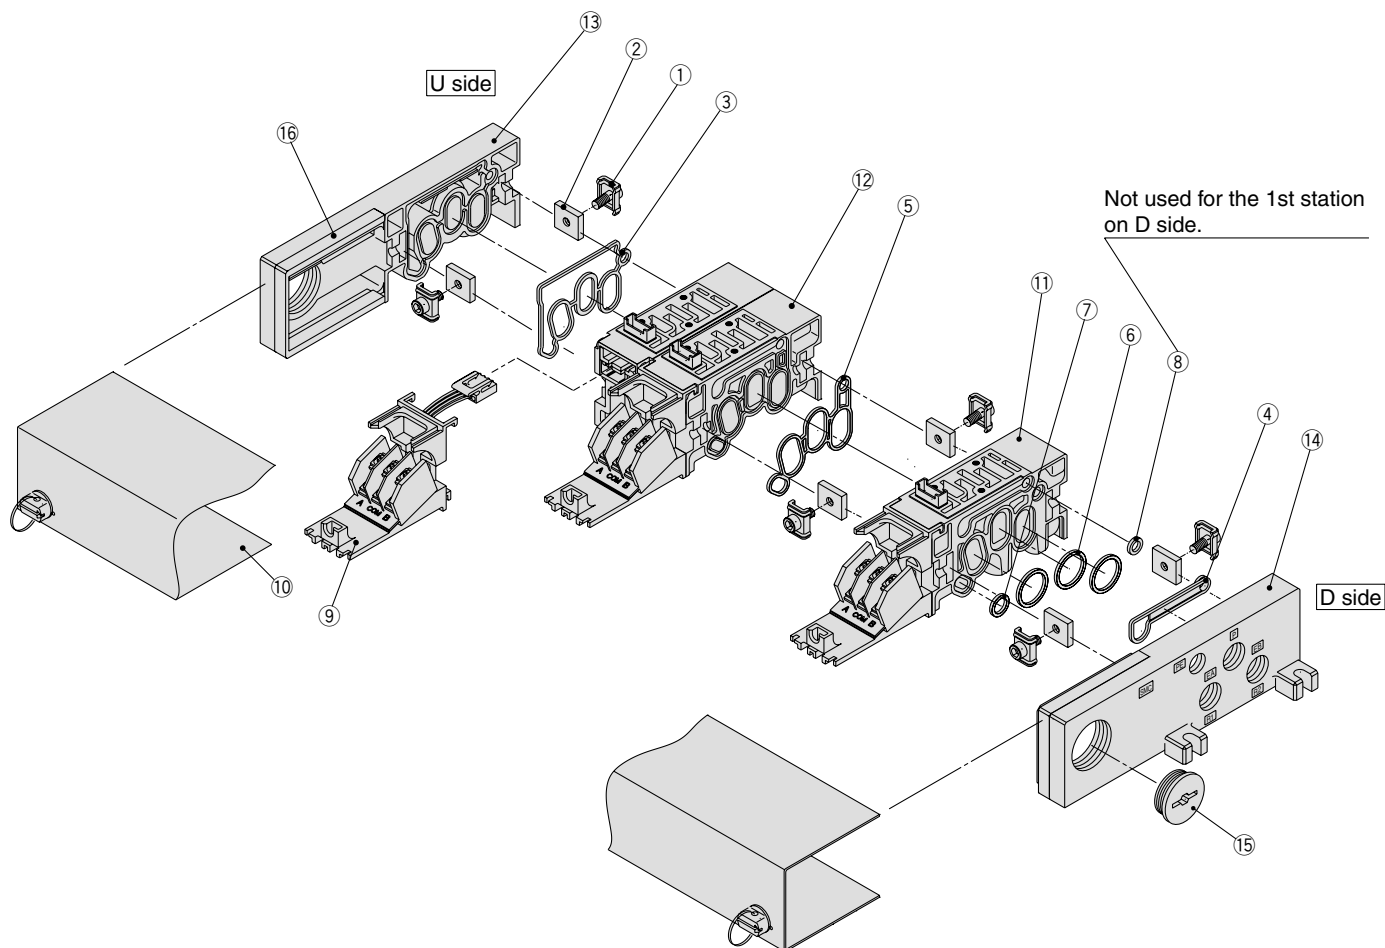

* Manifold Base/Construction: Plug-in type with terminal block (01T1).

- For increasing the manifold bases, please order the manifold block assembly number of the principle number assembly ⑪ and ⑫.
For plug-in type: The manifold base with terminal stand (integrated with a junction cover) is required with the ⑩ junction cover assembly.
- Manifold base is consisted of the junction of 2 and 3 station bases.

Example) U side ①-----②-----③-----④-----⑤-----⑥-----⑦-----⑧-----⑨-----⑩-----⑪-----⑫ D side

<5 stations (Odd number)> 2 stations 2 stations 1 station

<6 stations (Even number)> 2 stations 2 stations 1 station 1 station

5 Port Pilot Operated Solenoid Valve Rubber Seal, Plug-in/Non Plug-in *Series VFR2000*

Replacement Parts

No.	Description	Material	Part no.	
1	Connection fitting assembly	Steel plate		AXT625-4-1A
2	Connection fitting B	Steel plate		AXT625-5
3	Gasket A	NBR		AXT625-17
4	Gasket B	NBR		AXT625-16
5	Gasket	HNBR		VVFS2000-32-1H
6	O-ring	NBR		18 x 15 x 1.5
7	O-ring	NBR		10.5 x 7.5 x 1.5
8	O-ring	NBR		8 x 5 x 1.5
9	Adapter plate	Resin	For 01	AXT625-6
	Adapter plate assembly	—	For 01T	AXT625-28-13A
			For 01T1	(Terminal section with adapter plate and lead wire assembly)
	Adapter plate	Resin	For 01C	AXT625-28-1
			For 01F	VVF2000-26-6
10	Junction cover assembly	—	For 01S□	AXT625-6
			For 01	AXT625-7A
			For 01T	AXT625-28-3A
			For 01T1	AXT625-28-7A-[Stations]
			For 01C	
			For 01F	VVF2000-26-5A-[Stations]
			For 01S□	AZ738-10A-[Stations]
15	Rubber plug	NBR	For 01	AXT333-12
	Plug	—	For 01T ⁽¹⁾ 01S□	AXT625-22
16	Guard	Resin	For 01W	EXP22S
			For 01T ⁽¹⁾	AXT625-28-4

Replacement Parts: Sub Assembly

No.	Description	Part no.	Component parts	Applicable manifold base
11	Manifold block assembly (for 1 station)	AXT625-01A- $\frac{1}{2}$ (-B) ^{Note}	Manifold block ⑪, Metal joint ①, ②, O-ring ⑥, ⑦, ⑧, Junction cover ⑩, Adapter plate ⑨, Pin housing, Guide, Insert plug lead wire	Plug-in type With attachment plug lead wire
		AXT625-20A- $\frac{1}{2}$ (-B) ^{Note}	Manifold block ⑪, Metal joint ①, ②, O-ring ⑥, ⑦, ⑧, Junction cover ⑩, Adapter plate assembly (with terminal) ⑨, Pin housing, Guide	Plug-in type With terminal block
		AXT625-10A- $\frac{1}{2}$ (-B) ^{Note}	Manifold block ⑪, Metal joint ①, ②, O-ring ⑥, ⑦, ⑧	Non plug-in type
12	Manifold block assembly (for 2 stations)	AXT625-01A $\frac{1}{2}$ - $\frac{1}{2}$ ^{Note}	Manifold block ⑫, Metal joint ①, ②, Gasket ⑤, Junction cover ⑩, Adapter plate ⑨, Pin housing, Guide, Insert plug lead wire	Plug-in type With attachment plug lead wire
		AXT625-20A $\frac{1}{2}$ - $\frac{1}{2}$ ^{Note}	Manifold block ⑫, Metal joint ①, ②, Gasket ⑤, Junction cover ⑩, Adapter plate assembly (with terminal) ⑨, Pin housing, Guide	Plug-in type With terminal block
		AXT625-10A $\frac{1}{2}$ - $\frac{1}{2}$ ^{Note}	Manifold block ⑪, Metal joint ①, ②, Gasket ⑤	Non plug-in type
13	End plate (U side) assembly	AXT625-2A	End plate (U) ⑬, Metal joint ①, ②, Gasket A ③, Guard ⑯	Plug-in type With attachment plug lead wire
		AXT625-2A-20	End plate (U) ⑬, Metal joint ①, ②, Gasket A ③, Guard ⑯	Plug-in type With terminal block
		AXT625-2A-10	End plate (U) ⑬, Metal joint ①, ②, Gasket A ③	Non plug-in type
14	End plate (D side) assembly	AXT625-3A	End plate (D) ⑭, Metal joint ①, ②, Gasket B ④, Guard ⑯, Steel ball	Plug-in type With attachment plug lead wire
		AXT625-3A-20	End plate (D) ⑭, Metal joint ①, ②, Gasket B ④, Guard ⑯, Steel ball	Plug-in type With terminal block
		AXT625-3A-10	End plate (D) ⑭, Metal joint ①, ②, Gasket B ④, Steel ball	Non plug-in type


 Note) 1: A, B port size Rc 1/8, 2: A, B port size Rc 1/4, (-B): A, B port bottom ported

SJ
SY
SV
SYJ
SZ
VP4
S0700
VQ
VQ4
VQ5
VQC
VQZ
SQ
VFS
VFR
VQ7


5 Port Pilot Operated Solenoid Valve

Rubber Seal, Plug-in/Non Plug-in

Series VFR3000

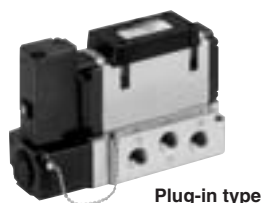

JIS Symbol

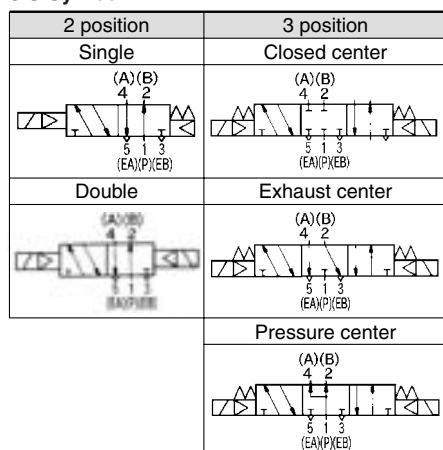

Standard Specifications

Valve specifications	Fluid		Air	
	Operating pressure range	2 position single/3 position	0.2 to 0.9 MPa	
		2 position double	0.1 to 0.9 MPa	
	Ambient and fluid temperature		−10 to 50°C (No freezing. Refer to page 5.)	
	Lubrication		Not required ⁽¹⁾	
	Manual override		Non-locking push type	
	Mounting orientation		Unrestricted	
	Shock/Vibration resistance		300/50 m/s ² ⁽²⁾	
Electricity specifications	Enclosure		Dustproof	
	Coil rated voltage		100, 200 VAC (50/60 Hz), 24 VDC	
	Allowable voltage fluctuation		−15 to −10% of rated voltage	
	Apparent power (AC) ⁽³⁾	Inrush	5.6 VA/50 Hz, 5.0 VA/60 Hz	
		Holding	3.4 VA (2.1 W)/50 Hz, 2.3 VA (1.5 W)/60 Hz	
	Power consumption (DC) ⁽³⁾		1.8 W	
	Electrical entry	Plug-in type	Conduit terminal	
		Non plug-in type	Grommet, Grommet terminal Conduit terminal, DIN terminal	



Note 1) Use turbine oil Class 1 (ISO VG32), if lubricated.
 Note 2) Impact resistance: No malfunction occurred when it is tested with a drop tester in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition. (Values at the initial period)
 Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was performed at both energized and de-energized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)

Option Specifications

Pilot type		External pilot ^{Note)}
Manual override	Main valve	Direct manual override
	Pilot valve	Non-locking push type A (Extended), Locking type B (Tool required), Locking type C (Lever)
Coil rated voltage		110 to 120, 220, 240 VAC 50/60 Hz 12 VDC
Porting specifications		Bottom ported
Option		With light/surge voltage suppressor



Note) Operating pressure: 0 to 0.9 MPa
 Pilot pressure: 2 position single/3 position 0.2 to 0.9 MPa
 2 position double 0.1 to 0.9 MPa

Model

Type of actuation		Model		Port size Rc	Flow characteristics ⁽¹⁾						Max. ⁽²⁾ operating cycle (Hz)	⁽³⁾ Response time (ms)	⁽⁴⁾ Mass (kg)
		Plug-in	Non plug-in		1 → 4/2 (P → A/B)			4/2 → 5/3 (A/B → EA/EB)					
					C [dm³/(s·bar)]	b	Cv	C [dm³/(s·bar)]	b	Cv			
2 position	Single	VFR310□	VFR311□	1/4	7.5	0.38	1.9	7.5	0.34	1.9	5	30 or less	0.61 (0.64) <0.58>
			VFR314□	3/8	8.4	0.39	2.2	8.7	0.38	2.2			
	Double	VFR320□	VFR321□	1/4	7.1	0.41	1.9	7.4	0.40	1.9	5	30 or less	0.71 (0.74) <0.69>
			VFR324□	3/8	7.9	0.36	2.0	8.6	0.37	2.2			
3 position	Closed center	VFR330□	VFR331□	1/4	6.8	0.40	1.8	6.3	0.38	1.6	3	50 or less	0.72 (0.75) <0.71>
			VFR334□	3/8	7.2	0.39	1.9	6.5	0.40	1.7			
	Exhaust center	VFR340□	VFR341□	1/4	6.5	0.42	1.7	7.9 [3.4]	0.41 [0.47]	2.0 [0.96]	3	50 or less	0.72 (0.75) <0.71>
			VFR344□	3/8	6.9	0.42	1.8	9.5 [3.4]	0.39 [0.46]	2.4 [0.96]			
	Pressure center	VFR350□	VFR351□	1/4	7.6 [2.4]	0.33 [0.48]	1.9 [0.69]	6.1	0.36	1.5	3	50 or less	0.72 (0.75) <0.71>
			VFR354□	3/8	9.3 [2.4]	0.34 [0.47]	2.2 [0.69]	6.5	0.41	1.7			



Note 1) []: Denotes the normal position.
 Note 2) Min. operating frequency is once in 30 days.
 Note 3) Based on dynamic performance test, JIS B 8375-1981. (0.5 MPa, Coil temperature: 20°C, at rated voltage, without surge voltage suppressor)
 Note 4) For VFR3□00-□FZ-□□, (): VFR3□10-DZ-□□, < >: VFR3□40-□G-□□

Series VFR3000

How to Order

Electrical entry

F: Plug-in type, conduit terminal



Option

Nil	None
Z	With light/surge voltage suppressor

Porting specifications (P, A, EA, EB port)

Nil	Side ported
B	Bottom ported *

* Option

Port size (P, A, B, EA, EB port)

Nil	Without sub-plate
02	1/4
03	3/8

* For bottom ported: Rc 1/4

CE-compliant

Nil	—
Q	CE-compliant *

* Electrical entry: D/DO, Y/YO and F only

Thread type

Nil	Rc
F	G
N	NPT
T	NPTF

Plug-in VFR3 1 0 0 - 5 F - - 02 - -

Non plug-in VFR3 1 1 1 - 1 D - - 02 - -

Non plug-in VFR3 1 4 0 - 1 G - - 02 - -

Common electrical entry

Individual electrical entry

Symbol

2 position single

1




2 position double

2




3 position closed center

3



3 position exhaust center

4



3 position pressure center

5



Body option

0	Standard
1 *	Direct manual override

* Option

Pilot type

Nil	Internal pilot
R *	External pilot

* Option

Coil rated voltage

1	100 VAC, 50/60 Hz
2	200 VAC, 50/60 Hz
3 *	110 to 120 VAC 50/60 Hz
4 *	220 VAC, 50/60 Hz
5	24 VDC
6 *	12 VDC
7 *	240 VAC, 50/60 Hz
9 *	Other

* Option

Option/VFR3□1□

Nil	None
Z	With light/surge voltage suppressor

Option/VFR3□4□

Nil	None
Z *	With light/surge voltage suppressor
S *	With surge voltage suppressor

* Indicator light is not available for grommet type. With surge voltage suppressor is available for grommet type only.

Electrical entry: VFR3□1□

E: Grommet terminal



D: DIN terminal



Electrical entry: VFR3□4□

G: Grommet



E: Grommet terminal



T: Conduit terminal



D, Y: DIN terminal



Pilot valve manual override

Nil: Non-locking push type



A *: Non-locking push type A (Extended)



B *: Locking type B (Tool required)



C *: Locking type C (Lever)



* Option

How to Order Pilot Valve Assembly

SF4- 1 F - 70 - - -

Coil rated voltage

Symbol	Rated voltage
1	100 VAC, 50/60 Hz
2	200 VAC, 50/60 Hz
3 *	110 to 120 VAC, 50/60 Hz
4 *	220 VAC, 50/60 Hz
5	24 VDC
6 *	12 VDC
7 *	240 VAC, 50/60 Hz
9 *	Other

* Option

Electrical entry, Light/Surge voltage suppressor

Symbol	Electrical entry	Indicator light	With surge voltage suppressor	Applicable valve model
F *	Plug-in	—	—	VFR3□0□ VFR3□1□
G	Grommet	—	—	VFR3□4□
GS	Grommet	—	●	
E	Grommet terminal	—	—	
EZ	Grommet terminal	●	●	
T	Conduit terminal	—	—	
TZ	Conduit terminal	●	●	
D	DIN terminal	—	—	
DZ	DIN terminal	●	●	
Y	DIN terminal	—	—	VFR3□4□
YZ	DIN terminal (DIN43650B type)	●	●	

Manual override

Nil	Non-locking push type
A *	Non-locking push type A (Extended)
B *	Locking type B (Tool required)
C *	Locking type C (Lever)

* Option

Symbol

Symbol	Applicable valve model
Nil	VFR3□0□ VFR3□1□
1	VFR3□4□

CE-compliant

Nil	—
Q	CE-compliant *


* Electrical entry: D, Y and F only

* "VFR3□0□", "VFR3□1□": Pilot valve assembly is all plug-in (F).

5 Port Pilot Operated Solenoid Valve Rubber Seal, Plug-in/Non Plug-in *Series VFR3000*

Use as a guide for selection.
Please confirm the actual conditions with SMC
Sizing Program.

Cylinder Speed Chart

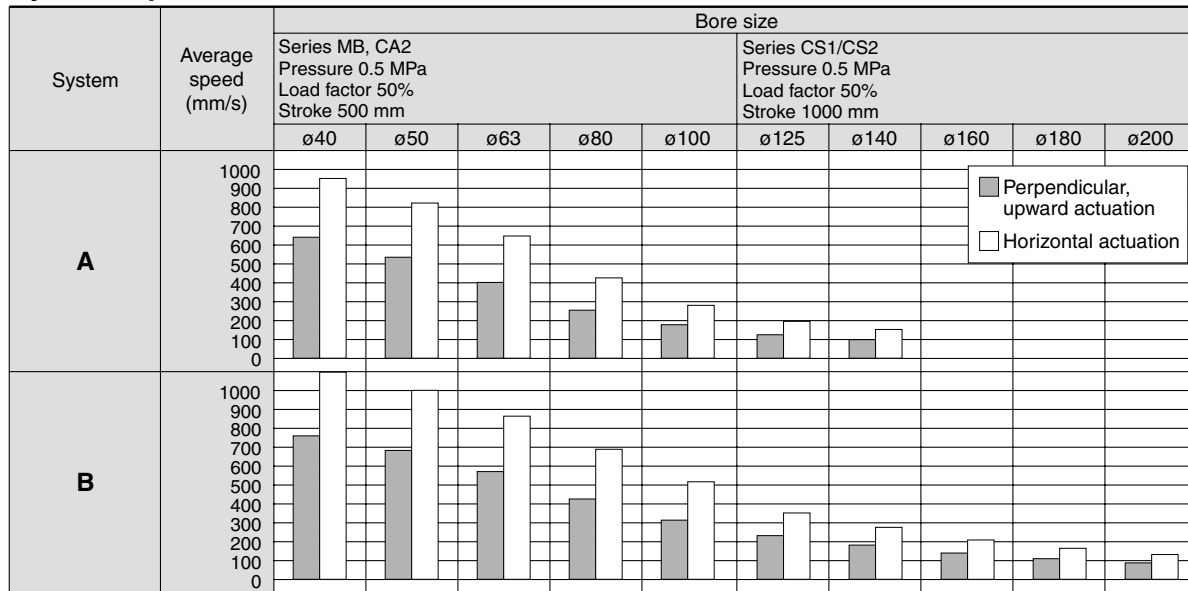


- * It is when the cylinder is extending that is meter-out controlled by speed controller which is directly connected with cylinder, and its needle valve with being fully open.
- * The average velocity of the cylinder is what the stroke is divided by the total stroke time.
- * Load factor: ((Load weight x 9.8)/Theoretical force) x 100%

System Components

System	Solenoid valve	Speed controller	Silencer	SPG (Steel pipe) dia. x Length
A	Series VFR3000 Rc 1/4	AS4000-02 (S = 24 mm ²)	AN200-02 (S = 35 mm ²)	6A x 1 m
B	Series VFR3000 Rc 3/8	AS420-03 (S = 73 mm ²)	AN300-03 (S = 60 mm ²)	10A x 1 m


How to Order Sub-plate Assembly

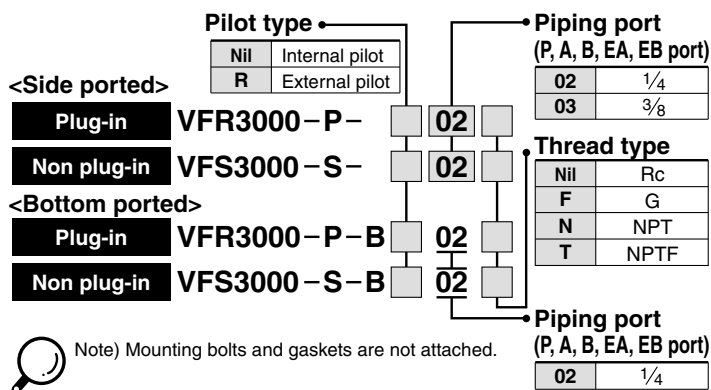

SJ
SY
SV
SYJ
SZ
VP4
S0700
VQ
VQ4
VQ5
VQC
VQZ
SQ
VFS
VFR
VQ7

Series VFR3000

Construction

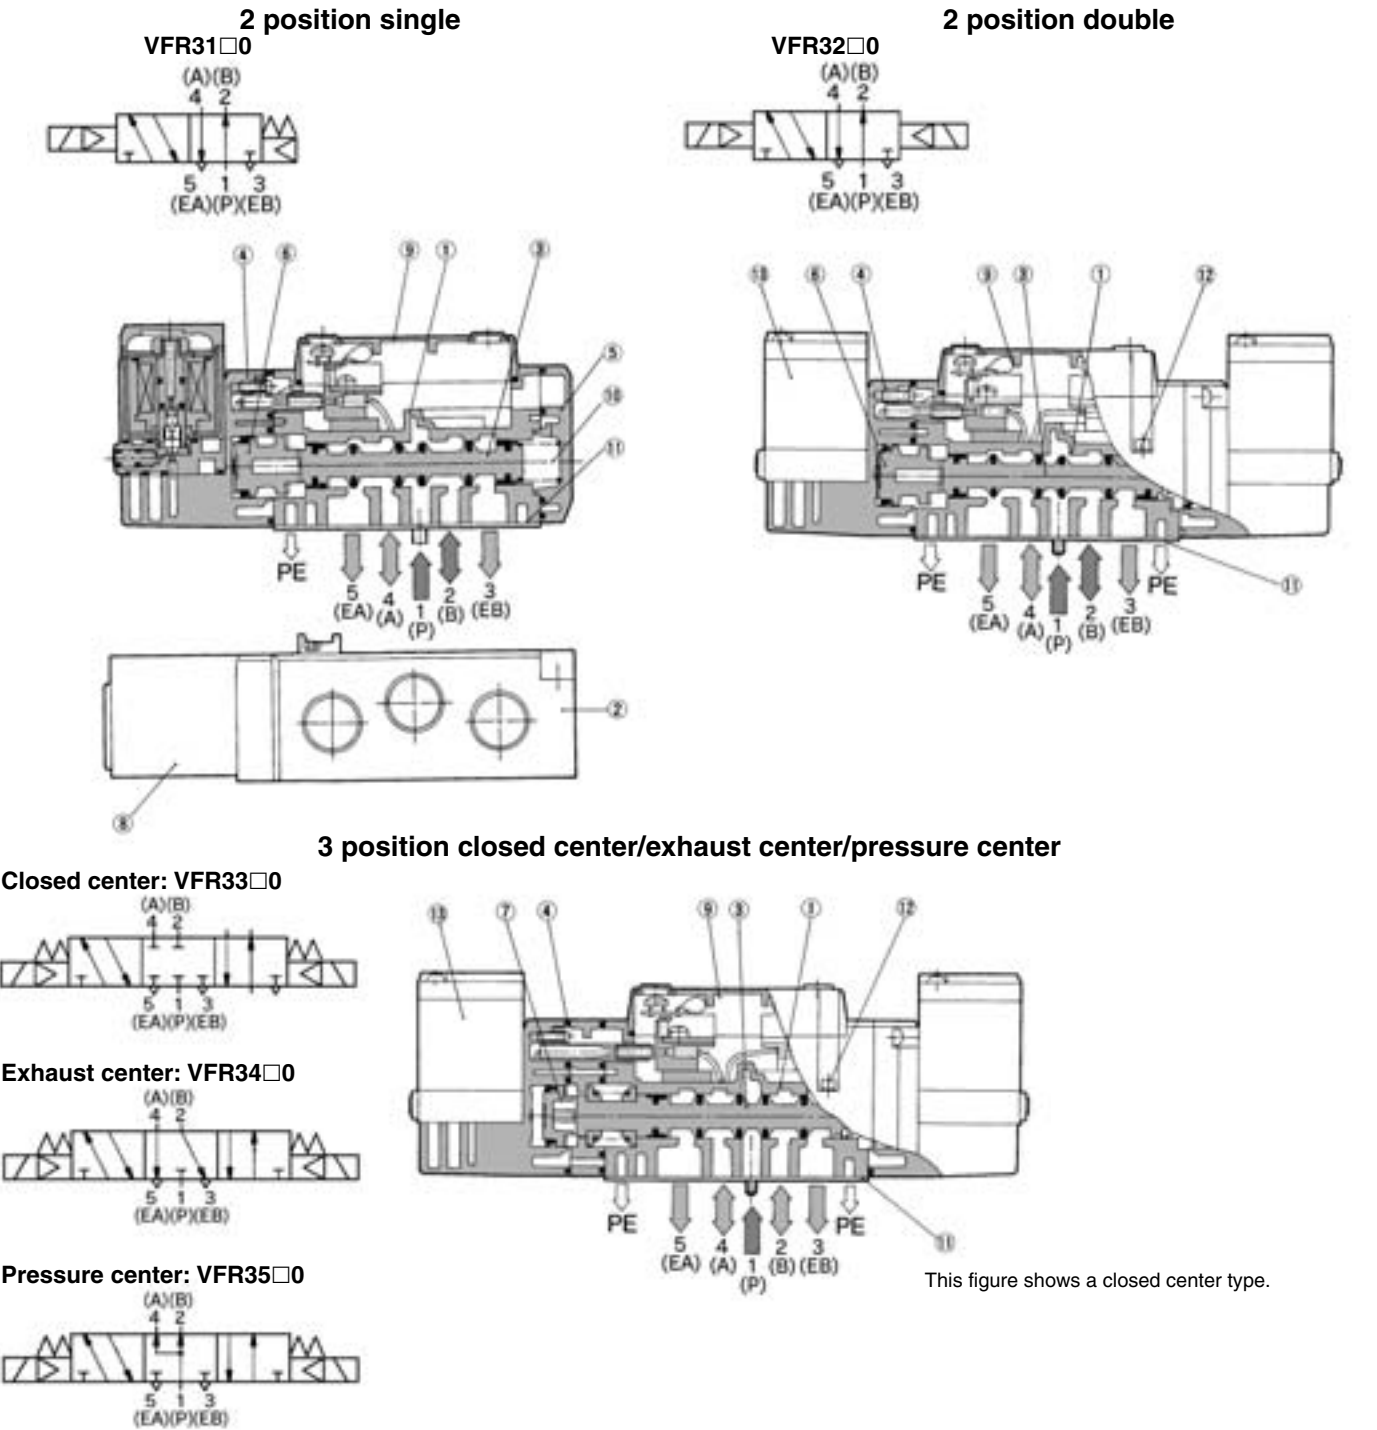

Component Parts

No.	Description	Material	Note
1	Body	Aluminum die-casted	Platinum silver
2	Sub-plate	Aluminum die-casted	Platinum silver
3	Spool valve	Aluminum, NBR	
4	Adapter plate	Resin	Black
5	End plate	Resin	Black

Component Parts

No.	Description	Material	Note
6	Piston	Resin	
7	Piston	Resin	
8	Junction cover	Resin	
9	Light cover	Resin	
10	Return spring	Stainless steel	


Replacement Parts

No.	Description	Material	Description		
			VFR31□□	VFR32□□	VFR33□□/34□□/35□□
11	Gasket	NBR	VFR3000-26-4	VFR3000-26-4	VFR3000-26-4
12	Hexagon socket head screw	Steel	AXT632-3 (M3 x 32)	AXT632-3 (M3 x 32)	AXT632-3 (M3 x 32)
13	Pilot valve assembly	—	Refer to "How to Order Pilot Valve Assembly" on page 1252.		
—	Sub-plate assembly	—	Refer to "How to Order Sub-plate Assembly" on page 1253.		

5 Port Pilot Operated Solenoid Valve **Series VFR3000**


Plug-in: 2 Position Single/Double, 3 Position Closed Center/Exhaust Center/Pressure Center

2 position single: VFR310⁰-□FZ

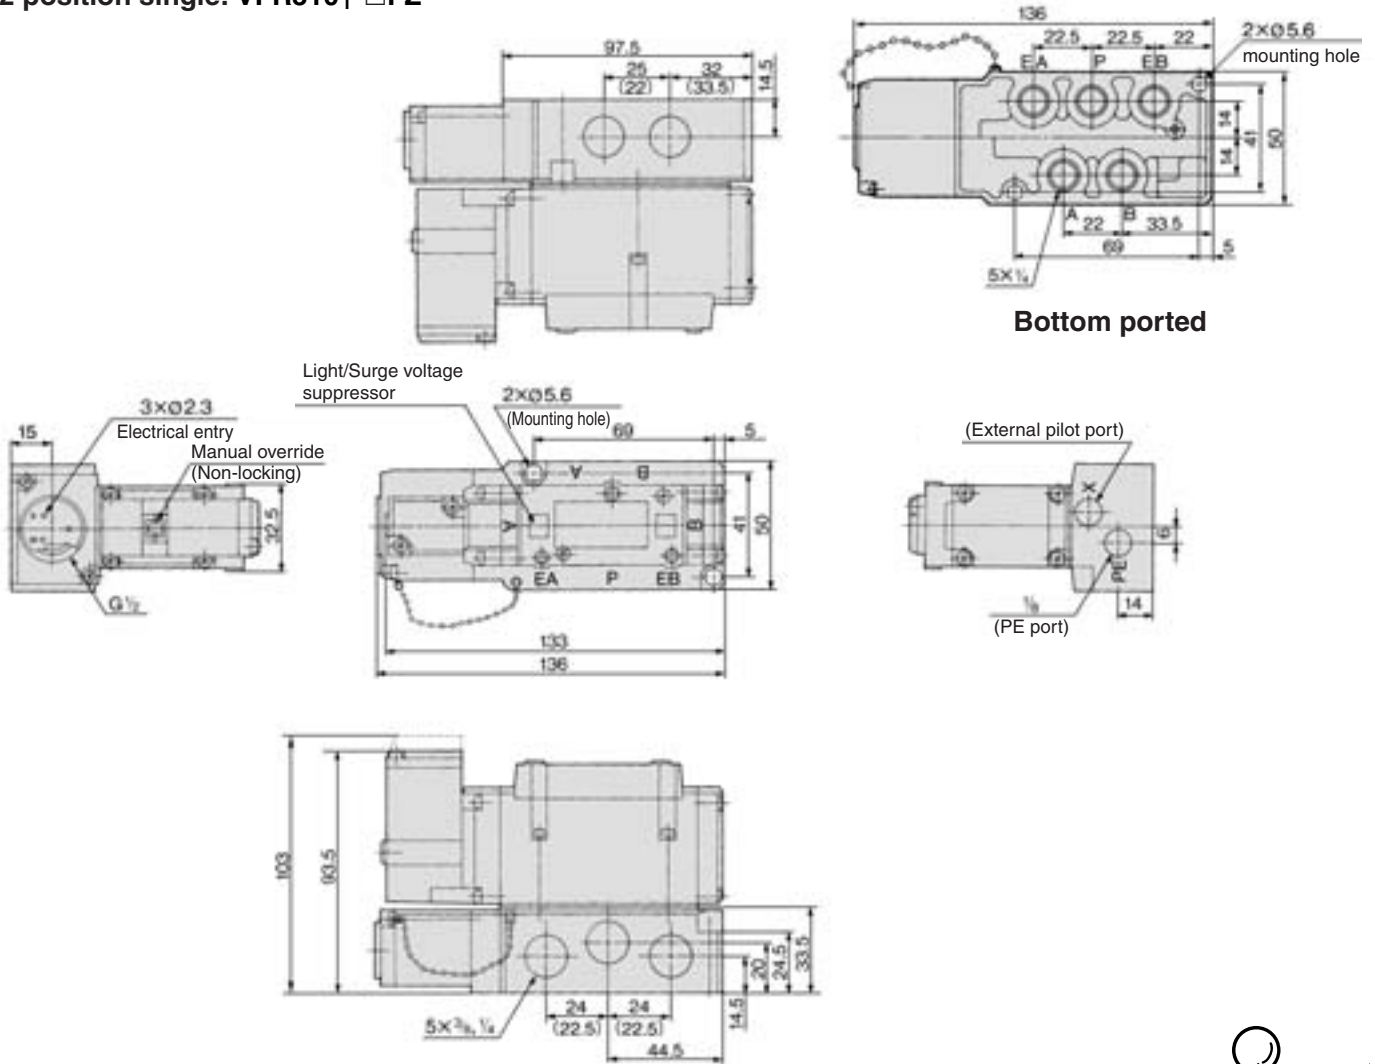


Bottom ported

2 position single: VFR320⁰-□FZ

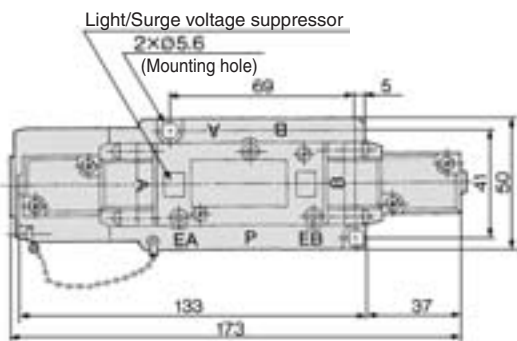

* Other dimensions are the same as the single type.

3 position closed center: VFR330⁰-□FZ
3 position exhaust center: VFR340⁰-□FZ
3 position pressure center: VFR350⁰-□FZ

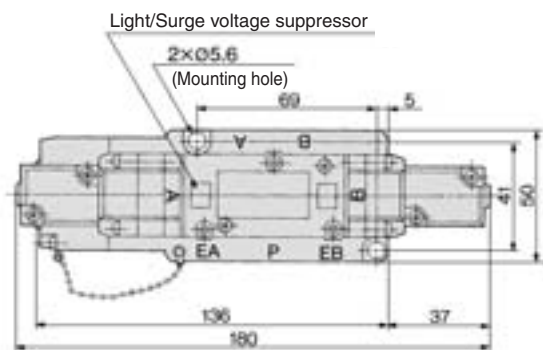

* Other dimensions are the same as the single type.




(): Rc 1/4

SJ
SY
SV
SYJ
SZ
VP4
SØ700
VQ
VQ4
VQ5
VQC
VQZ
SQ
VFS
VFR
VQ7

Series VFR3000


Non Plug-in: 2 Position Single/Double, 3 Position Closed Center/Exhaust Center/Pressure Center

2 position single: VFR311⁰-□E, VFR311⁰-□DZ

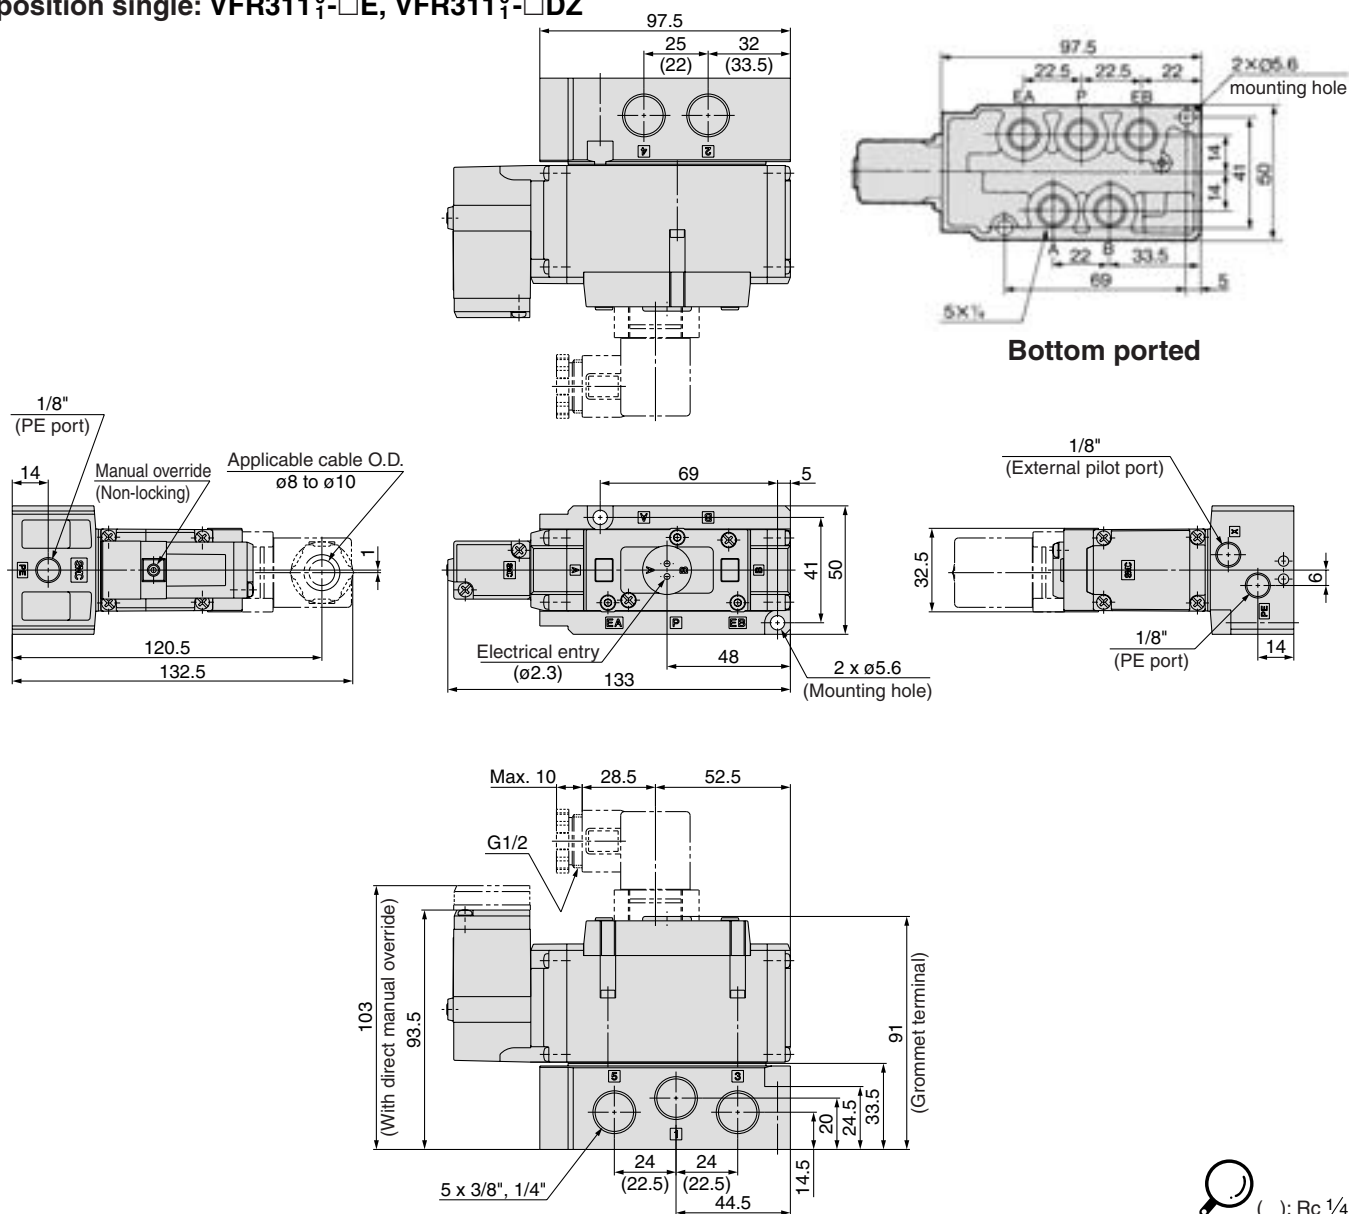


() : Rc 1/4

2 position double: VFR321⁰-□E, VFR321⁰-□DZ

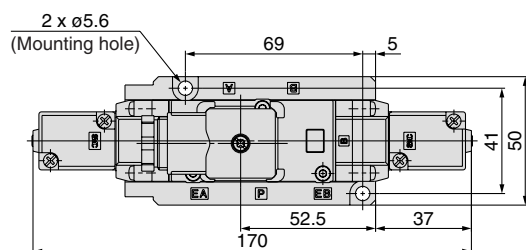

3 position closed center: VFR331⁰-□E, VFR341⁰-□DZ
3 position exhaust center: VFR341⁰-□E, VFR341⁰-□DZ
3 position pressure center: VFR351⁰-□E, VFR351⁰-□DZ

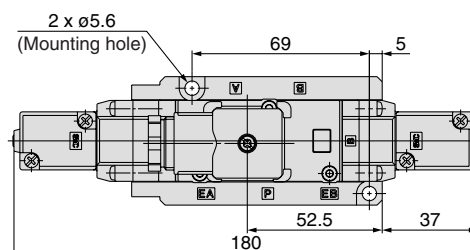


* Other dimensions are the same as the single type.

* Other dimensions are the same as the single type.

5 Port Pilot Operated Solenoid Valve Rubber Seal, Plug-in/Non Plug-in **Series VFR3000**


Non Plug-in: 2 Position Single

2 position single: VFR314⁰₁-□G

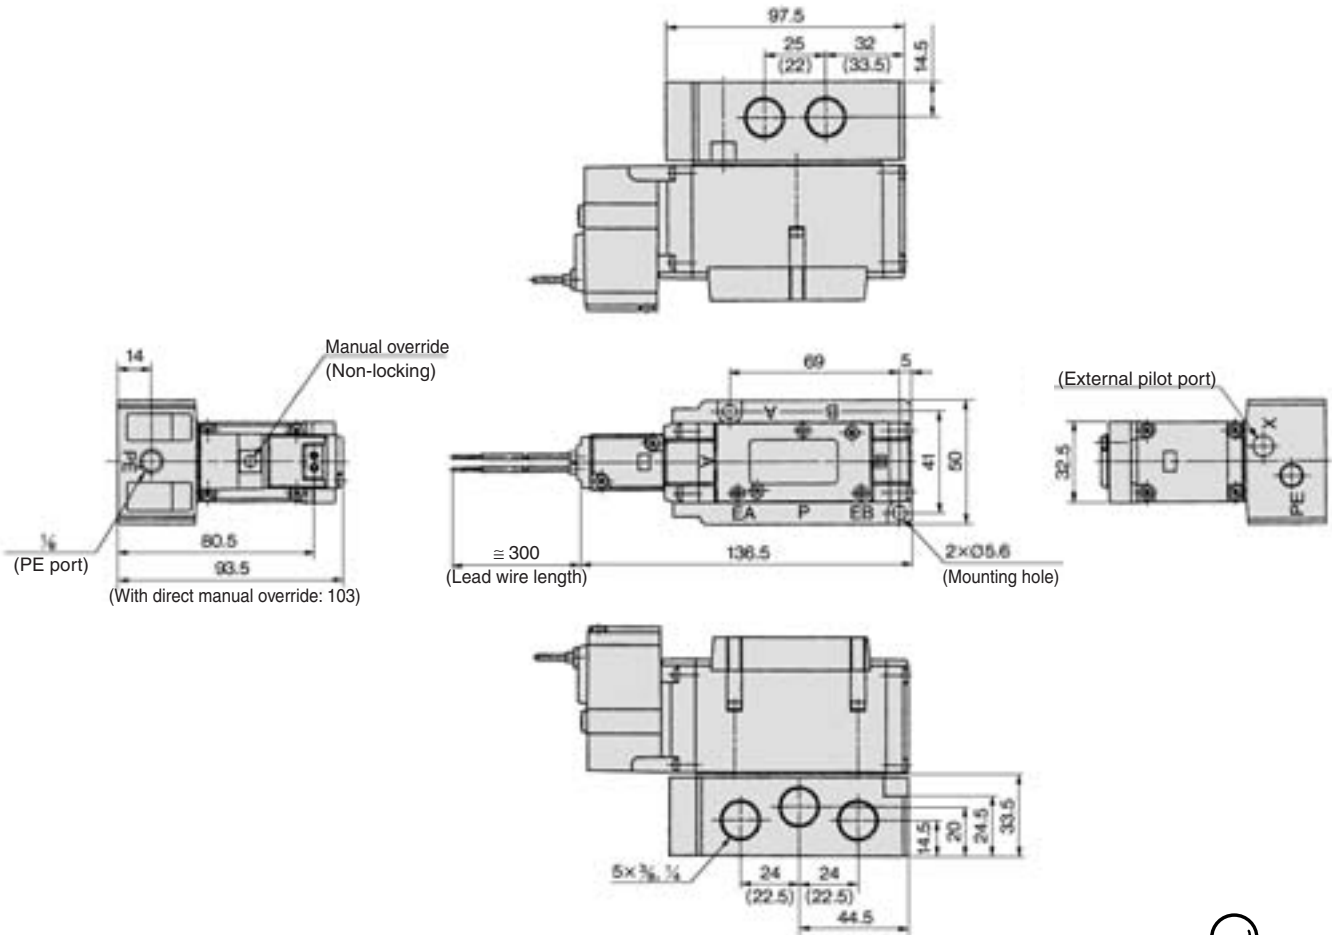


() : Rc 1/4

E: Grommet terminal

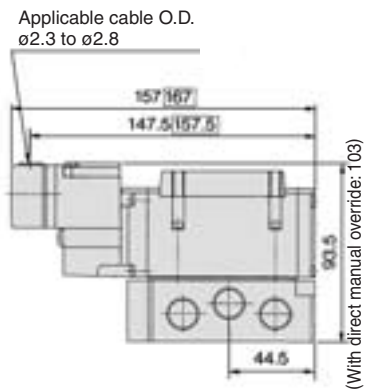


□ : With light/surge voltage suppressor

T: Conduit terminal

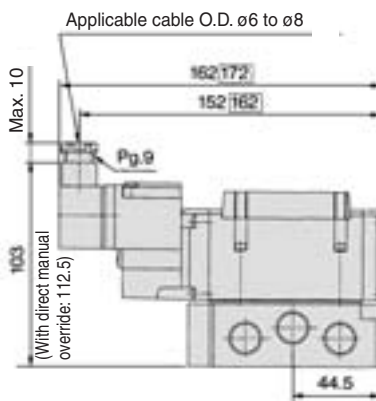

□ : With light/surge voltage suppressor

D, Y: DIN terminal

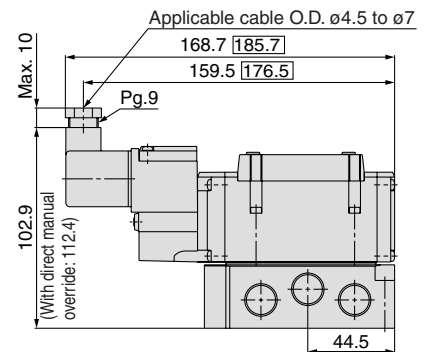

□ : With light/surge voltage suppressor

SJ
SY
SV
SYJ
SZ
VP4
S0700
VQ
VQ4
VQ5
VQC
VQZ
SQ
VFS
VFR
VQ7

Series VFR3000


Non Plug-in: 2 Position Double, 3 Position Closed Center/Exhaust Center/Pressure Center

2 position double: VFR324₁-□G


3 position closed center: VFR334₁-□G

3 position exhaust center: VFR344₁-□G

3 position pressure center: VFR354₁-□G

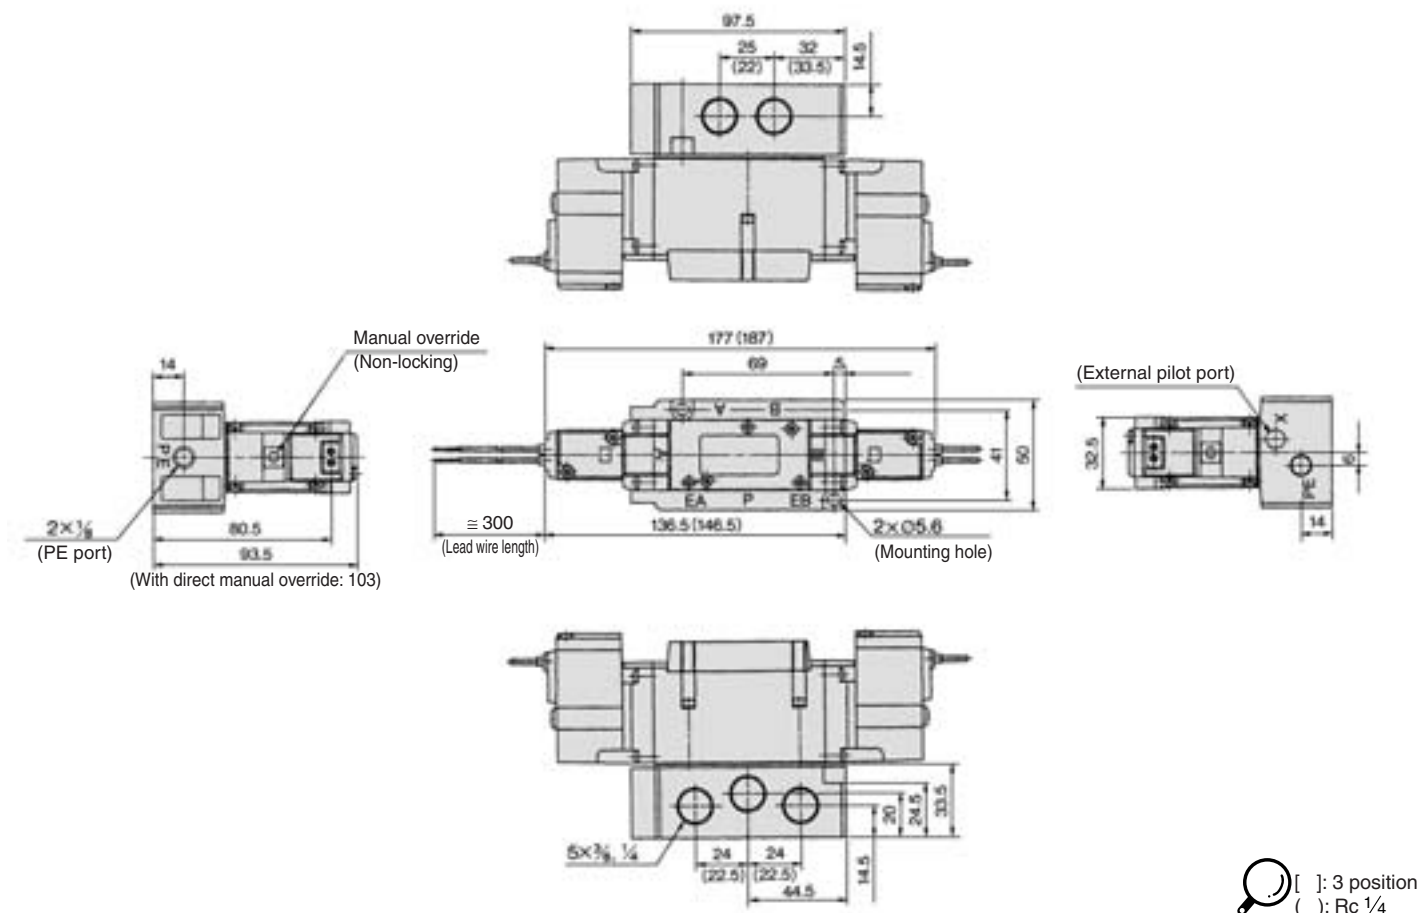


E: Grommet terminal

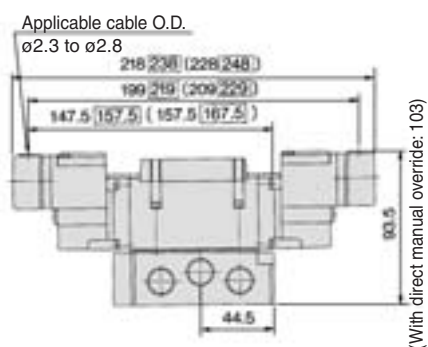


[]: 3 position
□: With light/surge voltage suppressor

T: Conduit terminal

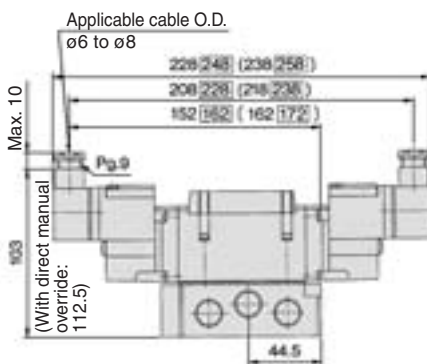

[]: 3 position
□: With light/surge voltage suppressor

D, Y: DIN terminal

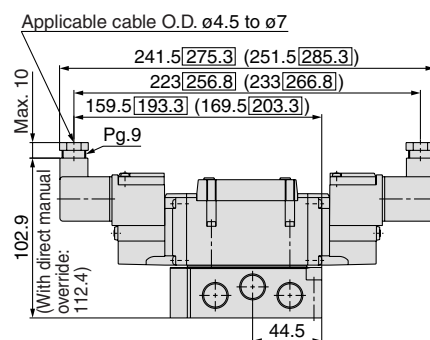

[]: 3 position
□: With light/surge voltage suppressor

Series VFR3000 Manifold Specifications

Manifold Specifications

Base mounted	Wiring	Porting specifications	Port size		Stations	Applicable valve model
		A, B port	P, EA, EB	A, B		
Plug-in type VV5FR3-01□(-Q)	• With terminal block • With multi-connector • With D-sub connector	Side/Bottom	Note) 1/2	1/4, 3/8 C8, C10	2 to 10	VFR3□00-□F(-Q)
Non plug-in type VV5FR3-10(-Q)	• Grommet terminal • DIN terminal				2 to 8	
Non plug-in type VV5FR3-40(-Q)	• Grommet • Grommet terminal • Conduit terminal • DIN terminal				2 to 10	VFR3□1□-□E VFR3□1□-□D(-Q) VFR3□4□-□G VFR3□4□-□E VFR3□4□-□T VFR3□4□-□D(-Q)

Note) If silencer is mounted to EA/EB port, use silencer "AN403-04" (O.D. ø27).

How to Order Manifold Assembly

<Example> Plug-in type with terminal block: 6 stations

VV5FR3-01T-061-02	1 set (Manifold base part no.)
*VFR3100-5FZ	3 sets (2 position single part no.)
*VFR3200-5FZ	2 sets (2 position double part no.)
*VVFS3000-10A	1 set (Blanking plate)

→ The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

Valve arrangement is counted from the D side.
When ordering, specify the part nos. in order from the 1st. station in the D side.
When entry of part numbers becomes complicated, indicate on the manifold specification sheet.

<Example> Non plug-in type: 6 stations


VV5FR3-10-061-03	1 set1 set (Manifold base part no.)
*VFR3110-5D	5 sets (2 position single part no.)
*VFR3410-5D	1 set (3 position exhaust center part no.)
*VVFS3000-R-03-2	1 set (Individual EXH spacer part no.)

→ The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

Valve arrangement is counted from the D side.
When ordering, specify the part nos. in order from the 1st. station in the D side.
When entry of part numbers becomes complicated, indicate on the manifold specification sheet.

Plug-in Type: With Terminal Block

- Since lead wires of solenoid valve are connected with the terminals on upper surface of terminal block, corresponding lead wires from power source can be wired at the bottom of terminal block.

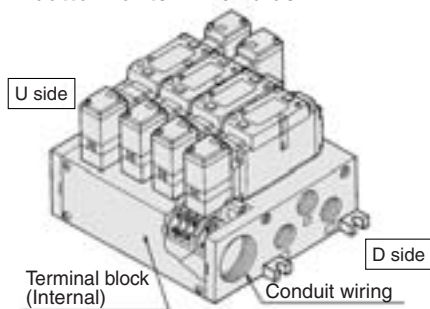

VV5FR3 - 01T - 06 1 - 02

Series VFR3000 Manifold

Plug-in type with terminal block

Stations

02	2 stations
10	10 stations

Symbol

Symbol	Passage	Porting specifications (A, B)
1	Common	Common
2	Common	Bottom *

* Option

Port size

Symbol	P, EA, EB	A, B *
02		1/4
03		3/8
C8	1/2	One-touch fitting for ø8
C10		One-touch fitting for ø10
M		Mixed

* For bottom ported: Rc 1/4, 3/8 only.

Thread type


Nil	Rc
F	G
N	NPT
T	NPTF

CE-compliant

Nil	—
Q	CE-compliant

Plug-in Type: With Multi-connector (For wiring specifications, refer to page 1326.)

- Master connection of power and solenoid valves.
- Quick wiring permits ease of installation.

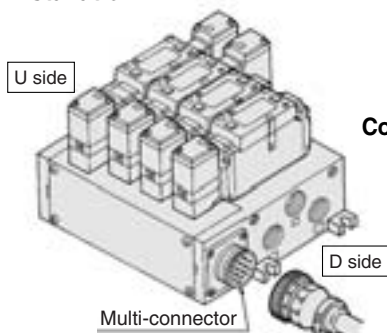

VV5FR3 - 01C D - 05 1 - 02

Series VFR3000 Manifold

Plug-in type with multi-connector

Connector mounting direction

D	D side mounting
U	U side mounting

Stations

02	2 stations
08	8 stations

* Max: 8 stations

Symbol

Symbol	Passage	Porting specifications (A, B)
1	Common	Common
2	Common	Bottom *

* Option

Port size

Symbol	P, EA, EB	A, B *
02		1/4
03		3/8
C8	1/2	One-touch fitting for ø8
C10		One-touch fitting for ø10
M		Mixed

* For bottom ported: Rc 1/4, 3/8 only.

Thread type

Nil	Rc
F	G
N	NPT
T	NPTF


CE-compliant

Nil	—
Q	CE-compliant

Series VFR3000

Plug-in Type: With D-sub Connector (For wiring specifications, refer to page 1326.)

- Wide range of interchangeability (25 pin D-sub connector conforms to MIL standard)
- Quick wiring permits easier installation.

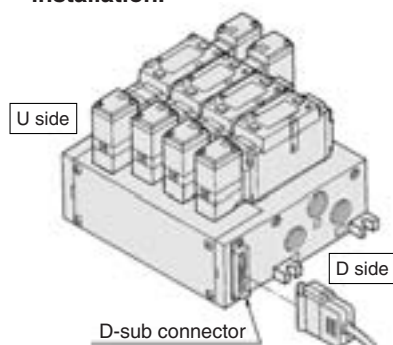

VV5FR3-01F D-06 1-02

Series VFR3000 Manifold

Plug-in type with D-sub connector

Connector mounting direction

D	D side mounting
U	U side mounting

Stations

02	2 stations
08	8 stations
10	10 stations

* Max: 8 stations

Symbol

Symbol	Passage	Porting specifications (A, B)
1	Common	Common
2	Common	Common

* Option

Port size

Symbol	P, EA, EB	A, B *
02	1/2	1/4
03		3/8
C8		One-touch fitting for ø8
C10		One-touch fitting for ø10
M		Mixed

* For bottom ported: Rc 1/4, 3/8 only.

Thread type


Nil	Rc
Nil	—
F	G
N	NPT
T	NPTF

CE-compliant

Nil	—
Q	CE-compliant

Non Plug-in Type: Grommet Terminal, DIN Terminal (Common electrical entry)

- Individual wiring for every valve

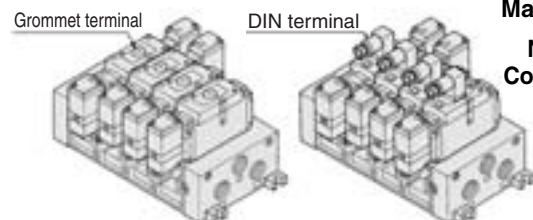

VV5FR3-10-05 1-02

Series VFR3000 Manifold

Non plug-in type Common electrical

Stations

02	2 stations
10	10 stations

Symbol

Symbol	Passage	Porting specifications (A, B)
1	Common	Common
2	Common	Common

* Option

Port size

Symbol	P, EA, EB	A, B *
02	1/2	1/4
03		3/8
C8		One-touch fitting for ø8
C10		One-touch fitting for ø10
M		Mixed

* For bottom ported: Rc 1/4, 3/8 only.

Thread type


Nil	Rc
Nil	—
F	G
N	NPT
T	NPTF

CE-compliant

Nil	—
Q	CE-compliant

Non Plug-in Type: Grommet, Grommet Terminal, Conduit Terminal, DIN Terminal (Individual electrical entry)

- Individual wiring for every valve

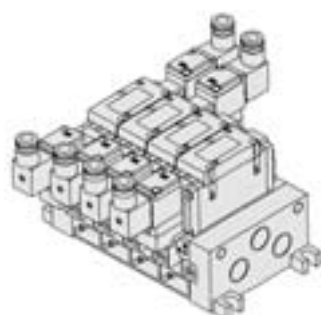

VV5FR3-40-05 1-02

Series VFR3000 Manifold

Non plug-in type Individual electrical entry

Stations

02	2 stations
10	10 stations

Symbol

Symbol	Passage	Porting specifications (A, B)
1	Common	Common
2	Common	Common

* Option

Port size

Symbol	P, EA, EB	A, B *
02	1/2	1/4
03		3/8
C8		One-touch fitting for ø8
C10		One-touch fitting for ø10
M		Mixed

* For bottom ported: Rc 1/4, 3/8 only.

Thread type

Nil	Rc
Nil	—
F	G
N	NPT
T	NPTF

CE-compliant

Nil	—
Q	CE-compliant

Note) Manifold base is in common with "VV5FR3-10".

Note) Manifold base is in common with Series VFS3000.

5 Port Pilot Operated Solenoid Valve Rubber Seal, Plug-in/Non Plug-in *Series VFR3000*

Manifold/Option Parts Assembly

Individual SUP spacer

Setting individual SUP spacer on the manifold block enables individual SUP port for each valve.


Body type	Plug-in type	Non plug-in type
Part no.	VVFS3000-P-03-1	VVFS3000-P-03-2



Individual EXH spacer

Setting individual EXH spacer on the manifold block enables individual EXH port for each valve.

Body type	Plug-in type	Non plug-in type
Part no.	VVFS3000-R-03-1	VVFS3000-R-03-2

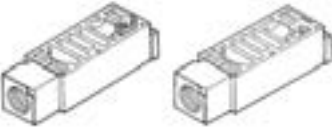

SUP block disk

When supplying manifold with more than two different pressures, high and low, insert a block disk in between stations subjected to different pressures.

Body type	Plug-in type	Non plug-in type
Part no.	AXT636-1A	

EXH block disk

When valve exhaust affects the other stations on the circuit, insert EXH block disk in between stations to separate valve exhaust.

Body type	Plug-in type	Non plug-in type
Part no.	AXT636-1A	




Throttle valve spacer

Needle valve set on the manifold block can control cylinder speed by throttling exhaust.

Body type	Plug-in type	Non plug-in type
Part no.	VVFS3000-20A-1	VVFS3000-20A-2

Shape

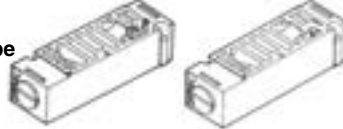


Interface regulator



Interface regulator set on the manifold block can regulate pressure for each valve. (Refer to "Flow Characteristics" on page 1324 before operation.)

Body type	Plug-in type	Non plug-in type
P port regulation	ARBF3050-00-P-1	ARBF3050-00-P-2
A port regulation	ARBF3050-00-A-1	ARBF3050-00-A-2
B port regulation	ARBF3050-00-B-1	ARBF3050-00-B-2

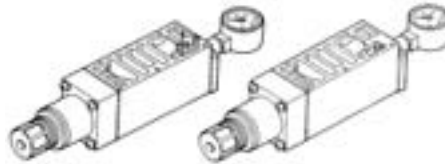

SUP stop valve spacer

If SUP stop valve spacer is set, valve can be removed for maintenance without stopping air pressure supply for other valves.

Body type	Plug-in type	Non plug-in type
Part no.	VVFS3000-37A-1	VVFS3000-37A-2



(Height will be 27.5 mm higher.)

Blanking plate

It is used by attaching on the manifold block for being prepared for removing a valve for maintenance reasons or planning to mount a spare valve, etc.

Body type	Plug-in type	Non plug-in type
Part no.	VVFS3000-10A	



* Mounting screws: 4 positions

Manifold Option

With exhaust cleaner

Plug-in type/Non plug-in type

- Valve exhaust noise dampening: 35 dB or more.
- Collects oil mist: collecting rate 99.9% or more
- Piping process reduced.



For details, refer to page 1266.

With control unit

Plug-in type/Non plug-in type

- Filter, regulation valve, pressure switch and air release valve are all combined to form one unit.
- Piping processes are eliminated.



For details, refer to page 1269.

SJ

SY

SV

SYJ

SZ

VP4

S0700

VQ

VQ4

VQ5

VQC

VQZ

SQ

VFS


VFR

VQ7

Series VFR3000

Manifold: Plug-in Type


With terminal block: VV5FR3-01T-Station 1-Port size

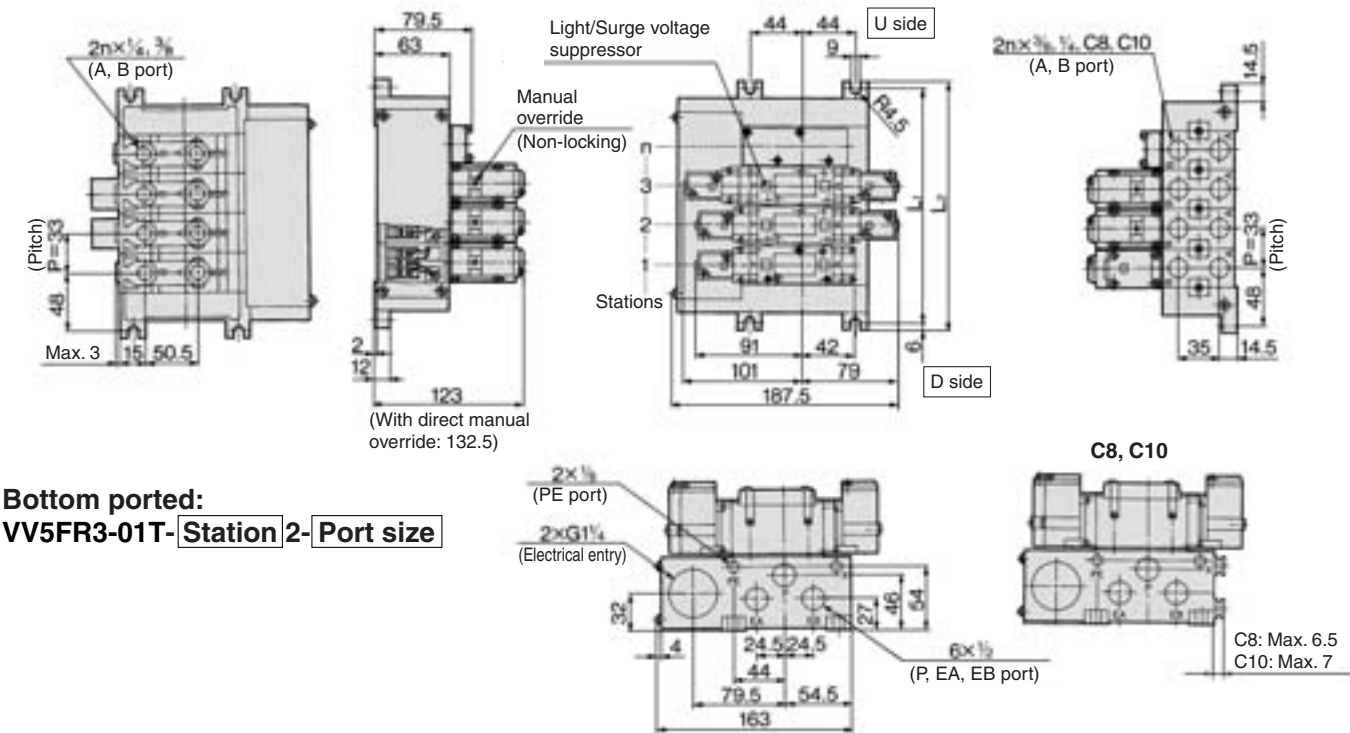

Bottom ported:
VV5FR3-01T-Station 2-Port size

n: Station									
Stations	2	3	4	5	6	7	8	9	10
L ₁	129	162	195	228	261	294	327	360	393
L ₂	141	174	207	240	273	306	339	372	405
Formula									
L ₁ = 33 x n + 63									
L ₂ = 33 x n + 75									

With multi-connector: VV5FR3-01CD-Station 1-Port size, VV5FR3-01CU-Station 1-Port size

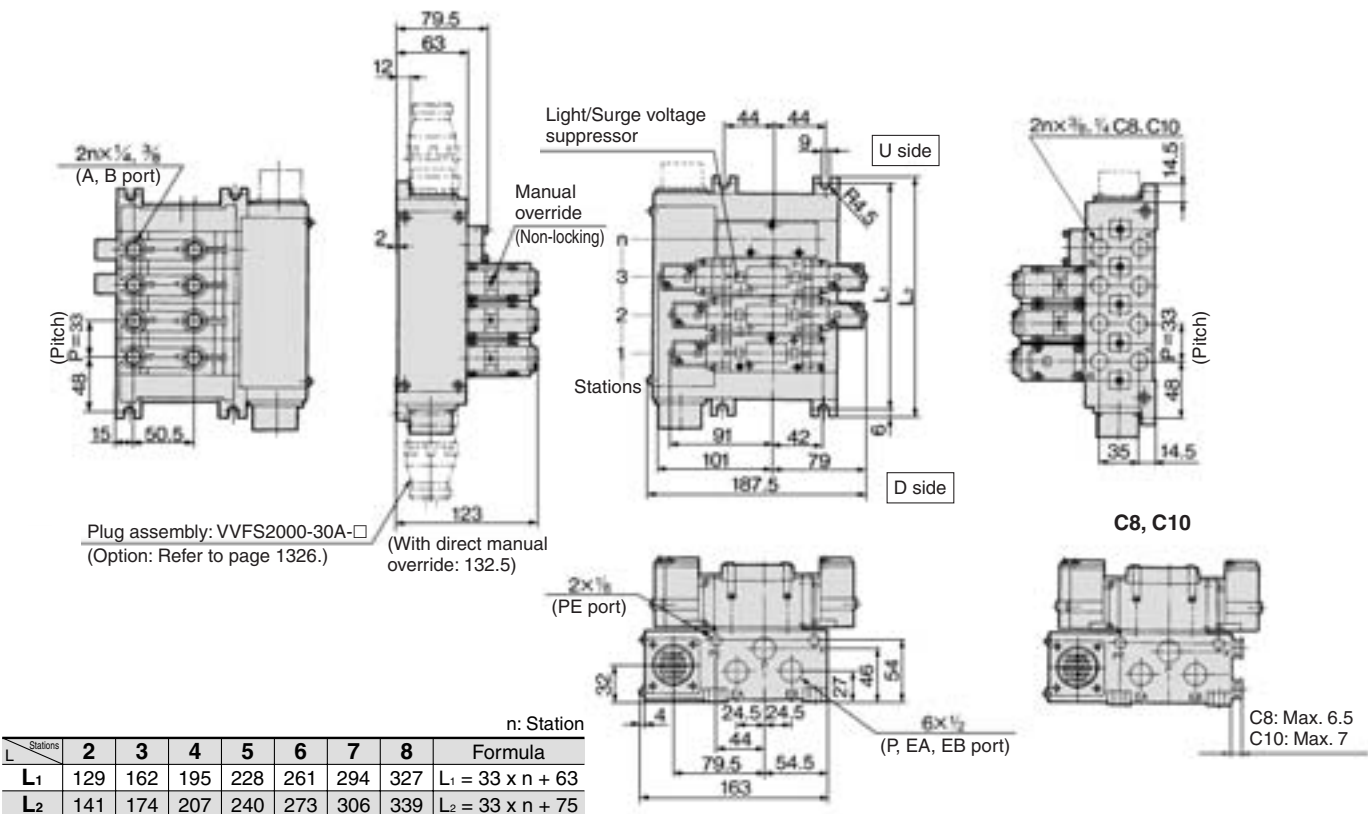


n: Station									
Stations	2	3	4	5	6	7	8	Formula	
L ₁	129	162	195	228	261	294	327	L ₁ = 33 x n + 63	
L ₂	141	174	207	240	273	306	339	L ₂ = 33 x n + 75	

5 Port Pilot Operated Solenoid Valve Rubber Seal, Plug-in/Non Plug-in **Series VFR3000**


Manifold: Plug-in Type

With D-sub connector: VV5FR3-01FD-Station 1-Port size, VV5FR3-01FU-Station 1-Port size

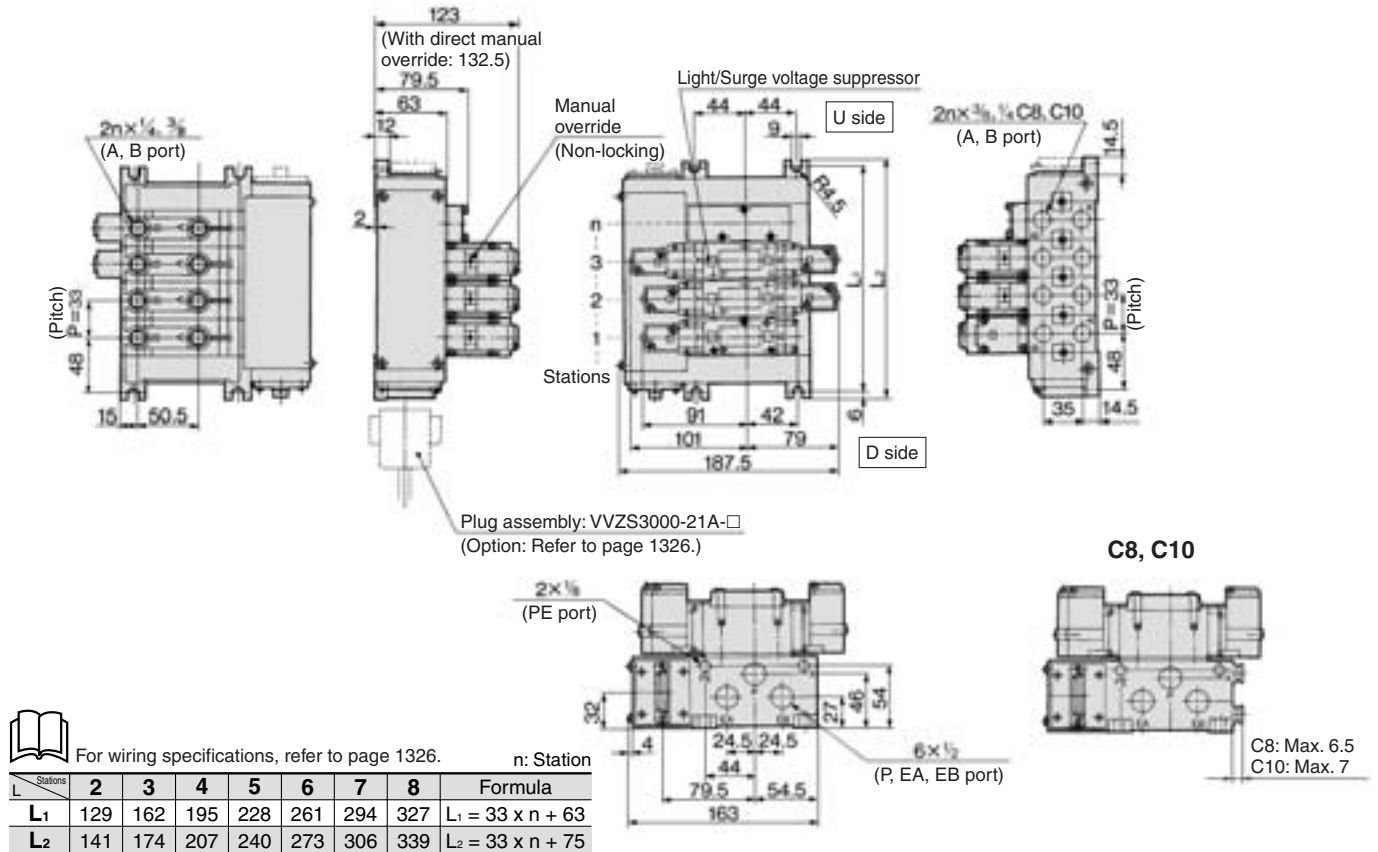


Manifold: Non Plug-in Type

VV5FR3-10-Station 1-Port size

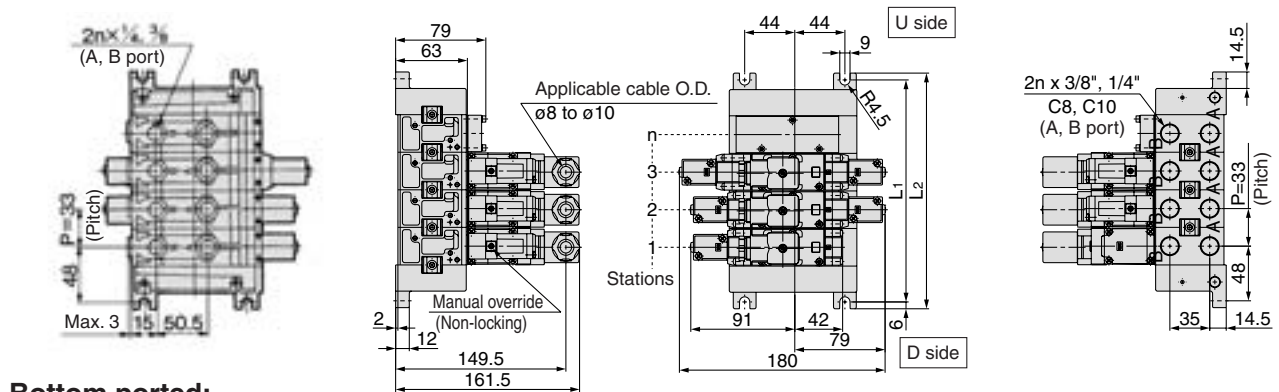

Bottom ported:




VV5FR3-10-Station 2-Port size

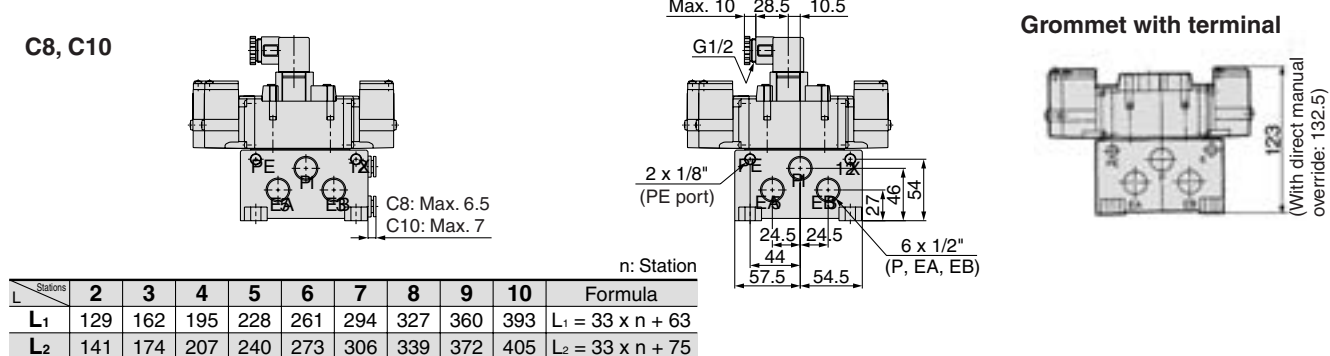

Stations	2	3	4	5	6	7	8	9	10	Formula
L ₁	129	162	195	228	261	294	327	360	393	L ₁ = 33 x n + 63
L ₂	141	174	207	240	273	306	339	372	405	L ₂ = 33 x n + 75

Manifold: Plug-in Type

G: Grommet

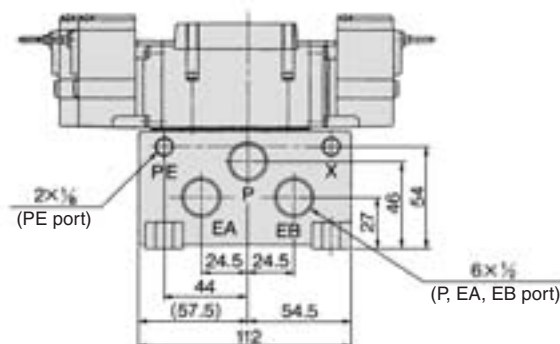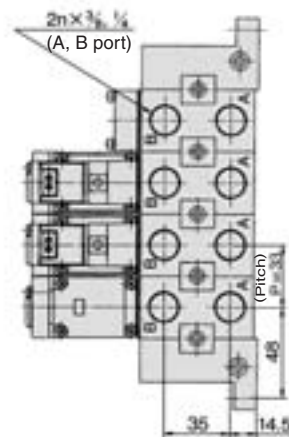
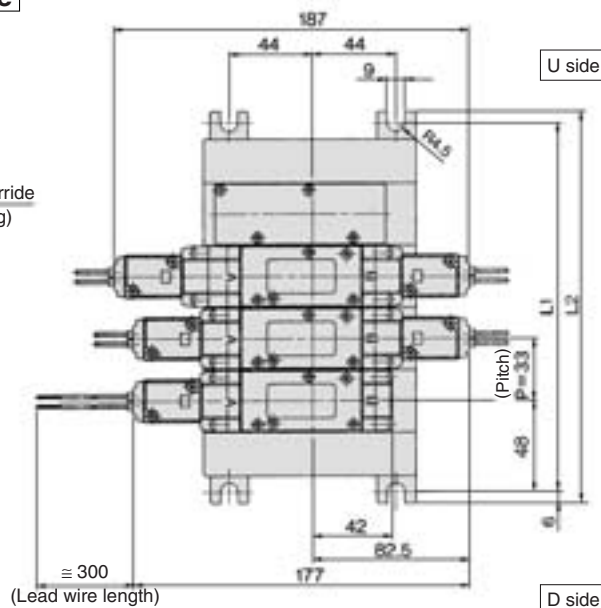


n: Station





Stations	2	3	4	5	6	7	8	9	10	Formula
L ₁	129	162	195	228	261	294	327	360	393	L ₁ = 33 x n + 63
L ₂	141	174	207	240	273	306	339	372	405	L ₂ = 33 x n + 75



T: Conduit terminal

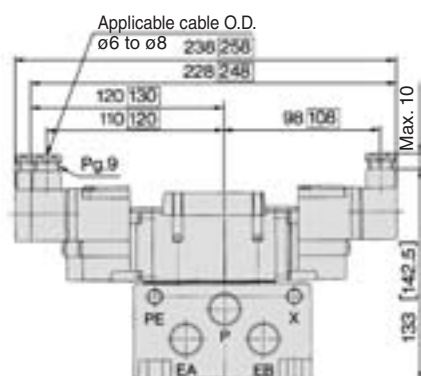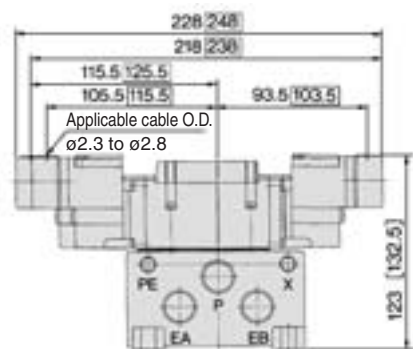

D, Y: DIN terminal

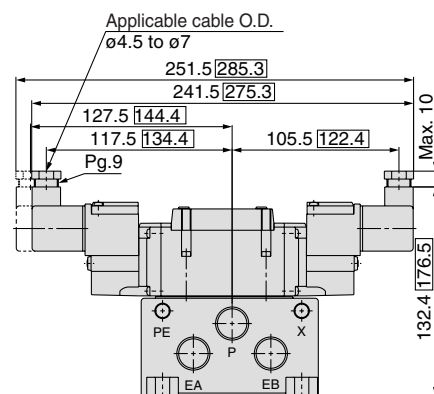


Manifold/Option Parts Assembly: Plug-in Type/Non Plug-in Type

Individual SUP spacer:

VVFS3000-P-03-1 (Plug-in type)


VVFS3000-P-03-2 (Non plug-in type)

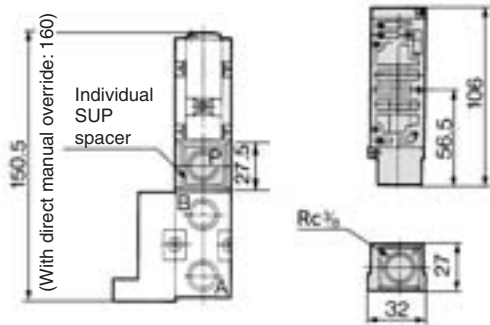


Individual EXH spacer:

VVFS3000-R-03-1 (Plug-in type)

VVFS3000-R-03-2 (Non plug-in type)

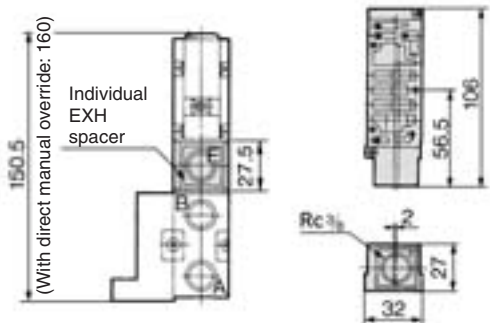

SUP/EXH block disk: AXT636-1A

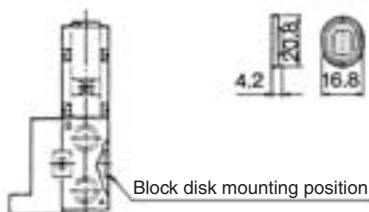


Note) Used with exclusive manifold block

Throttle valve spacer:

VVFS3000-20A-1 (Plug-in type)


VVFS3000-20A-2 (Non plug-in type)

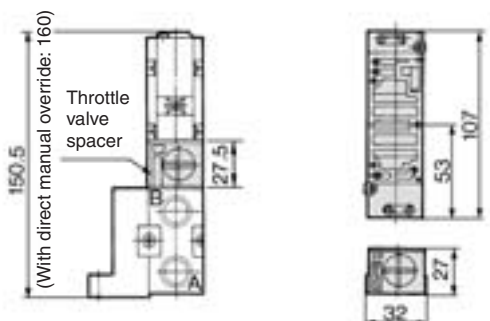

Interface regulator/P port regulation:

ARBF3050-00-P-1 (Plug-in type)


ARBF3050-00-P-2 (Non plug-in type)

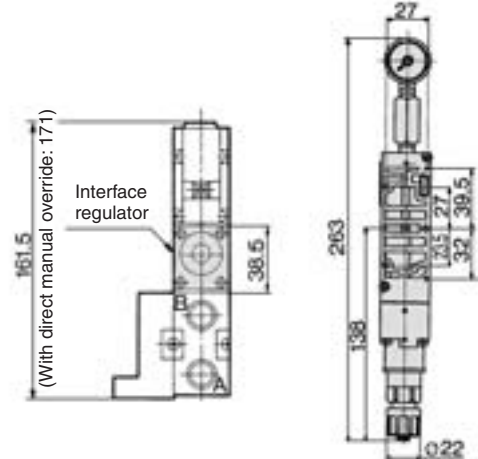

Interface regulator/A port regulation:

ARBF3050-00-A-1 (Plug-in type)


ARBF3050-00-A-2 (Non plug-in type)

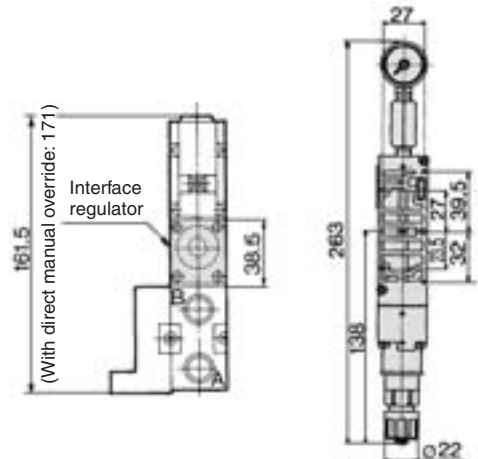

Interface regulator/B port regulation:

ARBF3050-00-B-1 (Plug-in type)



ARBF3050-00-B-2 (Non plug-in type)

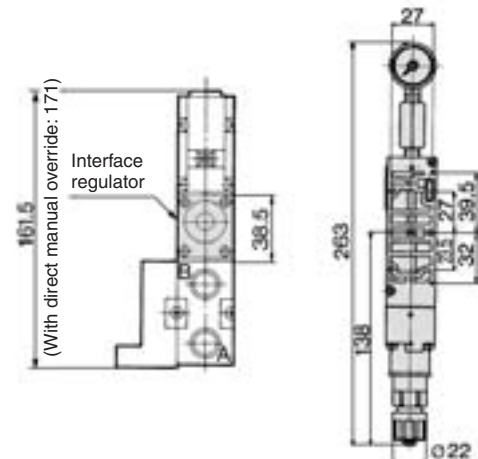

SJ
SY
SV
SYJ
SZ
VP4
S0700
VQ
VQ4
VQ5
VQC
VQZ
SQ
VFS
VFR
VQ7

Manifold with Exhaust Cleaner

- Serves to protect working environment.
- Valve exhaust noise dampening: 35 dB or more.
- Collection rate of drainage and oil mist: 99.9% or more
- Piping work is reduced.

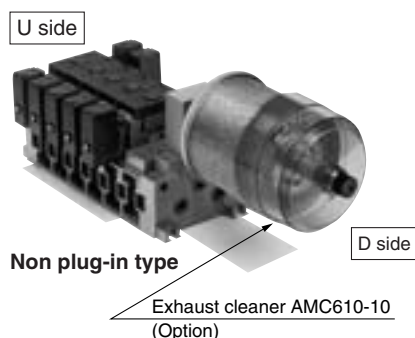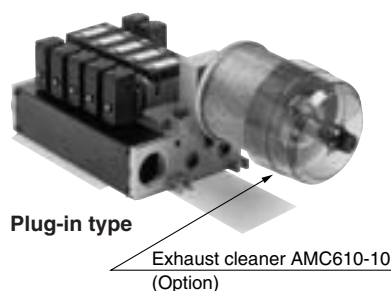

Manifold Specifications

Manifold	Plug-in type: VV5FR3-01□(-Q)	Non plug-in type: VV5FR3-10(-Q)	Non plug-in type: VV5FR3-40(-Q)
Wiring	With terminal block With multi-connector With D-sub connector	DIN terminal Grommet terminal	Grommet, Grommet terminal Conduit terminal, DIN terminal
Applicable valve model	VFR3□0□-□F(-Q)	VFR3□1□-□D(-Q) VFR3□1□-□E	VFR3□4□-□G, VFR3□4□-□E VFR3□4□-□T, VFR3□4□-□D(-Q)
Porting specifications	Common SUP, Common EXH		
Rc	A, B port	Side: Rc 1/4, 3/8, C8, C10 Bottom: Rc 1/4, 3/8 (Option)	
Stations	P port	Side: Rc 1/2 EXH port: Rc 1	
Applicable exhaust cleaners	2 to 10 stations (With multi-connector/D-sub connector: 2 to 8 stations)		
	AMC610-10 (Port size: R1) ^{Note)}		

Note) Exhaust cleaner "AMC610-10" is not included.

How to Order

VV5FR3 - 10 - 06 1 - 03 - CD -

Series VFR3000 Manifold

Base type/ Electrical entry

01T	Plug-in type with terminal block
01C	Plug-in type with multi-connector
01F	Plug-in type with D-sub connector
10	Non plug-in type Common electrical entry
40	Non plug-in type Individual electrical entry

Connector mounting direction

Symbol	With connector	Applicable base
Nil	None	01T, 10, 40
D	D side mounting	01C, 01F
U	U side mounting	

Thread type

Nil	Rc
F	G
N	NPT
T	NPTF

CE-compliant

Nil	—
Q	CE-compliant

Exhaust cleaner mounting direction

Symbol	Exhaust cleaner mounting direction
CD	D side D side mounting
CU	U side U side mounting

Port size

Symbol	P, EA, EB	A, B *
02		1/4
03		3/8
C8	1/2	One-touch fitting for ø8
C10		One-touch fitting for ø10
M		Mixed

* For bottom ported: Rc 1/4, 3/8

Stations

02	2 stations
...	...
10 (Note)	10 stations

Note) • Base 01T/10/40: 2 to 10 stations
• Base 01C/01F: 2 to 8 stations

Symbol

Symbol	Passage	Porting specifications (A, B)
	P	EA, EB
1	Common	Common
2		Side Bottom *

* Option

How to Order Manifold Assembly

<Example> Plug-in type with terminal block (6 stations)

VV5FR3-01T-061-03-CD	1 set (Manifold base part no.)
*VFR3100-5FZ	3 sets (2 position single part no.)
*VFR3200-5FZ	2 sets (2 position double part no.)
*VVFS3000-10A	1 set (Blanking plate assembly part no.)
*AMC610-10	1 set (Exhaust cleaner part no.)

→ The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

Valve arrangement is counted from the D side.
When ordering, specify the part nos. in order from the 1st. station in the D side.
When entry of part numbers becomes complicated, indicate on the manifold specification sheet.

Caution

When using an exhaust cleaner, mount it downwards.

<Example> Non plug-in type: 6 stations

VV5FR3-10-061-03-CU	1 set (Manifold base part no.)
*VFR3110-5E	3 sets (2 position single part no.)
*VFR3210-5E	2 sets (2 position double part no.)
*VVFS3000-10A	1 set (Blanking plate assembly part no.)
*AMC610-10	1 set (Exhaust cleaner part no.)

→ The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.




Valve arrangement is counted from the D side.
When ordering, specify the part nos. in order from the 1st. station in the D side.
When entry of part numbers becomes complicated, indicate on the manifold specification sheet.



Refer to Best Pneumatics No. 6 for Exhaust Cleaner details.

Series VFR3000


Plug-in type: VV5FR3-01T-**Station** 1-**Port size**-^{CD}_{CU}

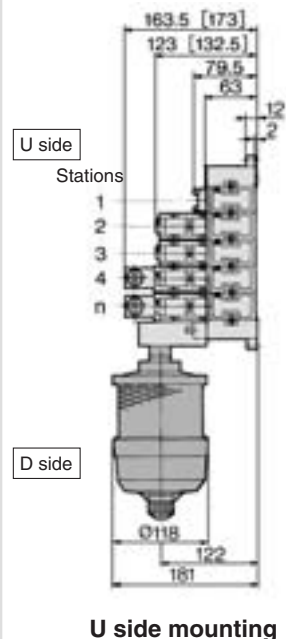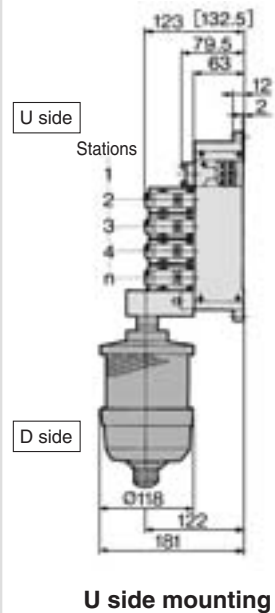n: Station

Series VFR3000

Manifold with Exhaust Cleaner: Non Plug-in Type

Non plug-in type: VV5FR3-40-Station 1-Port size -CU

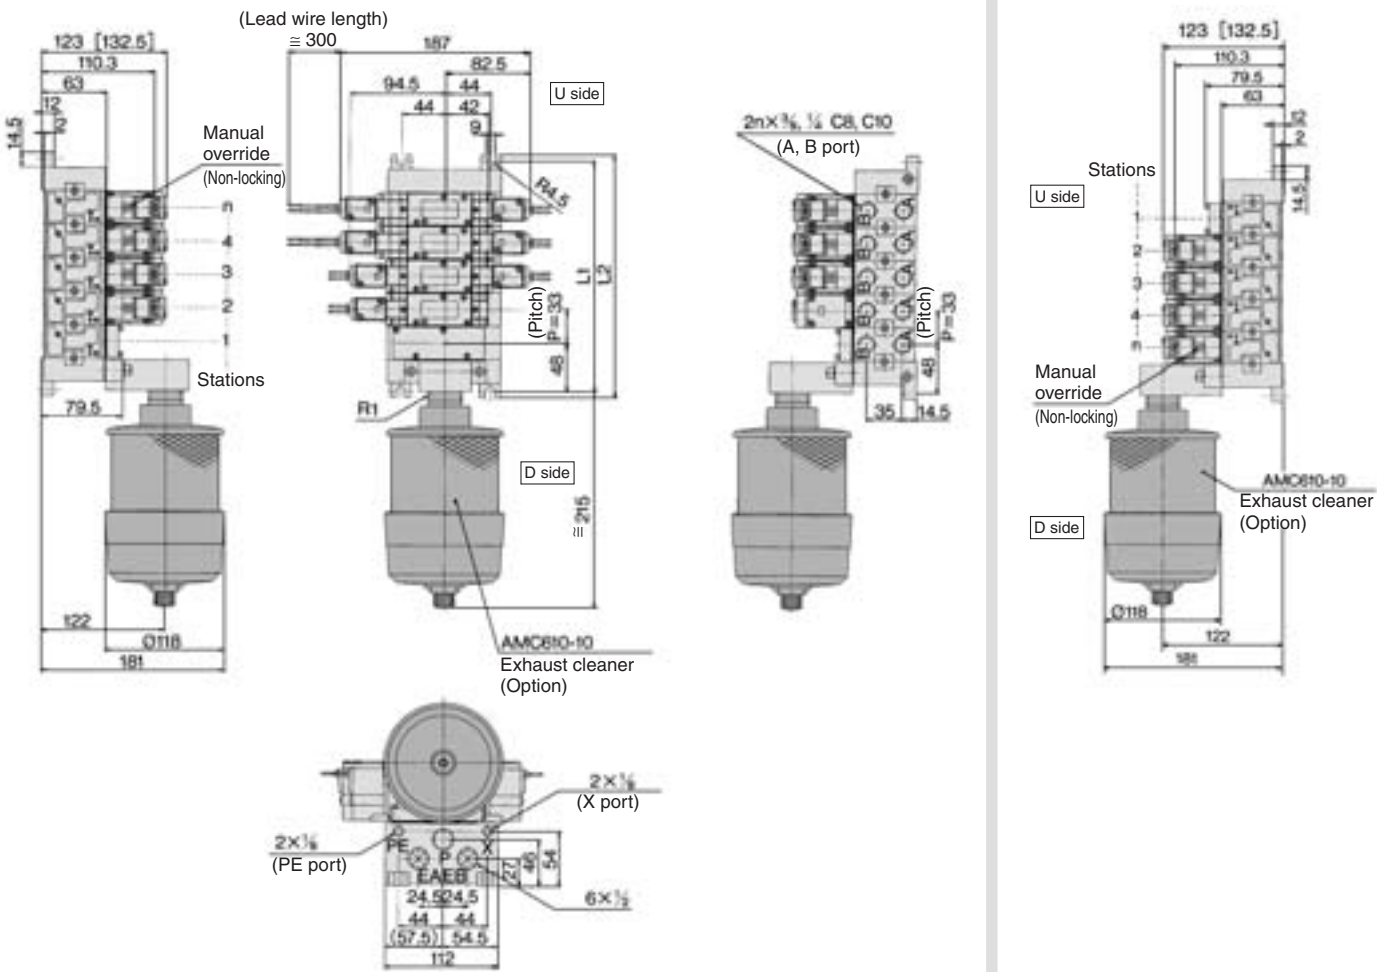


 []: With direct manual override

n: Station										
Stations	2	3	4	5	6	7	8	9	10	Formula
L ₁	129	162	195	228	261	294	327	360	393	L ₁ = 33 x n + 63
L ₂	141	174	207	240	273	306	339	372	405	L ₂ = 33 x n + 75

Manifold with Control Unit

- Control unit (Filter, Regulator, Pressure switch, Air release valve) are all standardized to the one unit, and can be mounted on the manifold base without any attachments.
- Piping processes are eliminated.

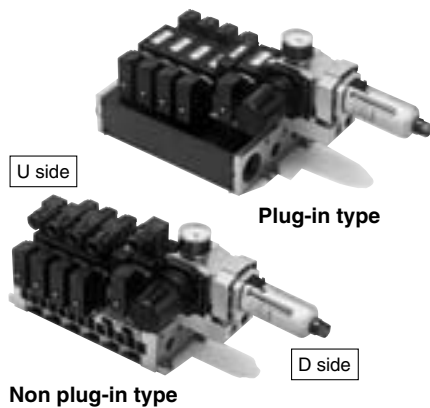

Caution

Air filter with auto-drain or manual drain must be mounted with the air filter at the bottom.

Manifold Specifications

Manifold	Plug-in type: VV5FR3-01□(-Q)	Non plug-in type: VV5FR3-10(-Q)	Non plug-in type: VV5FR3-40(-Q)
Wiring	With terminal block With multi-connector With D-sub connector	DIN terminal Grommet terminal	Grommet, Grommet terminal Conduit terminal, DIN terminal
Applicable valve model	VFR3□0□-□F(-Q)	VFR3□1□-□D(-Q) VFR3□1□-□E	VFR3□4□-□G, VFR3□4□-□E VFR3□4□-□T, VFR3□4□-□Y (-Q)
Porting specifications	Common SUP, Common EXH		
	A, B port	Side: Rc 1/4, 3/8, C8, C10 Bottom: Rc 1/4, 3/8 (Option)	
	P, EA, EB port	Side: Rc 1/2	
Stations	2 to 10 (With multi-connector/D-sub connector: 2 to 8) *		



* Including station of control unit

Control Unit Specifications

Air filter (With auto-drain/With manual drain)	
Filtration degree	5 μm
Regulator	
Set pressure (Outlet pressure)	0.05 to 0.85 MPa
Pressure switch	
Set pressure range: OFF	0.1 to 0.6 MPa
Differential	0.08 MPa
Contact	1a
Indicator light	LED (RED)
Max. switch capacity	2 VA AC, 2 W DC
Max. operating current	24 VAC, DC or less: 50 mA 100 VAC, DC: 20 mA
Inside voltage drop	4 V or less
Air release valve (Single only)	
Operating pressure range	0.2 to 0.9 MPa

Control Unit/Option

Air release valve spacer ⁽¹⁾	<Plug-in type> VVFS3000-24A-1R (D side mounting)	
	<Non plug-in type> VVFS3000-24A-2R (D side mounting)	
Pressure switch ⁽²⁾	IS1000P-2-1	
Blanking plate	For filter regulator	MP2-3
	For pressure switch	MP3-2
	For air release valve	VVFS3000-24A-10
Filter element	INA-13-854-12-5B	



Note 1) Combining valve "VFR31□□" (single) and release valve spacer makes it possible to use this as an air release valve.

Note 2) Pressure switch cannot be mounted later on non plug-in type.

SJ
SY
SV
SYJ
SZ
VP4
S0700
VQ
VQ4
VQ5
VQC
VQZ
SQ
VFS
VFR
VQ7

Series VFR3000

How to Order

VV5FR3 - 10 - 08 1 - 02 - AP -

Series VFR3000 Manifold

Base type/Electrical entry

01T	Plug-in with terminal block
01C	Plug-in with multi-connector
01F	Plug-in type with D-sub connector
10	Non plug-in type (Common entry)
40	Non plug-in type (Individual entry)

Connector mounting direction

Symbol	With connector	Applicable base
Nil	None	01T, 10, 40
D	D side mounting	01C, 01F
U	U side mounting	01C, 01F

Stations

02	2 stations
⋮	⋮
10 ^{Note}	10 stations

Note) • Base 01T/10/40: 2 to 10 stations
• Base 01C/01F: 2 to 8 stations
• Including stations of control unit.

Symbol

Symbol	Passage		Porting specifications (A, B)
	P	EA, EB	
1	Common	Common	Side
2			Bottom *

* Option

Port size

Symbol	P, EA, EB	A, B *
02	1/2	1/4
03		3/8
C8		One-touch fitting for ø8
C10		One-touch fitting for ø10
M		Mixed

* For bottom ported: only 1/4, 3/8

CE-compliant

Nil	—
Q	CE-compliant

Control unit type

Nil	None
1	100 VAC, 50/60 Hz
5	24 VDC
9	Other

Control unit type

Symbol	Nil	MP	AP	M	A	G	F	C	E
Control equipment									
Air release valve		●	●	●	●			●	●
Air filter regulator with manual drain		●		●		●			
Air filter regulator with auto-drain			●		●		●		
Pressure switch		●	●						
Blanking plate (Air release valve)						●	●		
Blanking plate (Filter regulator)								●	
Blanking plate (Pressure switch)				●	●	●	●	●	
Required stations		2 stations							1 station

Note) Control unit is D side mounting only.

Thread type

Nil	Rc
F	G
N	NPT
T	NPTF

How to Order Manifold Assembly

<Example> Plug-in type with terminal block

VV5FR3-01T-081-03-AP5 1 set (Manifold base part no.)
 *VFR3100-5FZ 4 sets (2 position single part no.)
 *VFR3200-5FZ 2 sets (2 position double part no.)

→ The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

The 1st and 2nd station are used for control unit mounting.
 When ordering, specify the part nos. in order from the 3rd. station in the D side.
 When entry of part numbers becomes complicated, indicate on the manifold specification sheet.

<Example> Non plug-in type

VV5FR3-10-061-03-A5 1 set (Manifold base part no.)
 *VFR3110-5D 4 sets (2 position single part no.)

→ The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.


The 1st and 2nd station are used for control unit mounting.
 When ordering, specify the part nos. in order from the 3rd. station in the D side.
 When entry of part numbers becomes complicated, indicate on the manifold specification sheet.

5 Port Pilot Operated Solenoid Valve Rubber Seal, Plug-in/Non Plug-in *Series VFR3000*


Manifold with Control Unit: Plug-in Type/Non Plug-in Type

Plug-in type:

VV5FR3-01T- Station 1- Port size -AP Voltage of air release valve

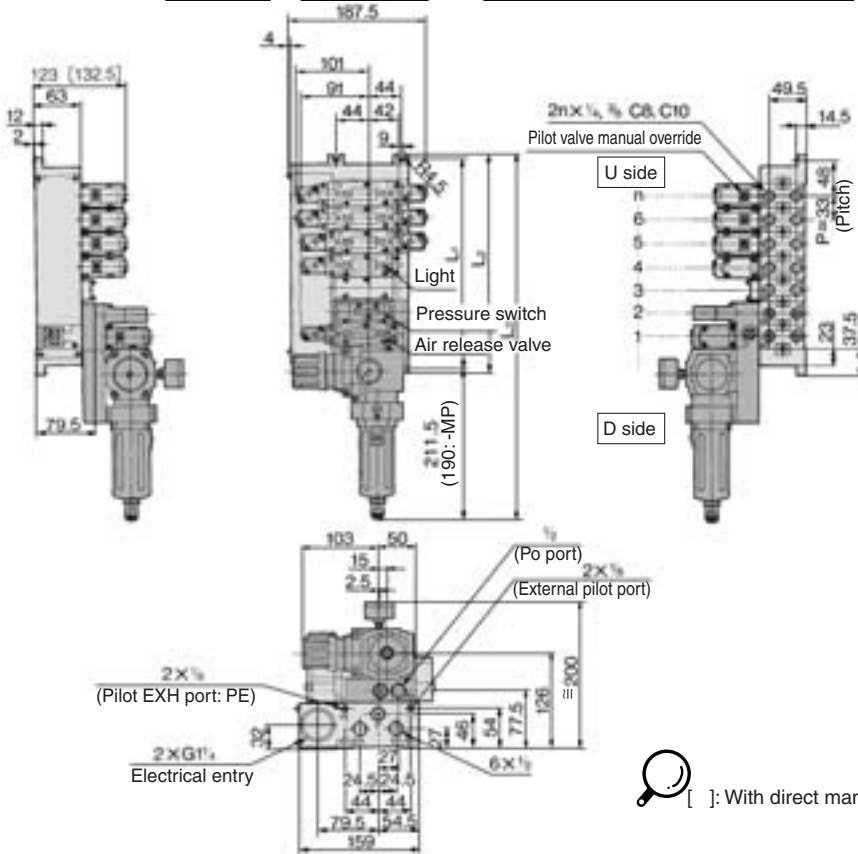


Example for manifold

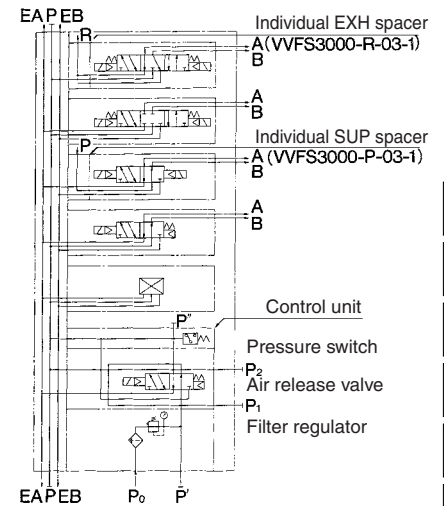


Non plug-in type:

VV5FR3-10- Station 1- Port size -AP Voltage of air release valve

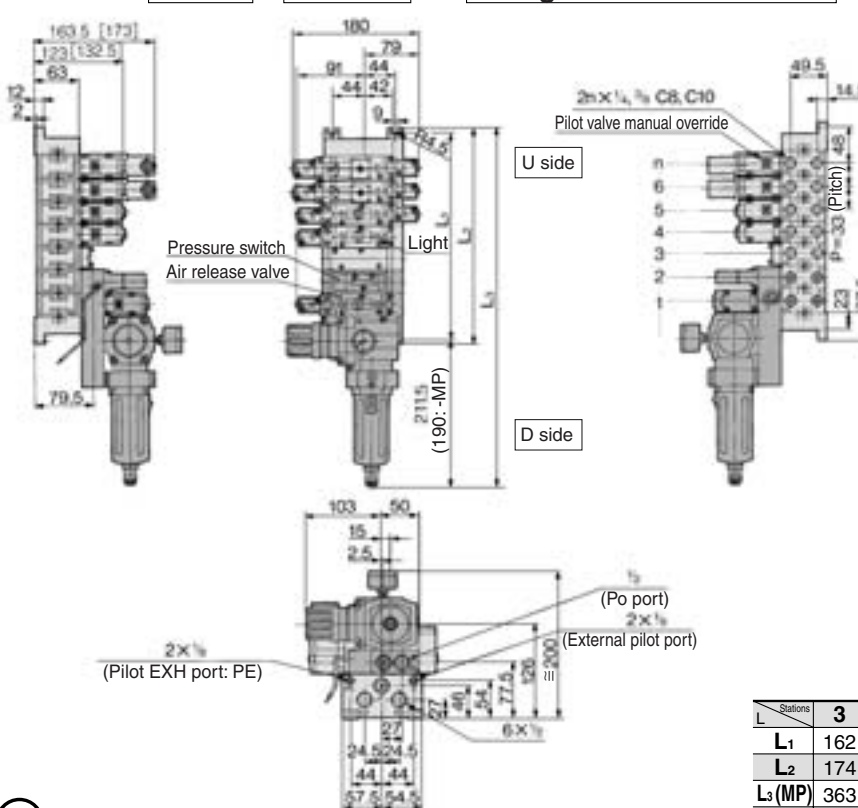

Example for manifold

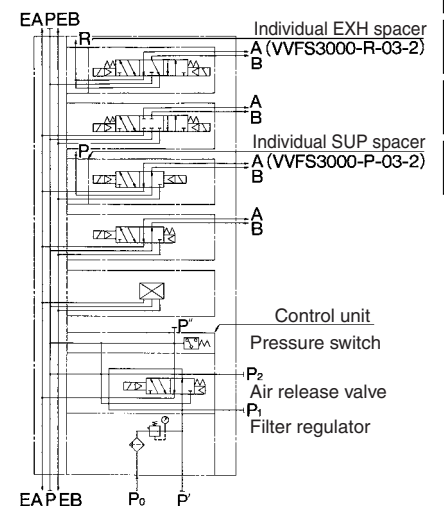


: With direct manual override

n: Station										Formula	
Station	3	4	5	6	7	8	9	10		L ₁	L ₁ = 33 x n + 63
L ₁	162	195	228	261	294	327	360	393		L ₂	L ₂ = 33 x n + 75
L ₂	174	207	240	273	306	339	372	405		L ₃ (MP)	L ₃ = 33 x n + 264
L ₃ (MP)	363	396	429	462	495	528	561	594		L ₃ (AP)	L ₃ = 33 x n + 285.5
L ₃ (AP)	384.5	417.5	450.5	483.5	516.5	549.5	582.5	615.5			

Series **VFR3000**

Manifold with Control Unit: Non Plug-in Type

Non plug-in type: VV5FR3-40-Station1-Port size-AP Voltage of air release valve

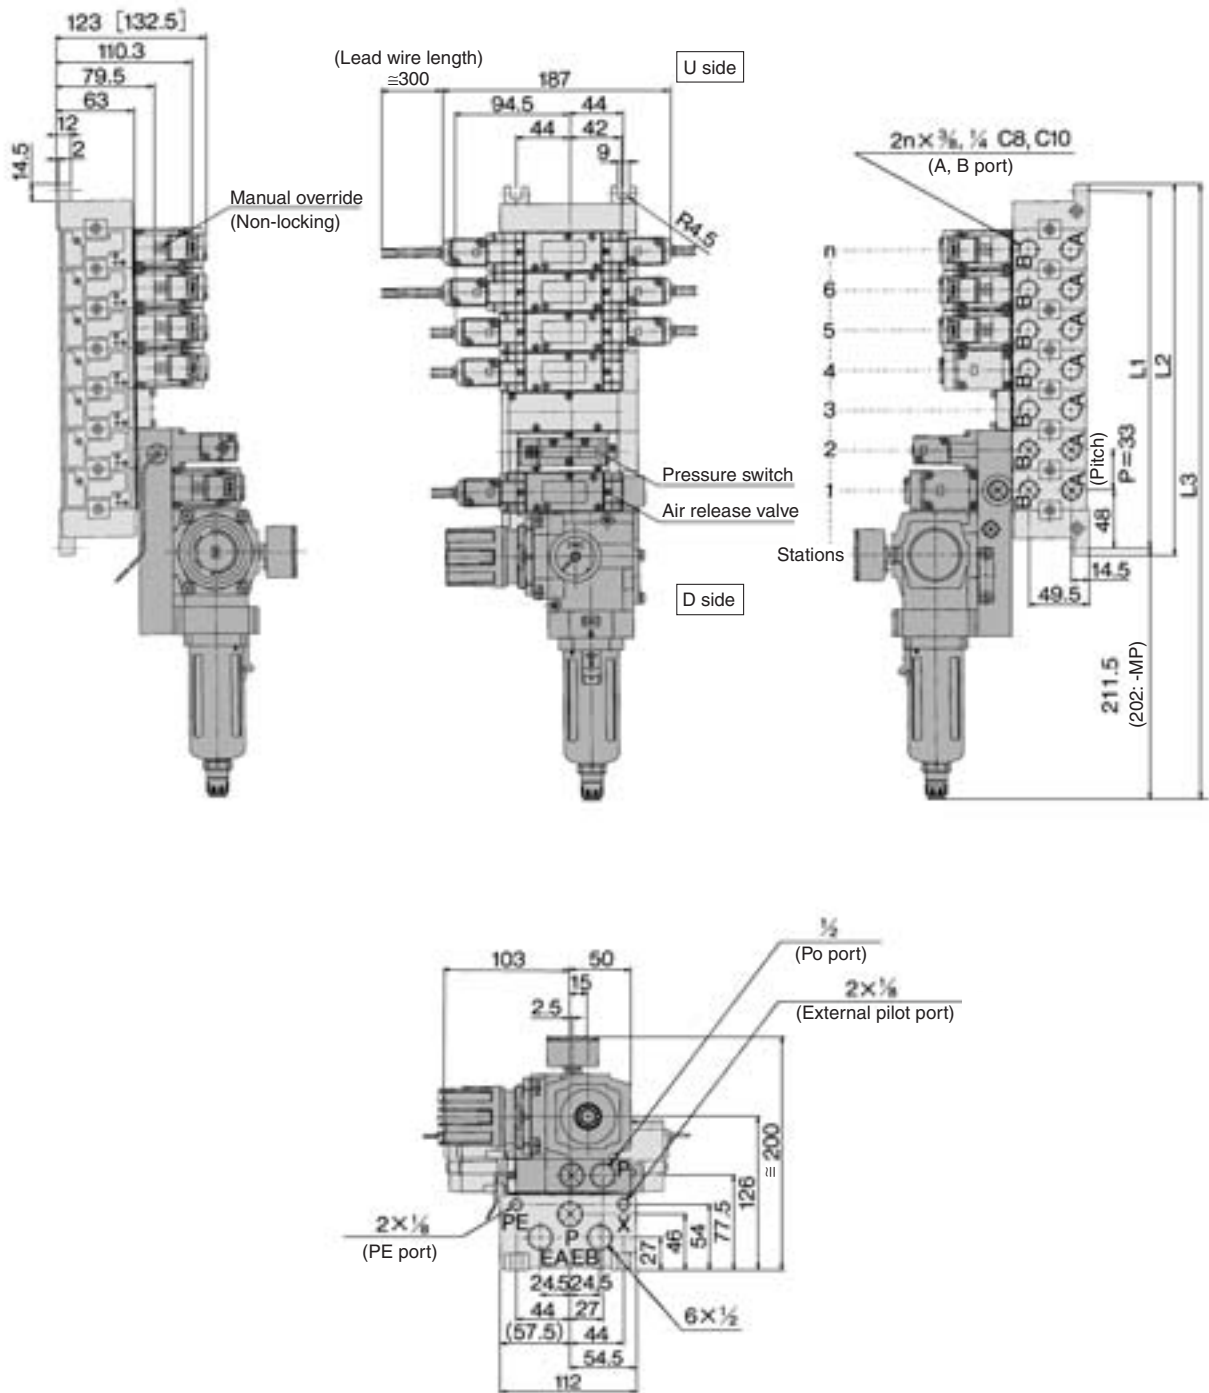


 []: With direct manual override

 (): MP

n: Station										
Stations	3	4	5	6	7	8	9	10		Formula
L ₁	162	195	228	261	294	327	360	393	L ₁	$L_1 = 33 \times n + 63$
L ₂	174	207	240	273	306	339	372	405	L ₂	$L_2 = 33 \times n + 75$
L ₃ (MP)	363	396	429	462	495	528	561	594	L ₃	$L_3 = 33 \times n + 264$
L ₃ (AP)	384.5	417.5	450.5	483.5	516.5	549.5	582.5	615.5	L ₃	$L_3 = 33 \times n + 285.5$

Manifold Base Construction: Plug-in Type/Non Plug-in Type

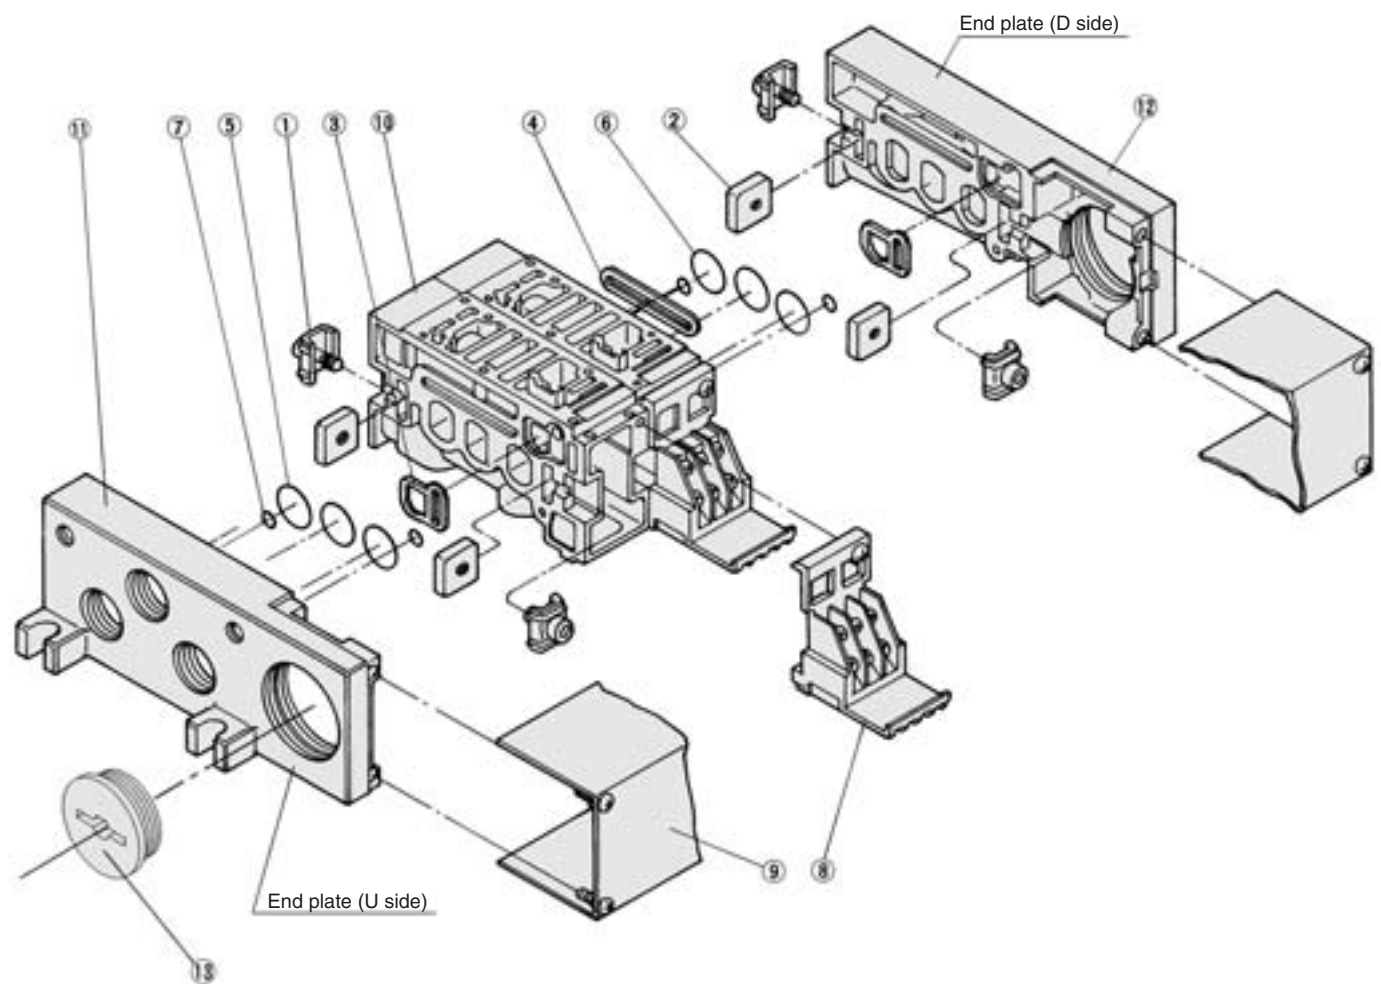

Replacement Parts

No.	Description	Material	Part no.
1	Connection fitting A	Steel	VVFS3000-5-1A
2	Connection fitting B	Steel	VVFS3000-5-2
3	Gasket	NBR	VVFS3000-7-1
4	Gasket	NBR	VVFS3000-8
5	O-ring	NBR	19.8 x 16.6 x 1.6 (for end plate)
6	O-ring	NBR	20 x 16 x 2 (for manifold block)
7	O-ring	NBR	6.2 x 3 x 1.6
8	Terminal assembly	—	VVFS3000-6A
9	Junction cover assembly	—	For 01T VVFS3000-4A- Stations
13	Rubber plug	NBR	AXT336-9

Replacement Parts: Sub Assembl

No.	Description	Assembly part no.	Component parts	Applicable manifold base
10	Manifold block assembly Note)	VVFS3000-1A-1 02 C03 C10	Manifold block ⑩, Terminal ⑧, Connection bracket ①, ②, Gasket ③, ④, O-ring ⑥, ⑦, Receptacle assembly	Plug-in type
		VVFS3000-1A-2 02 C03 C10	Manifold block ⑨, Connection bracket ①, ②, Gasket ③, ④, O-ring ⑥, ⑦	Non plug-in type
11	End plate (U side) assembly	VVFS3000-2A-1	End plate (U) ⑪, Connection bracket ①, ②, Gasket ④, O-ring ⑤, ⑦	Plug-in type
		VVFS3000-2A-2	End plate (U) ⑪, Connection bracket ①, ②, Gasket ④, O-ring ⑤, ⑦	Non plug-in type
12	End plate (D side) assembly	VVFS3000-3A-1	End plate (D) ⑫, Connection bracket ①, ②, Gasket ③	Plug-in type
		VVFS3000-3A-2	End plate (D) ⑫, Connection bracket ①, ②, Gasket	Non plug-in type

 Note) For side ported

* Contact SMC for CE-compliant products.

 Note) Manifold Base/Construction: Plug-in type with terminal block.

SJ
SY
SV
SYJ
SZ
VP4
S0700
VQ
VQ4
VQ5
VQC
VQZ
SQ
VFS
VFR
VQ7

5 Port Pilot Operated Solenoid Valve

Rubber Seal, Plug-in/Non Plug-in

Series VFR4000



Plug-in type



Non plug-in type

JIS Symbol

2 position	3 position
Single	Closed center
Double	Exhaust center
	Pressure center

Standard Specifications

Valve specifications	Fluid		Air
	Operating pressure range	2 position single/3 position	0.2 to 0.9 MPa
		2 position double	0.1 to 0.9 MPa
	Ambient and fluid temperature		-10 to 50°C (No freezing. Refer to page 5.)
	Lubrication		Non-lube ⁽¹⁾
	Manual override		Non-locking push type
	Mounting orientation		Unrestricted
Electricity specifications	Shock/Vibration resistance		300/50 m/s ² ⁽²⁾
	Enclosure		Dustproof
	Coil rated voltage		100, 200 VAC (50/60 Hz), 24 VDC
	Allowable voltage fluctuation		-15 to -10% of rated voltage
	Apparent power (AC) ⁽³⁾	Inrush	5.6 VA/50 Hz, 5.0 VA/60 Hz
		Holding	3.4 VA (2.1 W)/50 Hz, 2.3 VA (1.5 W)/60 Hz
	Power consumption (DC) ⁽³⁾		1.8 W
Electrical entry	Plug-in type		Conduit terminal
	Non plug-in type		Grommet, Grommet terminal, Conduit terminal, DIN terminal



Note 1) Use turbine oil Class 1 (ISO VG32), if lubricated.

Note 3) At rated voltage

Note 2) Impact resistance: No malfunction occurred when it is tested with a drop tester in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition. (Values at the initial period)

Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was performed at both energized and de-energized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)

Option Specifications

Pilot type		External pilot ^{Note)}
Manual override	Main valve	Direct manual override
	Pilot valve	Non-locking push type A (Extended), Locking type B (Tool required), Locking type C (Lever)
Coil rated voltage		110 to 120, 220, 240 VAC 50/60 Hz
Porting specifications		12 VDC
Option		Bottom ported
		With light/surge voltage suppressor



Note) Operating pressure: 2 position 0 to 0.9 MPa
3 position 0.15 to 0.9 MPa

Pilot pressure: 2 position single 0.2 to 0.9 MPa
2 position double 0.1 to 0.9 MPa
3 position 0.5 x P + 0.1 to 0.9 MPa
(P: Operating pressure)

Model

Type of actuation		Model		Port size ⁽¹⁾	Flow characteristics ⁽²⁾						Max. ⁽³⁾ operating cycle (Hz)	⁽⁴⁾ Response time (ms)	⁽⁵⁾ Mass (kg)
		Plug-in	Non plug-in		1 → 4/2 (P → A/B)			4/2 → 5/3 (A/B → EA/EB)					
					C [dm³/(s·bar)]	b	Cv	C [dm³/(s·bar)]	b	Cv			
2 position	Single	VFR410□	VFR411□	3/8	13	0.30	3.2	14	0.28	3.4	5	50 or less	1.10 (1.04) <1.04>
			VFR414□	1/2	15	0.30	3.8	14	0.30	3.8			
	Double	VFR420□	VFR421□	3/8	14	0.31	3.4	14	0.26	3.4	5	50 or less	1.20 (1.16) <1.16>
			VFR424□	1/2	15	0.30	4.0	14	0.30	3.7			
3 position	Closed center	VFR430□	VFR431□	3/8	13	0.32	3.2	13	0.25	3.0	3	50 or less	1.20 (1.16) <1.16>
			VFR434□	1/2	14	0.28	3.5	13	0.29	3.4			
	Exhaust center	VFR440□	VFR441□	3/8	13	0.31	3.2	14 [13]	0.32 [0.30]	3.6 [3.2]	3	70 or less	1.20 (1.16) <1.16>
			VFR444□	1/2	14	0.30	3.7	14 [13]	0.32 [0.30]	3.6 [3.2]			
	Pressure center	VFR450□	VFR451□	3/8	13 [5.0]	0.27 [0.42]	3.2 [1.3]	13	0.28	3.1	3	70 or less	1.20 (1.16) <1.16>
			VFR454□	1/2	15 [5.3]	0.22 [0.42]	3.7 [1.5]	13	0.28	3.3			



Note 1) EA, EB port: Rc 3/8

Note 2) []: Normal position

Note 3) Min. operating frequency is once in 30 days.

Note 4) Based on dynamic performance test, JIS B 8375-1981. (0.5 MPa, Coil temperature: 20°C, at rated voltage, without surge voltage suppressor)

Note 5) For VFR4□00-□FZ-□□, (): VFR4□10- DZ□-□□, < : VFR4□40-□G-□□

5 Port Pilot Operated Solenoid Valve Rubber Seal, Plug-in/Non Plug-in **Series VFR4000**

How to Order

Electrical entry
F: Plug-in type, conduit type

Option

Nil	None
Z	With light/surge voltage suppressor

Porting specifications (P, A, B, EA, EB port)

Nil	Side ported
B *	Bottom ported

* Option. no bottom piping for external pilot.

Port size (P, A and B port)

Nil	Without sub-plate
03	3/8
04 *	1/2

EA, EB port: Rc 3/8

Thread type

Nil	Rc
F	G
N	NPT
T	NPTF

CE-compliant

Nil	—
Q	CE-compliant *

* Electrical entry: D, Y and F only

Plug-in VFR4 0 0 - 5 F - 03 -

Non plug-in VFR4 1 1 - 1 D - 03 -

Non plug-in VFR4 4 0 - 1 G - 03 -

Common electrical entry

Individual electrical entry

Symbol

1	2 position single
2	2 position double
3	3 position closed center
4	3 position exhaust center
5	3 position pressure center

Body option

0	Standard
1 *	Direct manual override

* Option

Pilot type

Nil	Internal pilot
R *	External pilot

* Option

Coil rated voltage

1	100 VAC, 50/60 Hz
2	200 VAC, 50/60 Hz
3 *	110 V to 120 VAC, 50/60 Hz
4 *	220 VAC, 50/60 Hz
5	24 VDC
6 *	12 VDC
7 *	240 VAC, 50/60 Hz
9 *	Other

* Option

Option: VFR4□1□

Nil	None
Z	With light/surge voltage suppressor

Option: VFR4□4□

Nil	None
Z *	With light/surge voltage suppressor
S *	With surge voltage suppressor

* Indicator light (Z) is not available for grommet type. Surge voltage suppressor (S) is available only on grommet.

Electrical entry: VFR4□1□

E: Grommet terminal D: DIN terminal

Electrical entry: VFR4□4□

G: Grommet E: Grommet terminal T: Conduit terminal D, Y: DIN terminal

Pilot valve Manual override

Nil: Non-locking push type

A *: Non-locking push type A (Extended)

B *: Locking type B (Tool required)

C *: Locking type C (Lever)

* Option

How to Order Pilot Valve Assembly

SF4 - 1 F - 70 - -

Coil rated voltage

Symbol	Rated voltage
1	100 VAC, 50/60 Hz
2	200 VAC, 50/60 Hz
3 *	110 to 120 VAC, 50/60 Hz
4 *	220 VAC, 50/60 Hz
5	24 VDC
6 *	12 VDC
7 *	240 VAC, 50/60 Hz
9 *	Other

* Option

Electrical entry, Light/Surge voltage suppressor

Symbol	Electrical entry	Indicator light	With surge voltage suppressor	Applicable valve model
F *	Plug-in	—	—	VFR4□0□ VFR4□1□
G	Grommet	—	—	VFR4□4□
GS	Grommet	—	●	
E	Grommet terminal	—	—	
EZ	Grommet terminal	●	●	
T	Conduit terminal	—	—	
TZ	Conduit terminal	●	●	
D	DIN terminal	—	—	
DZ	DIN terminal	●	●	
Y	DIN terminal (DIN43650B type)	—	—	
YZ	DIN terminal (DIN43650B type)	●	●	

Manual override

Nil	Non-locking push type
A *	Non-locking push type A (Extended)
B *	Locking type B (Tool required)
C *	Locking type C (Lever)

* Option

CE-compliant

Nil	—
Q	CE-compliant *

* Electrical entry: D, Y and F only

Symbol


Symbol	Applicable valve model
Nil	VFR4□0□ VFR4□1□
1	VFR4□4□

* VFR4□0□, VFR4□1□: Pilot valve assembly is all plug-in (F).

Series VFR4000

Use as a guide for selection.
Please confirm the actual conditions with SMC
Sizing Program.

Cylinder Speed Chart

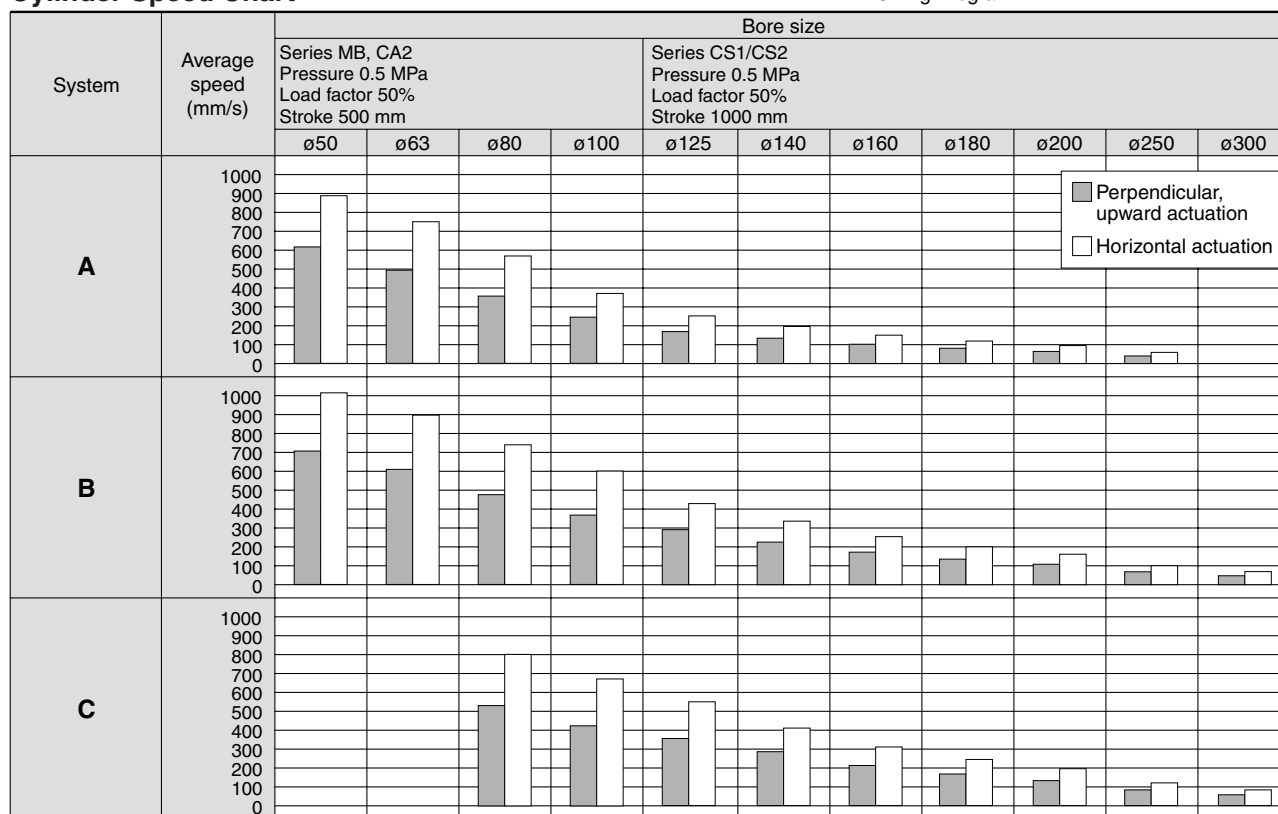

* It is when the cylinder is extending that is meter-out controlled by speed controller which is directly connected with cylinder, and its needle valve with being fully open.


* The average velocity of the cylinder is what the stroke is divided by the total stroke time.

* Load factor: ((Load weight x 9.8)/Theoretical force) x 100%

System Components

System	Solenoid valve	Speed controller	Silencer	SPG (Steel pipe) dia. x Length
A	Series VFR4000 Rc 3/8	AS4000-03 (S = 21mm ²)	AN300-03 (S = 60mm ²)	10A x 1 m
B	Series VFR4000 Rc 3/8	AS420-03 (S = 73mm ²)	AN300-03 (S = 60mm ²)	10A x 1 m
C	Series VFR4000 Rc 1/2	AS420-04 (S = 97mm ²)	AN400-04 (S = 90mm ²)	15A x 1 m

How to Order Sub-plate Assembly

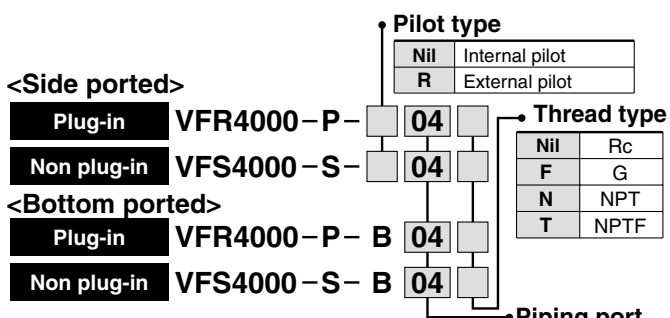

Note) • Bottom ported is not available for external pilot.
• Mounting bolts and gaskets are not included.


**Piping port
(P, A, B port)**

03	3/8
04	1/2

EA, EB port 3/8

5 Port Pilot Operated Solenoid Valve Rubber Seal, Plug-in/Non Plug-in *Series VFR4000*

Construction

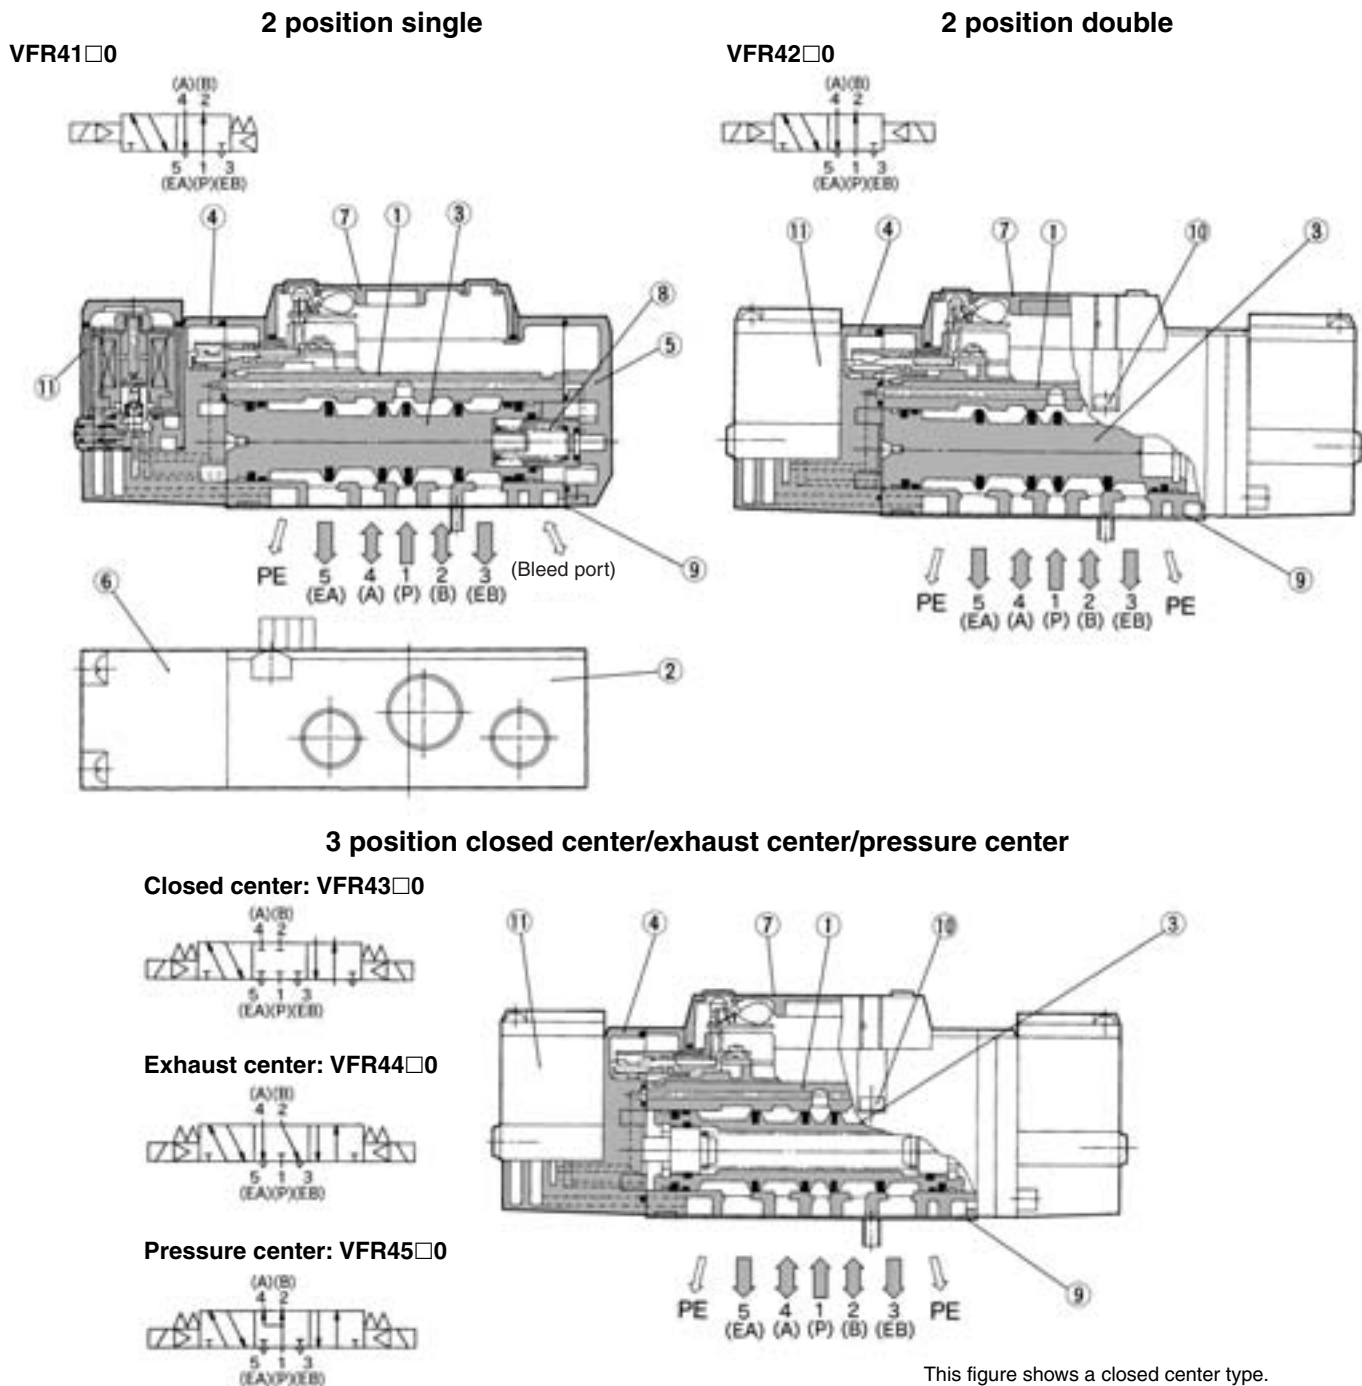

SJ
SY
SV
SYJ
SZ
VP4
S0700
VQ
VQ4
VQ5
VQC
VQZ
SQ
VFS
VFR
VQ7

Component Parts

No.	Description	Material	Note
1	Body	Aluminum die-casted	Platinum silver
2	Sub-plate	Aluminum die-casted	Platinum silver
3	Spool valve	Aluminum, NBR	
4	Adapter plate	Resin	Black

Component Parts

No.	Description	Material	Note
5	End plate	Resin	Black
6	Junction cover	Resin	
7	Light cover	Resin	
8	Spool spring	Stainless steel	


Replacement Parts

No.	Description	Material	Part no.		
			VFR41□□	VFR42□□	VFR43□□/44□□/45□□
9	Gasket	NBR	VFR4000-32-3	VFR4000-32-3	VFR4000-32-3
10	Hexagon socket head screw	Steel	AXT335-1-11 (M4 x 40)	AXT335-1-11 (M4 x 40)	AXT335-1-11 (M4 x 40)
11	Pilot valve assembly	—	Refer to "How to Order Pilot Valve Assembly" on page 1275.		
—	Sub-plate assembly	—	Refer to "How to Order Sub-plate Assembly" on page 1276.		

Series VFR4000

Plug-in: 2 Position Single/Double, 3 Position Closed Center/Exhaust Center/Pressure Center

2 position single: VFR410⁰-□F

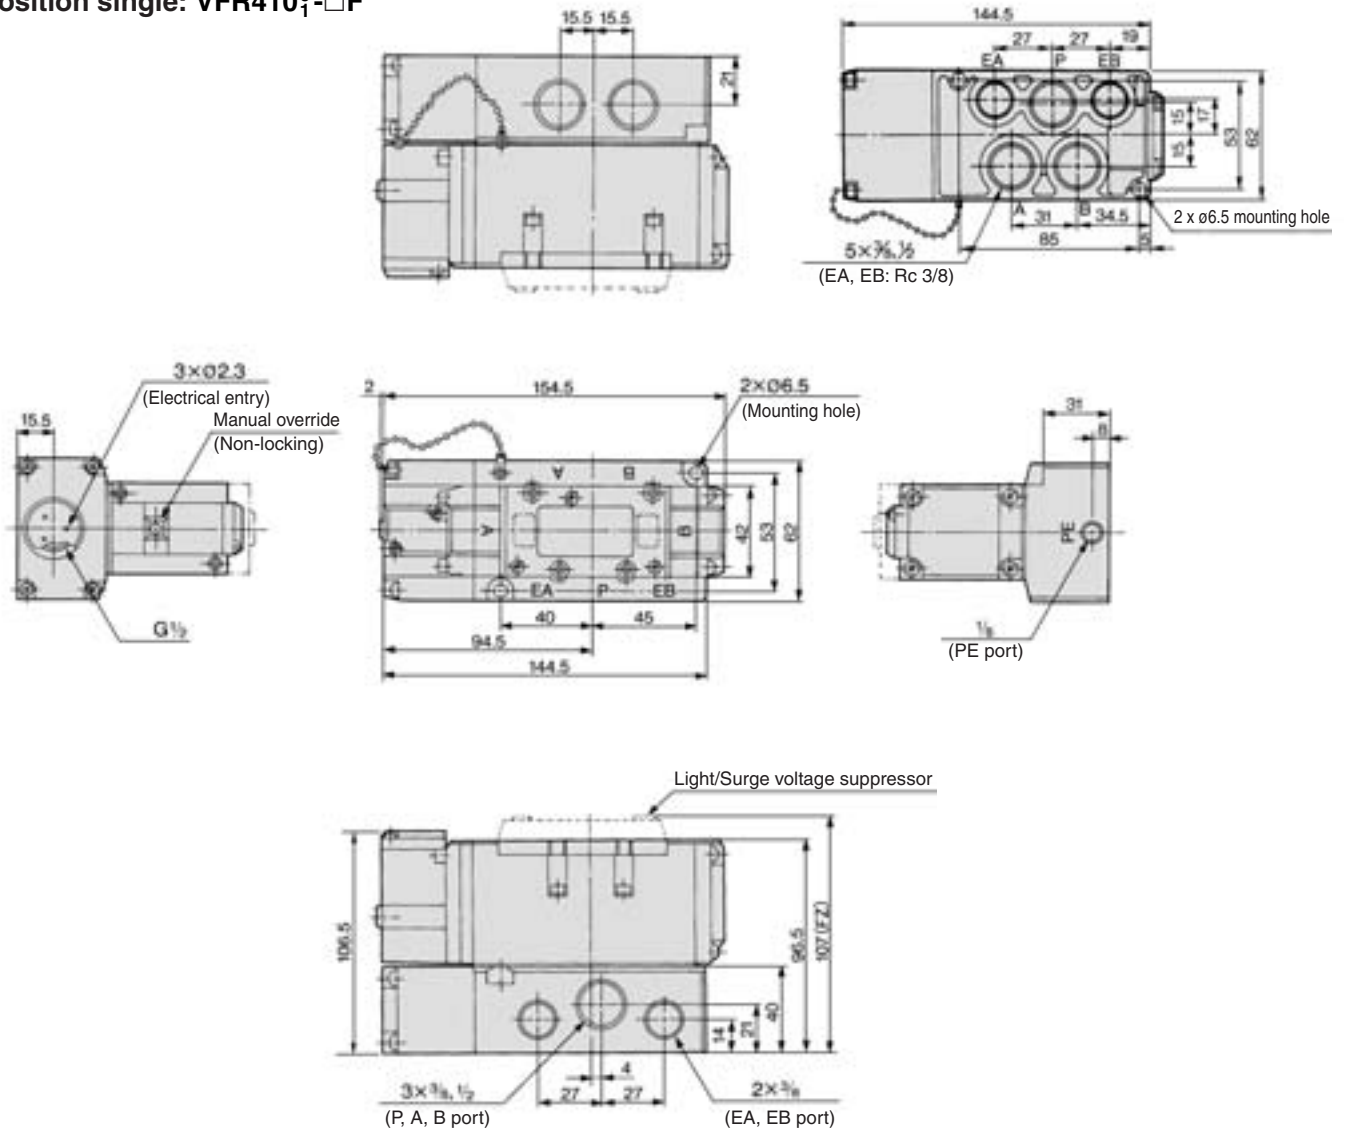


2 position double: VFR420⁰-□F

3 position closed center: VFR430⁰-□F

3 position exhaust center: VFR440⁰-□F


3 position pressure center: VFR450⁰-□F

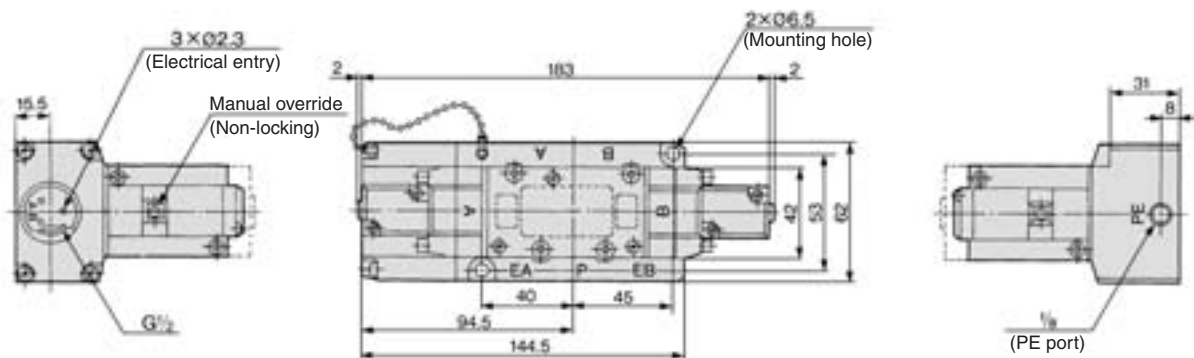

5 Port Pilot Operated Solenoid Valve Rubber Seal, Plug-in/Non Plug-in **Series VFR4000**

Non Plug-in: 2 Position Single/Double, 3 Position Closed Center/Exhaust Center/Pressure Center

2 position single: VFR411⁰-□E, VFR411⁰-□D

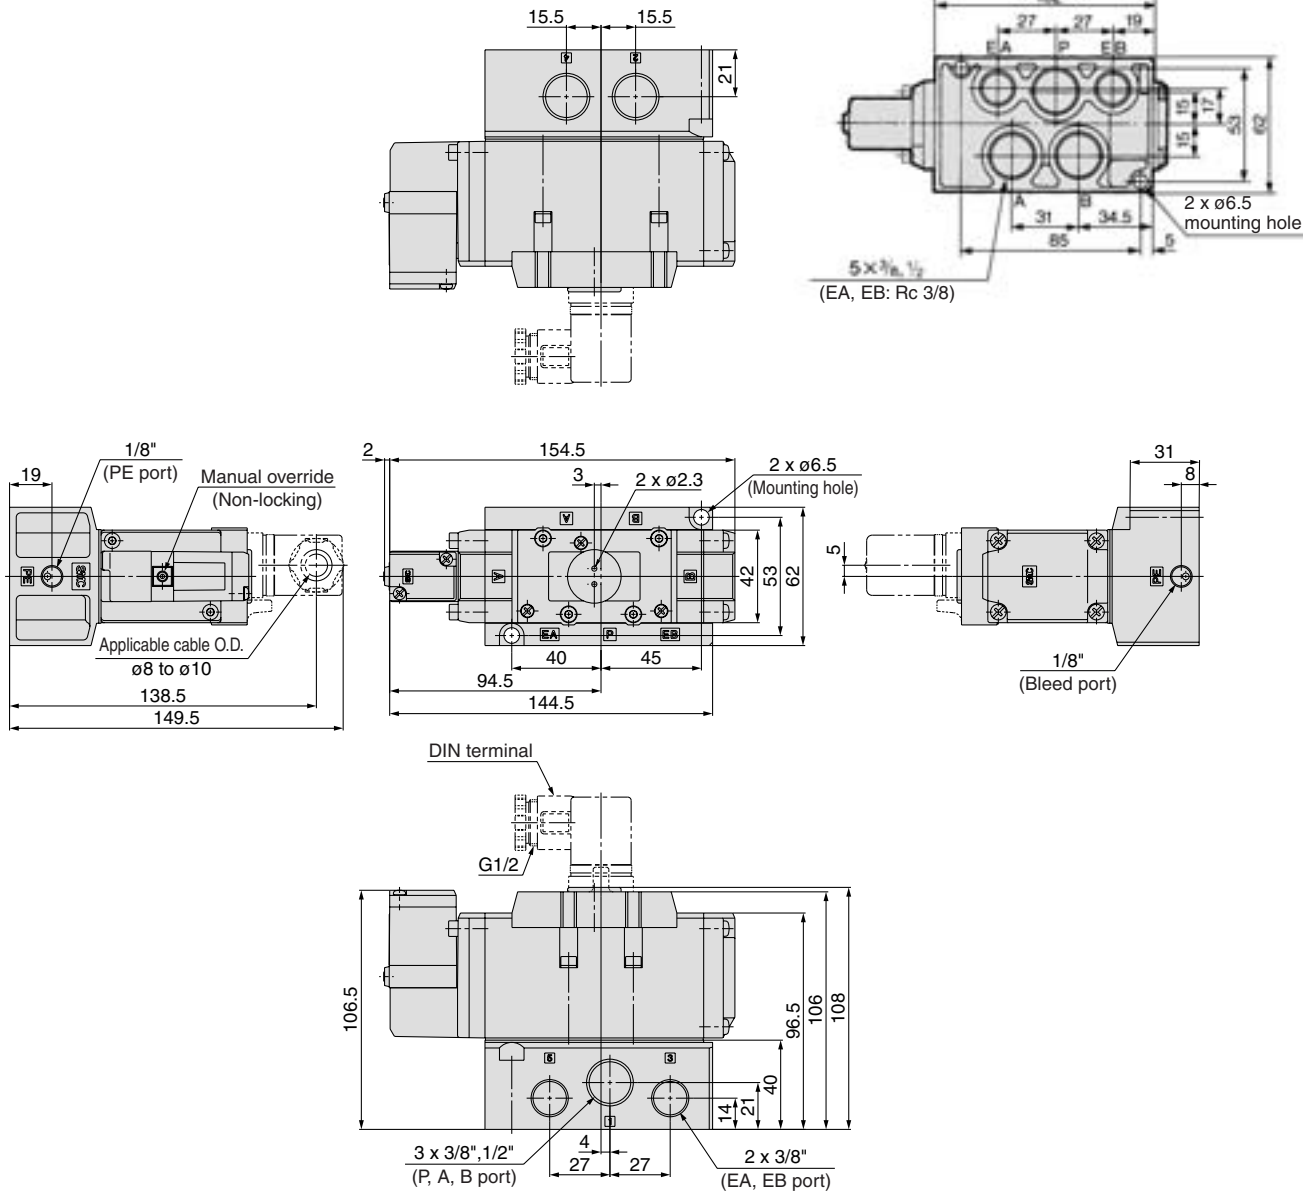


2 position double: VFR421⁰-□E, VFR421⁰-□D

3 position closed center: VFR431⁰-□E, VFR431⁰-□D

3 position exhaust center: VFR441⁰-□E, VFR441⁰-□D

3 position pressure center: VFR451⁰-□E, VFR451⁰-□D

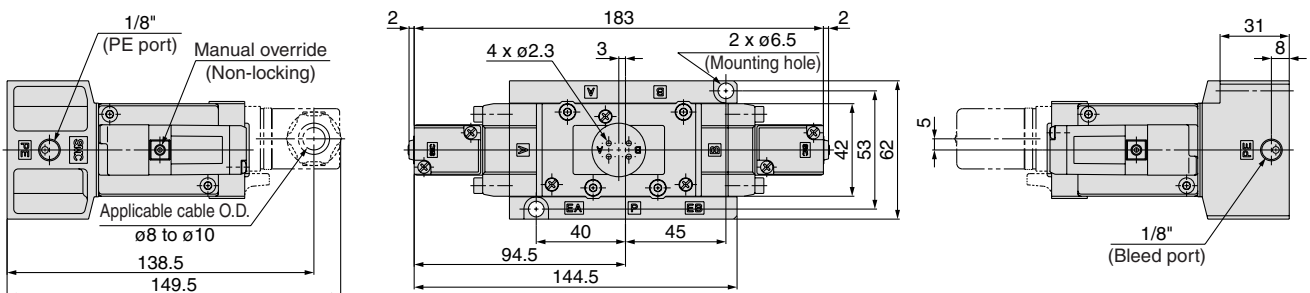


* Other dimensions are the same as the single type.


Series VFR4000

Non Plug-in: 2 Position Single

2 position single: VFR414⁰/₁-□G

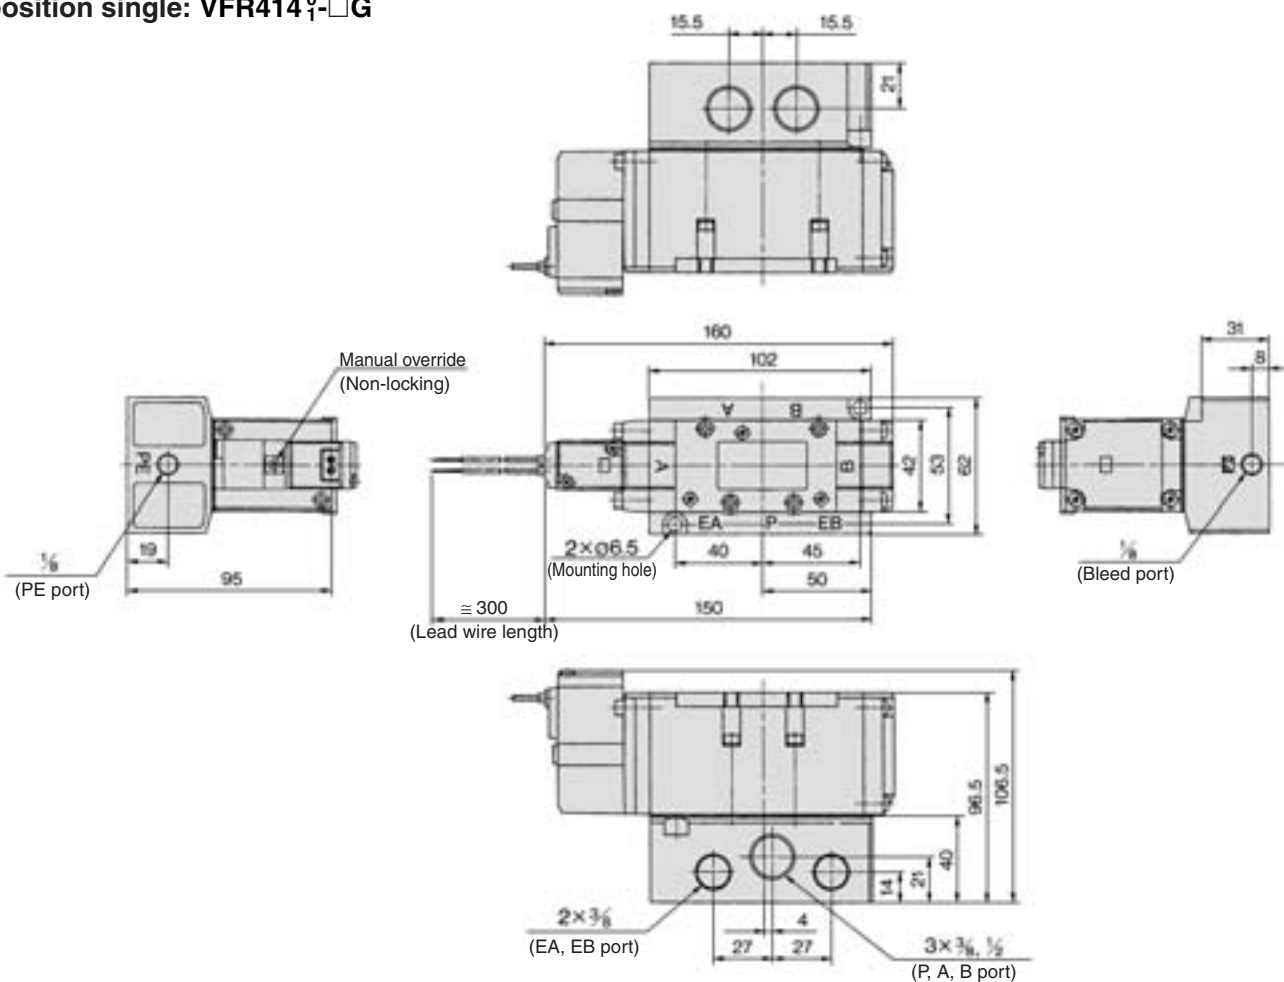


E: Grommet terminal

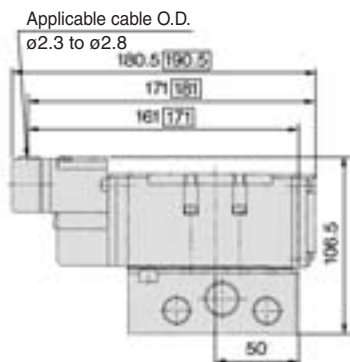


□: With light/surge voltage suppressor

T: Conduit terminal

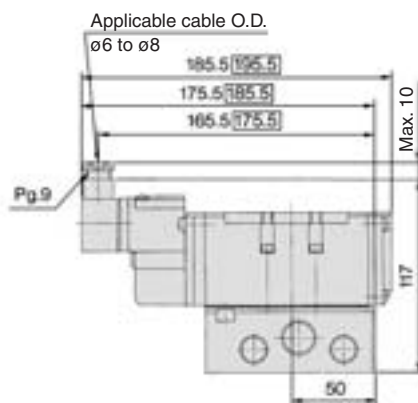

□: With light/surge voltage suppressor

D, Y: DIN terminal

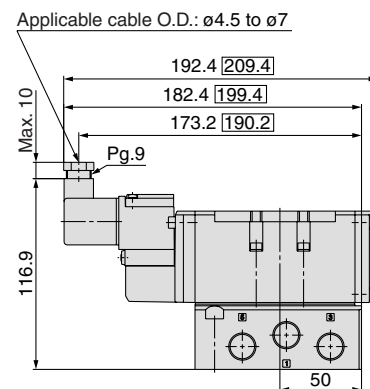

□: With light/surge voltage suppressor


Series VFR4000

2 position double: VFR424⁰₁-□G



3 position closed center: VFR434⁰-□G

3 position exhaust center: VFR444⁰-□G

3 position pressure center: VFR454⁰₁-□G



D: DIN terminal

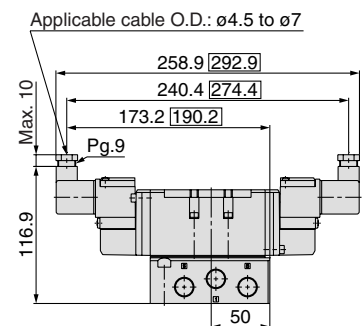

Series VFR4000 Manifold Specifications

Manifold Specifications

Base model	Wiring	Porting specifications	Port size		Stations	Applicable valve model
		A, B port	P, EA, EB	A, B		
Plug-in type VV5FR4-01□(-Q)	• With terminal block • With multi-connector • With D-sub connector	Side/Bottom	1/2	3/8, 1/2	2 to 10	VFR4□0□-□F(-Q)
					2 to 8	
Non plug-in type VV5FR4-10(-Q)	• Grommet terminal • DIN terminal				2 to 10	VFR4□1□-□E
						VFR4□1□-□D(-Q)
Non plug-in type VV5FR4-40(-Q)	• Grommet • Grommet terminal • Conduit terminal • DIN terminal					VFR4□4□-□G
						VFR4□4□-□E
						VFR4□4□-□T
						VFR4□4□-□D(-Q)

How to Order Manifold Assembly

<Example> Plug-in type with terminal block: 6 stations

VV5FR4-01T-061-03 1 set (Manifold base part no.)
 ***VFR4100-5FZ** 3 sets (2 position single part no.)
 ***VFR4200-5FZ** 2 sets (2 position double part no.)
 ***VVFS4000-10A** 1 set (Blanking plate assembly part no.)
 ↳ The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

Valve arrangement is counted from the D side.
 When ordering, specify the part nos. in order from the 1st. station in the D side.
 When entry of part numbers becomes complicated, indicate on the manifold specification sheet.


<Example> Non plug-in type: 6 stations

VV5FR4-10-061-03 1 set (Manifold base part no.)
 ***VFR4110-5D** 5 sets (2 position single part no.)
 ***VFR4410-5D** 1 set (3 position exhaust center part no.)
 ***VVFS4000-R-04-2** 1 set (Individual EXH spacer part no.)
 ↳ The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

Valve arrangement is counted from the D side.
 When ordering, specify the part nos. in order from the 1st. station in the D side.
 When entry of part numbers becomes complicated, indicate on the manifold specification sheet.

Plug-in Type: With Terminal Block

- Since lead wires of solenoid valve are connected with the terminals on upper surface of terminal block corresponding lead wires from power source can be wired at the bottom of terminal block.

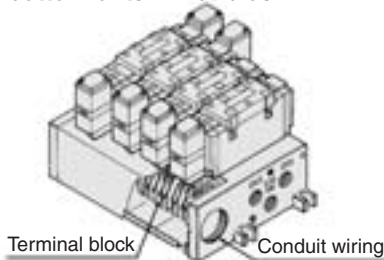

Terminal block Conduit wiring

VV5FR4-01T-061-03

Series VFR4000 Manifold
Plug-in type with terminal block

Stations

02	2 stations
⋮	⋮
10	10 stations

Symbol

Symbol	Passage		Porting specifications (A, B)
	P	EA, EB	
1	Common	Common	Side
2			Bottom *

* Option

Thread type

Nil	Rc
F	G
N	NPT
T	NPTF

Port size

Symbol	P, EA, EB	A, B *
03		3/8
04	1/2	1/2
M		Mixed


* For bottom ported: Rc 3/8 only.

CE-compliant

Nil	—
Q	CE-compliant

Plug-in Type: With Multi-connector (For wiring specifications, refer to page 1326.)

- Master connection of power and solenoid valves.
- Quick wiring permits ease of installation.

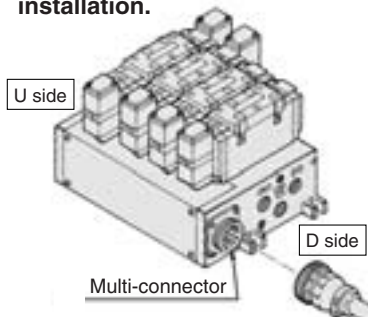

Multi-connector

VV5FR4-01C D-051-03

Series VFR4000 Manifold
Plug-in type with multi-connector

Connector mounting direction

D	D side mounting
U	U side mounting

Stations

02	2 stations
⋮	⋮
08 *	8 stations

* Max: 8 stations

Symbol

Symbol	Passage		Porting specifications (A, B)
	P	EA, EB	
1	Common	Common	Side
2			Bottom *

* Option

Thread type

Nil	Rc
F	G
N	NPT
T	NPTF

Port size

Symbol	P, EA, EB	A, B *
03		3/8
04	1/2	1/2
M		Mixed

* For bottom ported: Rc 3/8 only.


CE-compliant

Nil	—
Q	CE-compliant

5 Port Pilot Operated Solenoid Valve Rubber Seal, Plug-in/Non Plug-in **Series VFR4000**

Plug-in Type: With D-sub Connector (For wiring specifications, refer to page 1326.)

- Wide range of interchangeability (D-sub connector (25P) conforming to MIL standard)
- Quick wiring permits easier installation.

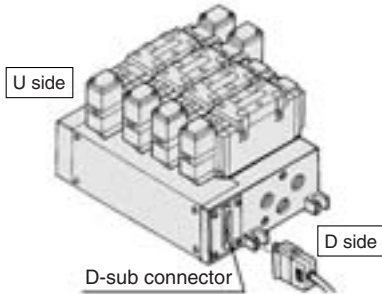

VV5FR4-01F D-06 1-03

Series VFR4000 Manifold

Plug-in type with D-sub connector

Connector mounting direction

D	D side mounting
U	U side mounting

Stations

02	2 stations
...	...
08 *	8 stations

* Max: 8 stations

Thread type

Nil	Rc
F	G
N	NPT
T	NPTF

CE-compliant

Nil	—
Q	CE-compliant

Port size

Symbol	P, EA, EB	A, B *
03	1/2	3/8
04		1/2
M		Mixed

* For bottom ported: Rc 3/8 only.


Symbol

Symbol	Passage		Porting specifications (A, B)
	P	EA, EB	
1	Common	Common	Side
2	Common	Common	Bottom *

* Option

Non Plug-in Type: Grommet Terminal, DIN Terminal (Common electrical entry)

- Individual wiring for every valve

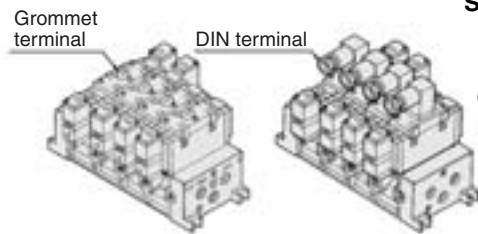

VV5FR4-10-05 1-03

Series VFR4000 Manifold

Non plug-in type Common electrical entry

Stations

02	2 stations
...	...
10	10 stations

Thread type

Nil	Rc
F	G
N	NPT
T	NPTF

CE-compliant

Nil	—
Q	CE-compliant

Port size

Symbol	P, EA, EB	A, B *
03	1/2	3/8
04		1/2
M		Mixed

* For bottom ported: Rc 3/8 only.


Symbol

Symbol	Passage		Porting specifications (A, B)
	P	EA, EB	
1	Common	Common	Side
2	Common	Common	Bottom *

* Option

Non Plug-in Type: Grommet, Grommet Terminal, Conduit Terminal, DIN Terminal (Individual electrical entry)

- Individual wiring for every valve

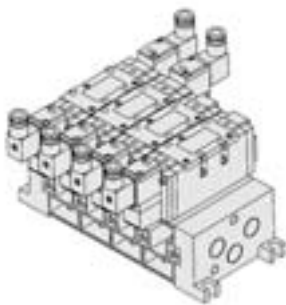

VV5FR4-40-05 1-03

Series VFR4000 Manifold

Non plug-in type Individual electrical entry

Stations

02	2 stations
...	...
10	10 stations

Thread type

Nil	Rc
F	G
N	NPT
T	NPTF

CE-compliant

Nil	—
Q	CE-compliant

Port size

Symbol	P, EA, EB	A, B *
03	1/2	3/8
04		1/2
M		Mixed

* For bottom ported: Rc 3/8 only.

Symbol

Symbol	Passage		Porting specifications (A, B)
	P	EA, EB	
1	Common	Common	Side
2	Common	Common	Bottom *

* Option

Note) Manifold base is in common with VV5FR4-10.

Note) Manifold base is in common with Series VFS4000 but the connection of terminal block for plug-in type is different.

SJ
SY
SV
SYJ
SZ
VP4
S0700
VQ
VQ4
VQ5
VQC
VQZ
SQ
VFS
VFR
VQ7

Manifold/Option Parts Assembly

Individual SUP spacer

Setting individual SUP spacer on the manifold block enables individual SUP port for each valve.

Body type	Plug-in type	Non plug-in type
Part no.	VVFS4000-P-03-1	VVFS4000-P-03-2



Individual EXH spacer

Setting individual EXH spacer on the manifold block enables individual EXH port for each valve.

Body type	Plug-in type	Non plug-in type
Part no.	VVFS4000-R-04-1	VVFS4000-R-04-2



SUP block disk

When supplying manifold with more than two different pressures, high and low, insert a block disk in between stations subjected to plug-in different pressures.

Body type	Plug-in type	Non plug-in type
Part no.	AXT634-10A	

EXH block disk

When valve exhaust affects the other stations on the circuit, insert EXH block disk in between stations to separate valve exhaust.

Body type	Plug-in type	Non plug-in type
Part no.	AXT634-11A	



EXH block disk



SUP block disk

Throttle valve spacer

Needle valve set on the manifold block can control cylinder speed by throttling exhaust.


Body type	Plug-in type	Non plug-in type
Part no.	VVFS4000-20A-1	VVFS4000-20A-2



Interface regulator

Interface regulator set on the manifold block can regulate pressure for each valve. (Refer to "Flow Characteristics" on page 1324 before operation.)

Body type	Plug-in type	Non plug-in type
P port regulation	ARBF4050-00-P-1	ARBF4050-00-P-2
A port regulation	ARBF4050-00-A-1	ARBF4050-00-A-2
B port regulation	ARBF4050-00-B-1	ARBF4050-00-B-2

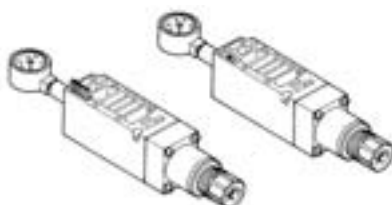

Blanking plate

It is used by attaching on the manifold block for being prepared for removing a valve for maintenance reasons or planning to mount a spare valve, etc.

Body type	Plug-in type	Non plug-in type
Part no.	VVFS4000-10A	

Manifold Option

With exhaust cleaner

- Valve exhaust noise dampening: 35 dB or more.
- Collects oil mist: collecting rate 99.9% or more
- Piping process reduced.



For details, refer to page 1289.

With control unit

Plug-in type/Non Plug-in type

- Filter, regulation valve, pressure switch and air release valve are all combined to form one unit.
- Piping processes are eliminated.




For details, refer to page 1292.

Series VFR4000

With terminal block: VV5FR4-01T-Station 1-Port size




With multi-connector: VV5FR4-01CD-Station 1-Port size, VV5FR4-01CU-Station 1-Port size




Series VFR4000

VV5FR4-40- Station 1- Port size

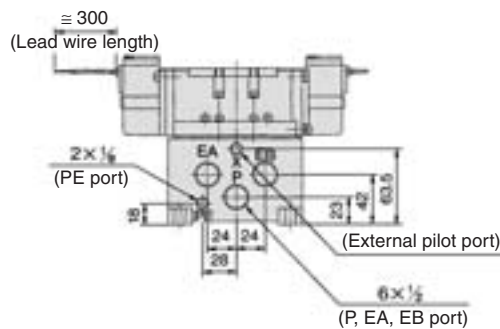


Stations	2	3	4	5	6	7	8	9	10	Formula
L ₁	156	199	242	285	328	371	414	457	500	L ₁ = 43 x n + 70
L ₂	168	211	254	297	340	383	426	469	512	L ₂ = 43 x n + 82


E: Grommet terminal

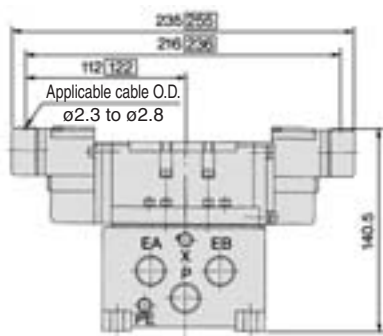

T: Conduit terminal

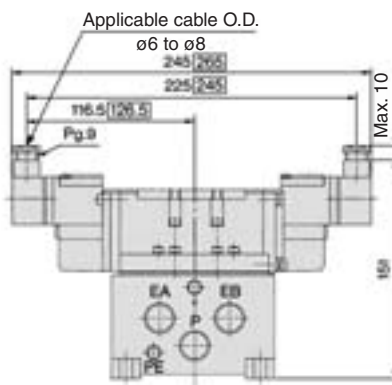

D, Y: DIN terminal

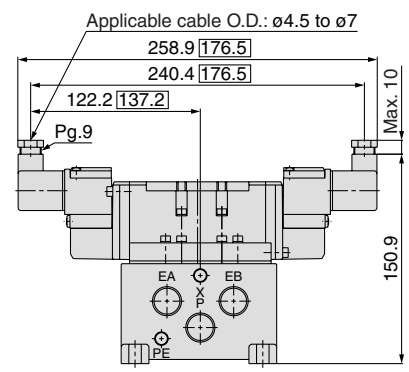

SJ
SY
SV
SYJ
SZ
VP4
S0700
VQ
VQ4
VQ5
VQC
VQZ
SQ
VFS
VFR
VQ7


Series VFR4000

Manifold/Option Parts Assembly: Plug-in Type/Non Plug-in Type

Individual SUP spacer:

VVFS4000-P-03-1 (Plug-in type)


VVFS4000-P-03-2 (Non plug-in type)

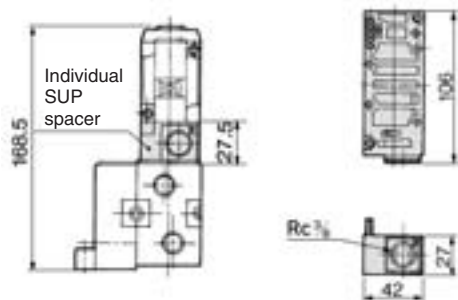

Individual EXH spacer:


VVFS4000-R-04-1 (Plug-in type)

VVFS4000-R-04-2 (Non plug-in type)

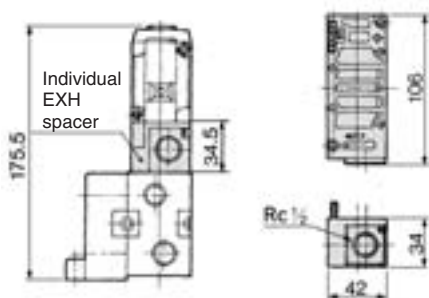

SUP block disk: AXT634-10A

EXH block disk: AXT634-11A

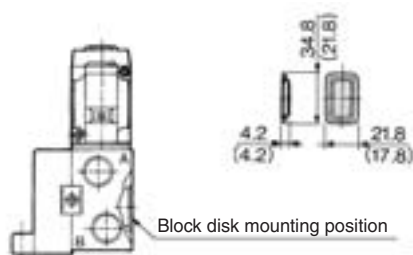

Note) Used with exclusive manifold block

(): EXH block disk

Throttle valve spacer:

VVFS4000-20A-1 (Plug-in type)


VVFS4000-20A-2 (Non plug-in type)



Interface regulator/P port regulation:

ARBF4050-00-P-1 (Plug-in type)


ARBF4050-00-P-2 (Non plug-in type)

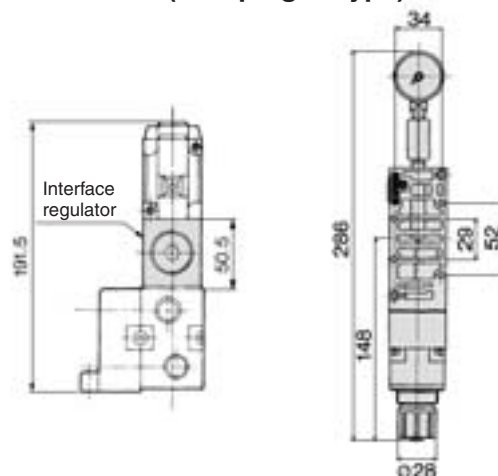

Interface regulator/A port regulation:

ARBF4050-00-A-1 (Plug-in type)


ARBF4050-00-A-2 (Non plug-in type)

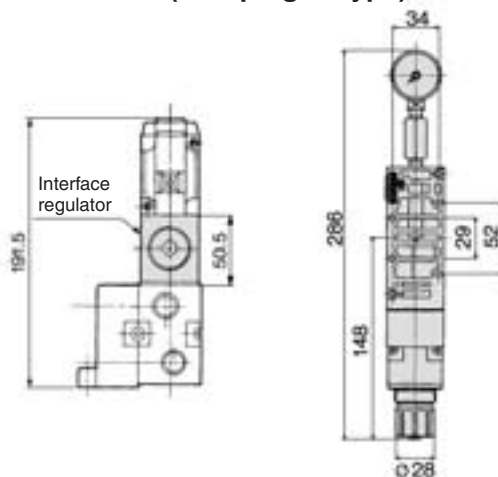

Interface regulator/B port regulation:

ARBF4050-00-B-1 (Plug-in type)

ARBF4050-00-B-2 (Non plug-in type)

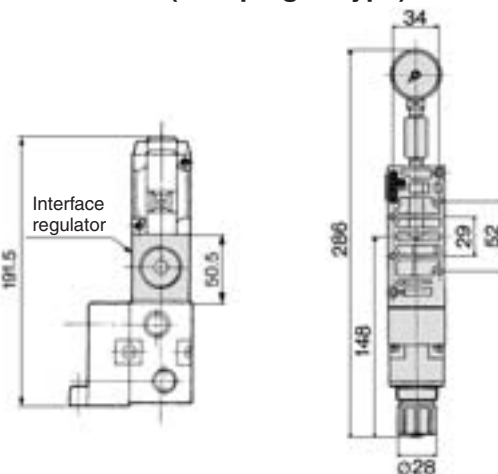


Dimensions: FZ type dimensions of direct manual style are also the same.



Manifold with Exhaust Cleaner

- Serves to protect working environment.
- Valve exhaust noise dampening: 35 dB or more.
- Collection rate of drainage and oil mist: 99.9% or more.
- Piping work is reduced.

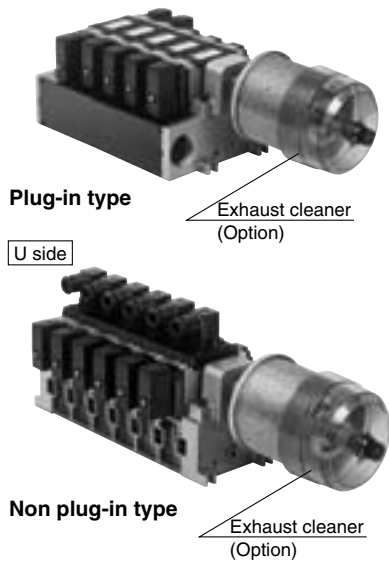

Manifold Specifications

Manifold	Plug-in type: VV5FR4-01□(-Q)	Non plug-in type: VV5FR4-10(-Q)	Non plug-in type: VV5FR4-40(-Q)
Wiring	With terminal block With multi-connector With D-sub connector	DIN terminal Grommet terminal	Grommet, Grommet terminal, Conduit terminal, DIN terminal
Applicable valve model	VFR4□0□-□F(-Q)	VFR4□1□-□D(-Q) VFR4□1□-□E	VFR4□4□-□G, VFR4□4□-□E VFR4□4□-□T, VFR4□4□-□D(-Q)
Porting specifications	Common SUP, Common EXH		
	A, B port	Side: 3/8, 1/2 Bottom: 3/8 (Option)	
	P port	Side: 1/2 EXH 1 1 1/2	
Stations	2 to 10 stations (With multi-connector/D-sub connector: 2 to 8 stations)		
Applicable exhaust cleaners	AMC610-10 (Port size: R 1), AMC810-14 (Port size: R 1 1/2) ⁽¹⁾		



Note 1) Use "AMC810-14" when used with 5 or more stations or in high frequency.
Exhaust cleaner "AMC610-10" and "AMC810-14" are not attached.

How to Order

VV5FR4 - 10 - 06 1 - 03 - CD -

Series VFR4000 Manifold

Base type/Electrical entry

01T	Plug-in type with terminal block
01C	Plug-in type with multi-connector
01F	Plug-in type with D-sub connector
10	Non plug-in type Common electrical entry
40	Non plug-in type Individual electrical entry

Connector mounting direction

Symbol	With connector	Applicable base
Nil	None	01T, 10, 40
D	D side mounting	01C, 01F
U	U side mounting	01C, 01F

Stations

02	2 stations
⋮	⋮
10 (Note)	10 stations

Thread type

Nil	Rc
F	G
N	NPT
T	NPTF

Port size

Symbol	P, EA, EB	A, B *
03	1/2	3/8
04	1/2	1/2
M		Mixed

CE-compliant

Nil	—
Q	CE-compliant

Exhaust cleaner mounting direction

Symbol	Exhaust cleaner mounting direction
CD	D side D side mounting
CU	U side U side mounting

* Please indicate size or port size of exhaust cleaner.

Symbol

Symbol	Passage	Porting specifications (A, B)
1	P	Side
2	Common	Bottom *

* For bottom ported: Rc 3/8 only.

* Option

How to Order Manifold Assembly

<Example> Plug-in type with terminal block (6 stations)

VV5FR4-01T-061-03-CD	1 set (Manifold base part no.)
*VFR4100-5FZ	3 sets (2 position single part no.)
*VFR4200-5FZ	2 sets (2 position double part no.)
*VVFS4000-10A	1 set (Blanking plate assembly part no.)
*AMC610-10	1 set (Exhaust cleaner part no.)

→ The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

Valve arrangement is counted from the D side.
When ordering, specify the part nos. in order from the 1st. station in the D side.
When entry of part numbers becomes complicated, indicate on the manifold specification sheet.

Caution

When using an exhaust cleaner, mount it downwards.

<Example> Non plug-in type: 6 stations

VV5FR4-10-061-03-CU	1 set (Manifold base part no.)
*VFR4110-5E	3 sets (2 position single part no.)
*VFR4210-5E	2 sets (2 position double part no.)
*VVFS4000-10A	1 set (Blanking plate assembly part no.)
*AMC810-14	1 set (Exhaust cleaner part no.)

→ The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

Valve arrangement is counted from the D side.
When ordering, specify the part nos. in order from the 1st. station in the D side.
When entry of part numbers becomes complicated, indicate on the manifold specification sheet.





Refer to Best Pneumatics No. 6 for Exhaust Cleaner details.

Series VFR4000



Manifold with Exhaust Cleaner: Plug-in Type/Non Plug-in Type

Plug-in type: VV5FR4-01T-Station 1-Port size- $\frac{CD}{CU}$

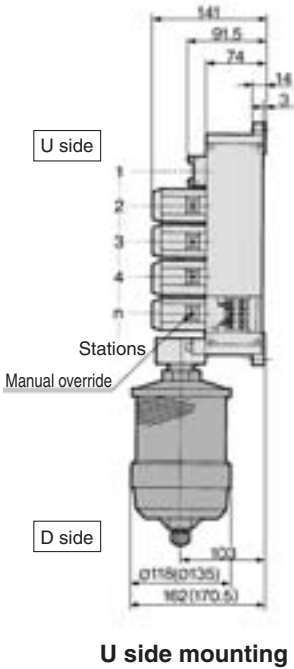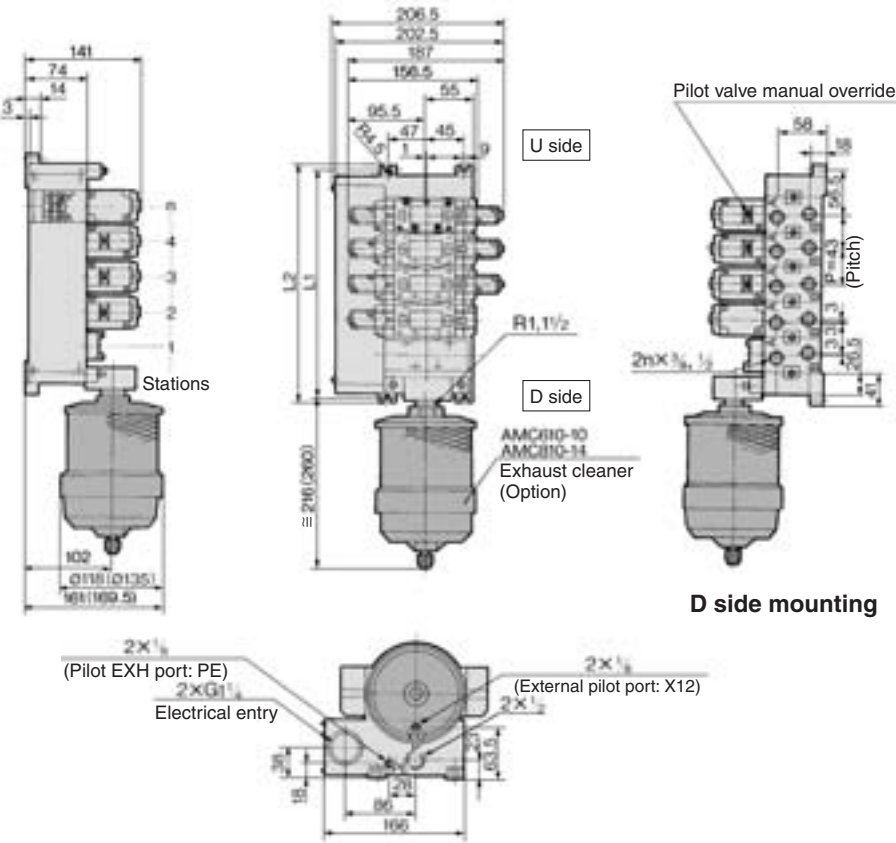

() : AMC810

Non plug-in type: VV5FR4-10-Station 1-Port size- $\frac{CD}{CU}$

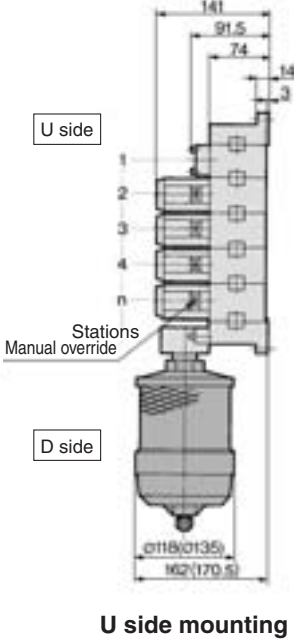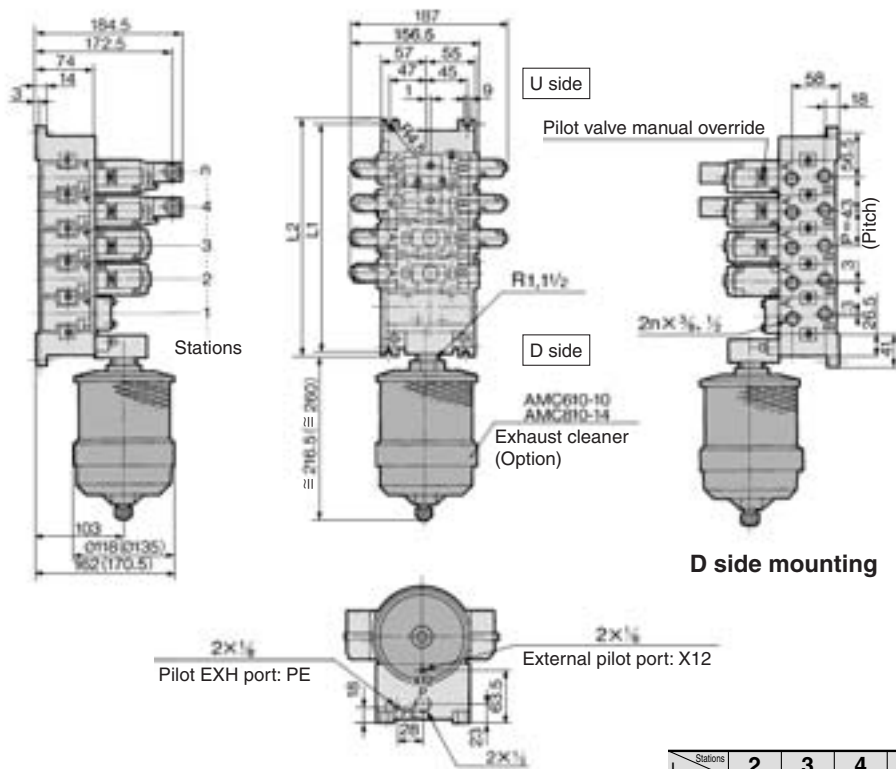



() : AMC810
1290

n: Station										
Stations	2	3	4	5	6	7	8	9	10	Formula
L ₁	156	199	242	285	328	371	414	457	500	L ₁ = 43 x n + 70
L ₂	168	211	254	297	340	383	426	469	512	L ₂ = 43 x n + 82

Series **VFR4000**

Manifold with Exhaust Cleaner: Non Plug-in Type

Non plug-in type: VV5FR4-40- **Station** 1- **Port size** -^{CD}_{CU}

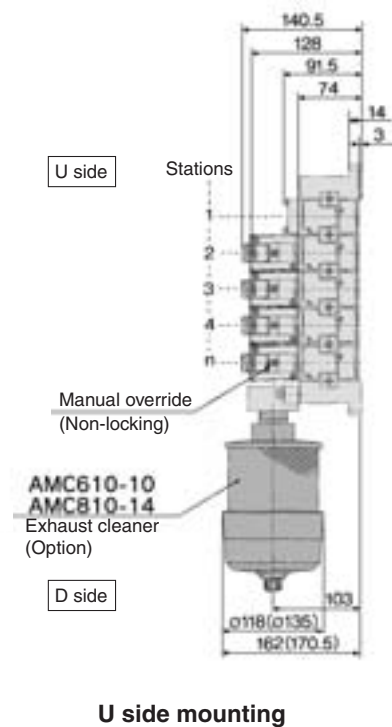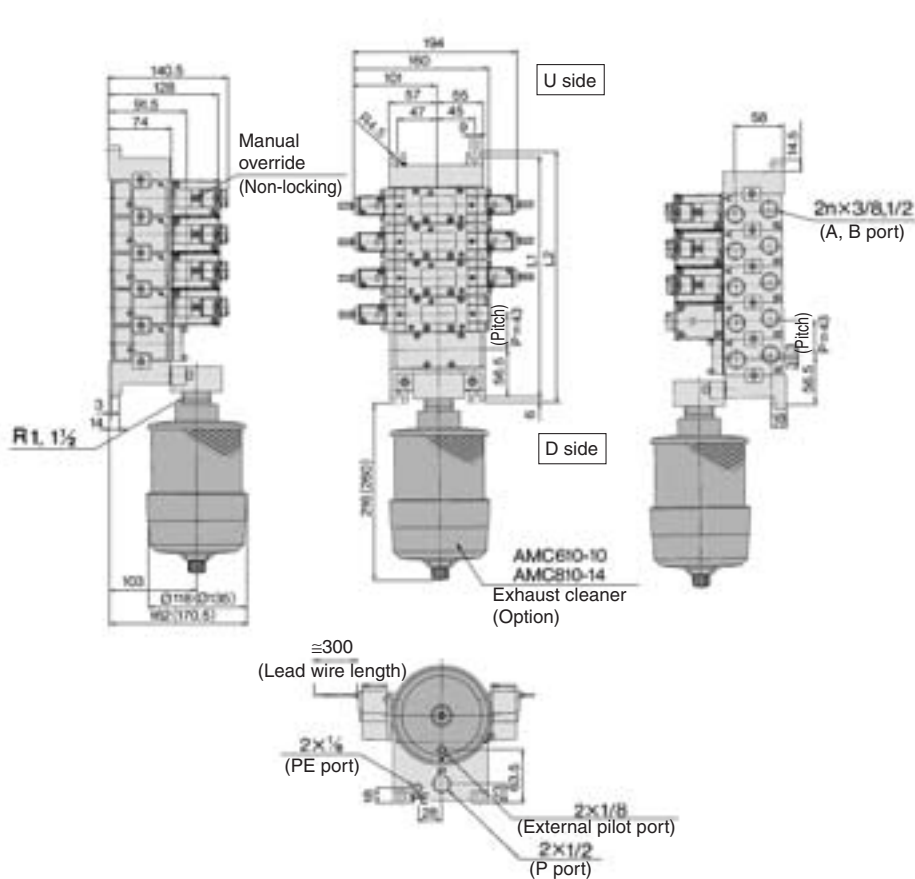


n: Station										
Stations	2	3	4	5	6	7	8	9	10	Formula
L ₁	156	199	242	285	328	371	414	457	500	L ₁ = 43 x n + 70
L ₂	168	211	254	297	340	383	426	469	512	L ₂ = 43 x n + 82



): AMC810

Manifold with Control Unit

- Control unit (Filter, Regulator, Pressure switch, Air release valve) are all standardized to the one unit, and can be mounted on the manifold base without any attachments.
- Piping processes are eliminated.

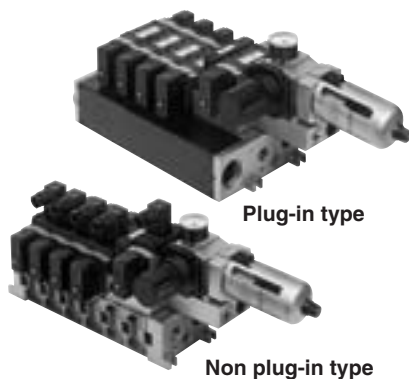

Caution

Air filter with auto-drain or manual drain must be mounted with the air filter at the bottom.

Manifold Specifications

Manifold	Plug-in type: VV5FR4-01□(-Q)	Non plug-in type: VV5FR4-10(-Q)	Non plug-in type: VV5FR4-40(-Q)
Wiring	With terminal block With multi-connector With D-sub connector	DIN terminal Grommet terminal	Grommet, Grommet terminal, Conduit terminal, DIN terminal
Applicable valve model	VFR4□0□-□F(-Q)	VFR4□1□-□D(-Q) VFR4□1□-□E	VFR4□4□-□G, VFR4□4□-□E VFR4□4□-□T, VFR4□4□-□D(-Q)
Porting specifications	Common SUP, Common EXH		
	A, B port	Side: 3/8, 1/2, Bottom: 3/8	
	P, EA, EB port	Side: 1/2	
Stations	2 to 10 (With multi-connector/D-sub connector: 2 to 8) *		



* Including station of control unit

Control Unit Specifications

Air filter (With auto-drain/With manual drain)	
Filtration degree	5 μm
Regulator	
Set pressure (Outlet pressure)	0.05 to 0.85 MPa
Pressure switch	
Set pressure range: OFF	0.1 to 0.6 MPa
Differential	0.08 MPa
Contact	1a
Indicator light	LED (RED)
Max. switch capacity	2 VA AC, 2 W DC
Max. operating current	24 VAC, DC or less: 50 mA 48 VAC, DC: 40 mA 100 VAC, DC: 20 mA
Inside voltage drop	4 V or less
Air release valve (Single only)	
Operating pressure range	0.2 to 0.9 MPa

Control Unit/Option

Air release valve spacer	(1) <Plug-in type> VVFS4000-24A-1R (D side mounting)	
	<Non plug-in type> VVFS4000-24A-2R (D side mounting)	
Pressure switch	(2) IS1000P-2-1	
Blanking plate	For filter regulator	MP2-3
	For pressure switch	MP3-2
	For air release valve	VVFS4000-24A-10
Filter element	11104-5B	



Note 1) Combining valve "VFR41□□" (single) and release valve spacer makes it possible to use this as an air release valve.

Note 2) Pressure switch cannot be mounted later on non plug-in type.

5 Port Pilot Operated Solenoid Valve Rubber Seal, Plug-in/Non Plug-in *Series VFR4000*

How to Order

VV5FR4 - 01C D - 08 1 - 03 - AP -

Series VFR4000 Manifold

Base type/Electrical entry

01T	Plug-in type with terminal block
01C	Plug-in type with multi-connector
01F	Plug-in type with D-sub connector
10	Non plug-in type (Common entry)
40	Non plug-in type (Individual entry)

Connector mounting direction

Symbol	With connector	Applicable base
Nil	None	01T, 10, 40
D	D side mounting	01C, 01F
U	U side mounting	

Stations

02	2 stations
⋮	⋮
10 (Note)	10 stations

Note) • Base 01T/10/40: 2 to 10 stations
• Base 01C/01F: 2 to 8 stations
• Including stations of control unit.

Symbol

Symbol	Passage		Porting specifications (A, B)
	P	EA, EB	
1	Common	Common	Side
2			Bottom *

* Option

Port size

Symbol	P, EA, EB	A, B *
03		3/8
04	1/2	1/2
M		Mixed

* For bottom ported: only 3/8

Thread type

Nil	Rc
F	G
N	NPT
T	NPTF

CE-compliant

Nil	—
Q	CE-compliant

Air release valve coil rating

Nil	None
1	100 VAC, 50/60 Hz
5	24 VDC
9	Other

Control unit type

Control equipment	Symbol	Nil	MP	AP	M	A	G	F	C	E
Air release valve			●	●	●	●			●	●
Air filter regulator with manual drain			●		●		●			
Air filter regulator with auto-drain				●				●		
Pressure switch			●	●						
Blanking plate (Air release valve)							●	●		
Blanking plate (Filter regulator)									●	
Blanking plate (Pressure switch)					●	●	●	●	●	
Required stations			2 stations							1 station

Note) Control unit is D side mounting only.

SJ
SY
SV
SYJ
SZ
VP4
S0700
VQ
VQ4
VQ5
VQC
VQZ
SQ
VFS
VFR
VQ7

How to Order Manifold Assembly

<Example> Plug-in type with terminal block

VV5FR4-01T-081-03-AP5	1 set (Manifold base part no.)
*VFR4100-5FZ	5 sets (2 position single part no.)
*VFR4200-5FZ	2 sets (2 position double part no.)
→ The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.	

The 1st and 2nd station are used for control unit mounting.
When ordering, specify the part nos. in order from the 3rd. station in the D side.
When entry of part numbers becomes complicated, indicate on the manifold specification sheet.

<Example> Non plug-in type

VV5FR4-10-061-03-A5	1 set (Manifold base part no.)
*VFR4110-5D	5 sets (2 position single part no.)
→ The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.	


The 1st and 2nd station are used for control unit mounting.
When ordering, specify the part nos. in order from the 3rd. station in the D side.
When entry of part numbers becomes complicated, indicate on the manifold specification sheet.

Series VFR4000


Manifold with Control Unit: Plug-in Type/Non Plug-in Type

Plug-in type:

VV5FR4-01T-Station 1-Port size -AP Voltage of air release valve

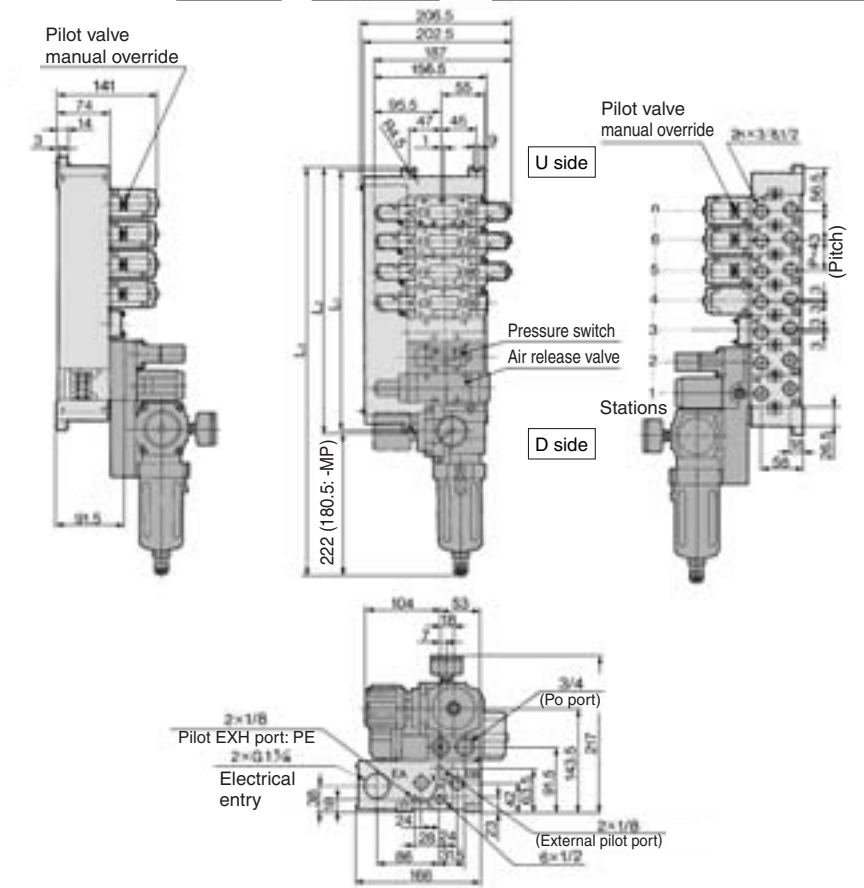


Example for manifold

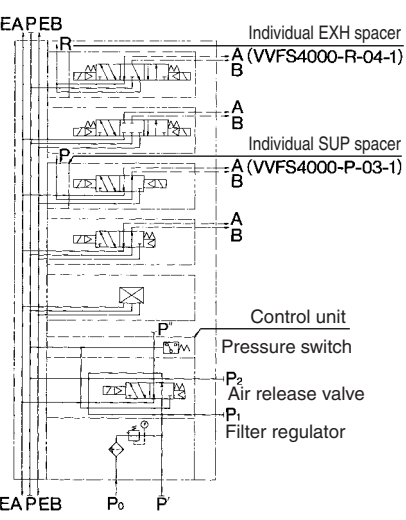


Non plug-in type:

VV5FR4-10-Station 1-Port size -AP Voltage of air release valve

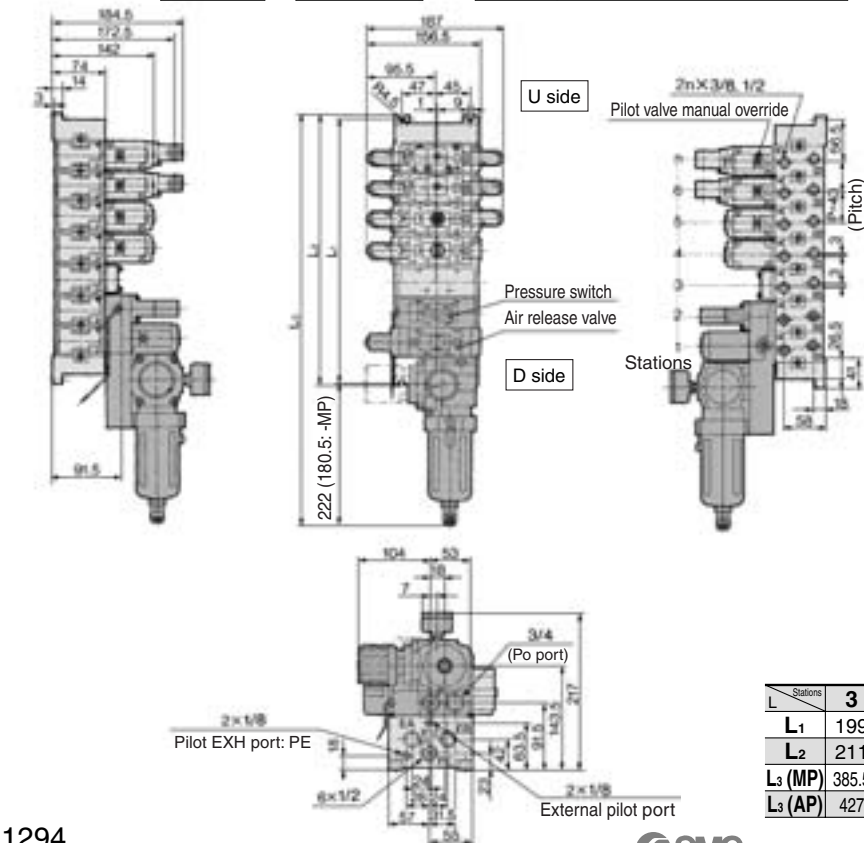

Example for manifold

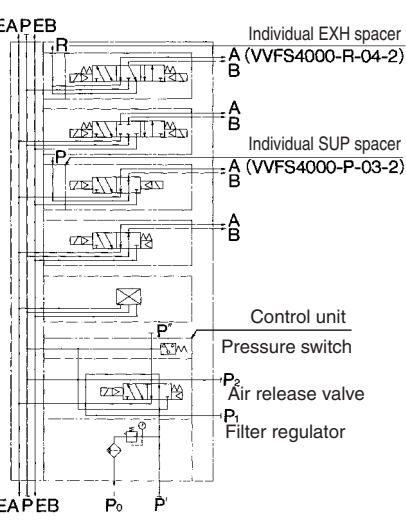


										n: Station
Stations	3	4	5	6	7	8	9	10		Formula
L ₁	199	242	285	328	371	414	457	500		L ₁ = 43 x n + 70
L ₂	211	254	297	340	383	426	469	512		L ₂ = 43 x n + 82
L ₃ (MP)	385.5	428.5	471.5	514.5	557.5	600.5	643.5	686.5		L ₃ = 43 x n + 256.5
L ₃ (AP)	427	470	513	556	599	642	685	728		L ₃ = 43 x n + 298

5 Port Pilot Operated Solenoid Valve
Rubber Seal, Plug-in/Non Plug-in **Series VFR4000**

Manifold with Control Unit: Non Plug-in Type

Non plug-in type: VV5FR4-40-Station 1-Port size -AP Voltage of air release valve

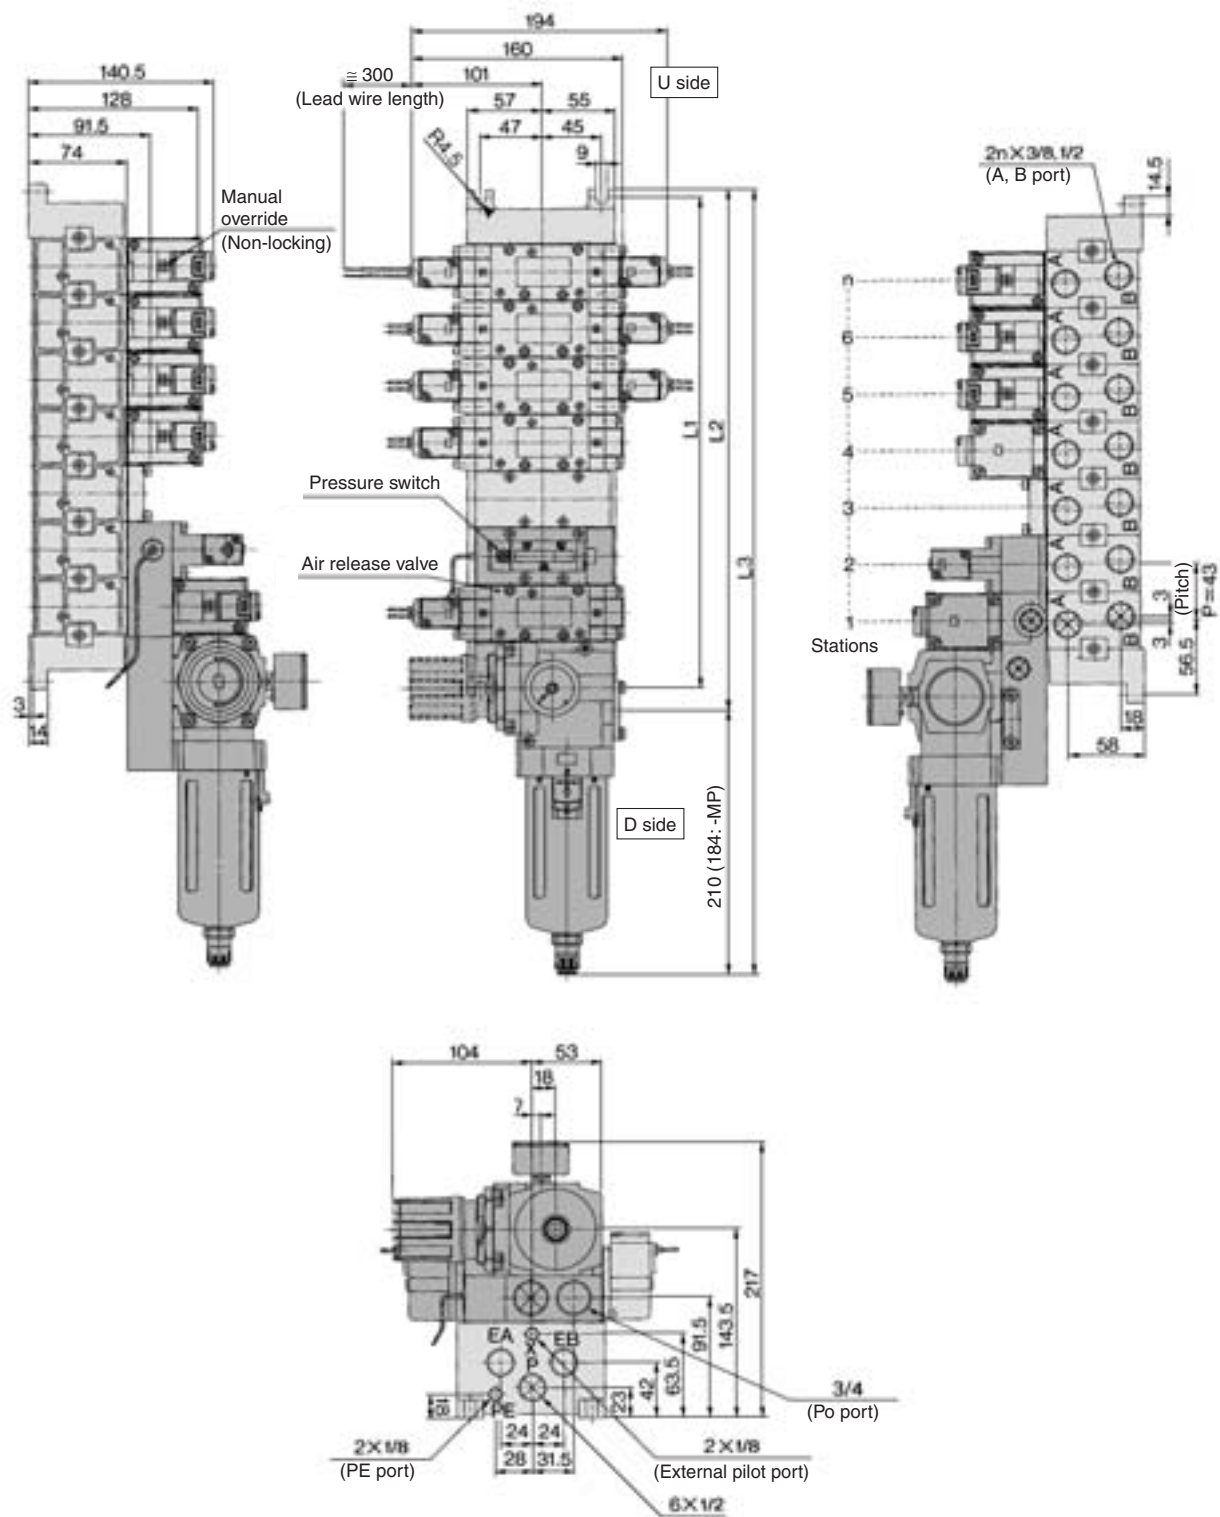


- SJ
- SY
- SV
- SYJ
- SZ
- VP4
- S0700
- VQ
- VQ4
- VQ5
- VQC
- VQZ
- SQ
- VFS
- VFR**
- VQ7

n: Station										
Stations	3	4	5	6	7	8	9	10	Formula	
L ₁	199	242	285	328	371	414	457	500	L ₁ = 43 x n + 70	
L ₂	211	254	297	340	383	426	469	512	L ₂ = 43 x n + 82	
L ₃ (MP)	385.5	428.5	471.5	514.5	557.5	600.5	643.5	686.5	L ₃ = 43 x n + 256.5	
L ₃ (AP)	427	470	513	556	599	642	685	728	L ₃ = 43 x n + 298	

Series VFR4000

Manifold Base Construction: Plug-in Type/Non Plug-in Type

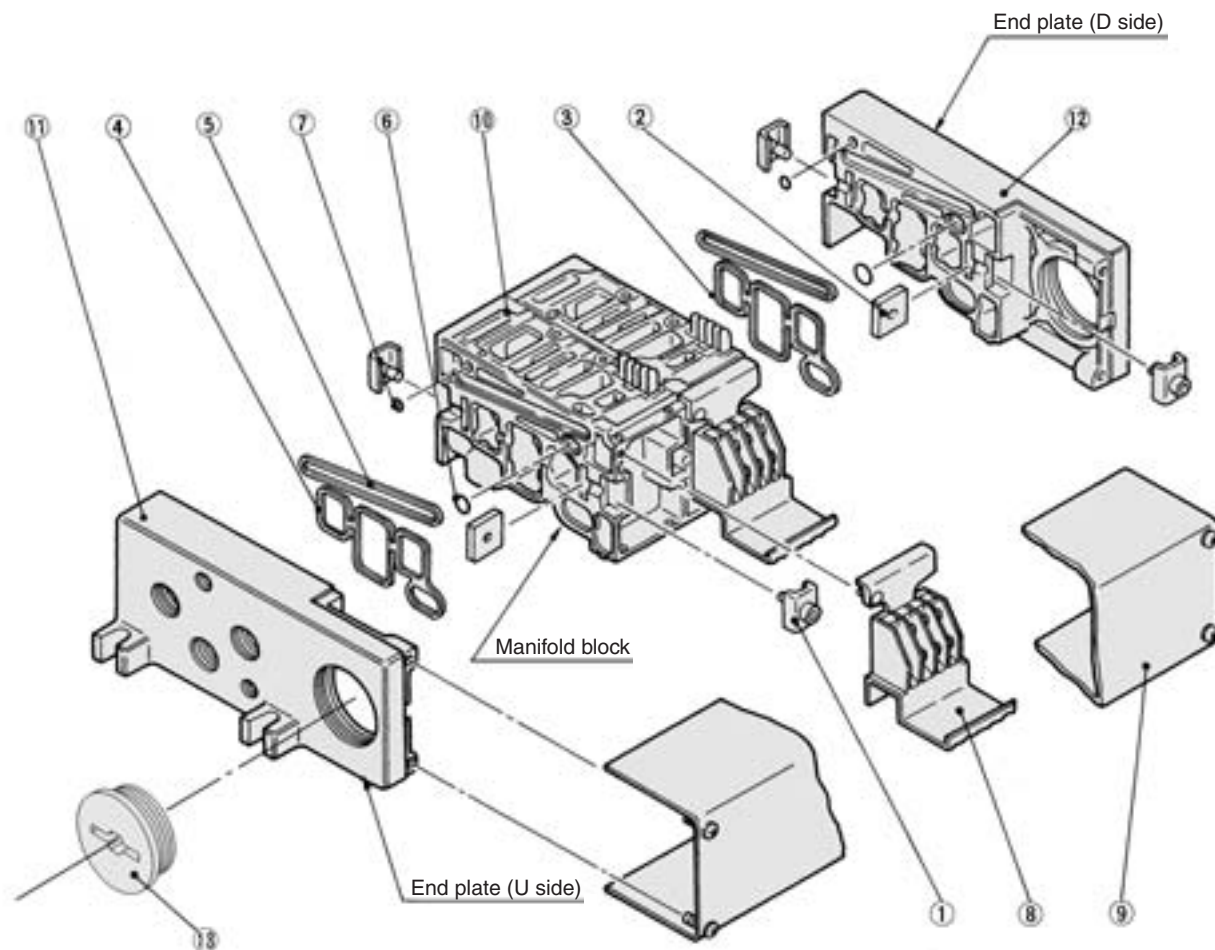

Replacement Parts

No.	Description	Material	Part no.
1	Connection fitting A	Steel	VVF4000-5-1A
2	Connection fitting B	Steel	VVF4000-5-2
3	Gasket	NBR	VVF4000-7 (for end plate)
4	Gasket	NBR	VVF4000-7-1 (for manifold block)
5	Gasket	NBR	VVF4000-8
6	O-ring	NBR	AS568-011
7	O-ring	NBR	P-3
8	Terminal assembly	—	VFR4000-14-1A
9	Junction cover assembly	—	For 01T VVF4000-4A- ^{Stations}
13	Rubber plug	NBR	AXT336-9



Note) Manifold Base/Construction: Plug-in type with terminal block.

Replacement Parts: Sub Assembly

No.	Description	Assembly part no.	Component parts	Applicable manifold base
10	Manifold block assembly ^{Note)}	VFR4000-19-1A- ⁰³ ₀₄	Manifold block 10, Terminal 8, Connection bracket 1, 2, Gasket 4, 5, O-ring 6, 7, Receptacle assembly	Plug-in type
		VFR4000-19-2A- ⁰³ ₀₄	Manifold block 10, Connection bracket 1, 2, Gasket 4, 5, O-ring 6, 7	Non plug-in type
11	End plate (U side) assembly	VVF4000-2A-1	End plate (U) 11, Metal joint 1, 2	Plug-in type
		VVF4000-2A-2	End plate (U) 11, Metal joint 1, 2	Non plug-in type
12	End plate (D side) assembly	VVF4000-3A-1	End plate (D) 12, Connection bracket 1, 2, Gasket 3, 4, O-ring 6, 7	Plug-in type
		VVF4000-3A-2	End plate (D) 12, Connection bracket 1, 2, Gasket 3, 5, O-ring 6, 7	Non plug-in type



Note) For side ported

* Contact SMC for CE-compliant products.

5 Port Pilot Operated Solenoid Valve Rubber Seal, Plug-in/Non Plug-in Series **VFR5000**




Plug-in type



Non plug-in type

JIS Symbol

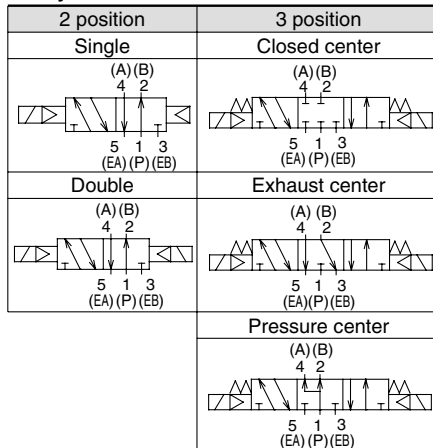

Standard Specifications

Valve specifications	Fluid	Air	
	Operating pressure range	2 position single/3 position	0.2 to 0.9 MPa
		2 position double	0.1 to 0.9 MPa
	Ambient and fluid temperature	-10 to 50°C (No freezing. Refer to page 5.)	
	Lubrication	Non-lube ⁽¹⁾	
	Manual override	Non-locking push type	
Electricity specifications	Mounting orientation	Unrestricted	
	Shock/Vibration resistance	300/50m/s ² ⁽²⁾	
	Enclosure	Dustproof	
	Coil rated voltage	100, 200 VAC (50/60 Hz), 24 VDC	
	Allowable voltage fluctuation	-15 to -10% of rated voltage	
	Apparent power (AC) ⁽³⁾	Inrush	5.6 VA/50 Hz, 5.0 VA/60 Hz
Electrical entry		Holding	3.4 VA/50 Hz, 2.3 VA/60 Hz
	Power consumption (DC) ⁽³⁾	1.8 W	
	Electrical entry	Plug-in type	Conduit terminal
		Non plug-in type	Grommet terminal, DIN terminal



Note 1) Use turbine oil Class 1 (ISO VG32), if lubricated. Note 3) At rated voltage

Note 2) Impact resistance: No malfunction occurred when it is tested with a drop tester in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition. (Values at the initial period)

Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was performed at both energized and de-energized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)

Option Specifications

Pilot type	External pilot Note)	
Manual override	Main valve	Direct manual override
	Pilot valve	Non-locking push type A (Extended), Locking type B (Tool required), Locking type C (Lever)
Coil rated voltage	110 to 120, 220, 240 VAC 50/60 Hz	
Porting specifications	Bottom ported	
Option	With light/surge voltage suppressor	



Note) Operating pressure:
2 position 0 to 0.9 MPa
3 position 0.15 to 0.9 MPa

Pilot pressure:
2 position single 0.2 to 0.9 MPa
2 position double 0.1 to 0.9 MPa
3 position 0.3 x P + 0.1 to 0.9 MPa
(P: Operating pressure)

Model

Type of actuation		Model		Port size	Flow characteristics ⁽¹⁾						Max. ⁽²⁾ operating cycle (Hz)	Response time ⁽³⁾ time (ms)	Mass ⁽⁴⁾ (kg)
		Plug-in	Non plug-in		1 → 4/2 (P → A/B)			4/2 → 5/3 (A/B → EA/EB)					
					C [dm³/(s·bar)]	b	Cv	C [dm³/(s·bar)]	b	Cv			
2 position	Single	VFR510□	VFR511□	3/8	17	0.36	4.7	18	0.40	5.0	5	60 or less	1.77 (1.72)
				1/2	20	0.28	5.2	23	0.32	6.2			
				3/4	23	0.27	5.8	25	0.21	6.2			
	Double	VFR520□	VFR521□	3/8	16	0.37	4.6	18	0.41	5.1	5	60 or less	1.88 (1.83)
				1/2	20	0.27	5.2	23	0.32	6.1			
				3/4	23	0.26	5.8	25	0.20	6.1			
3 position	Closed center	VFR530□	VFR531□	3/8	15	0.38	4.1	16	0.31	4.3	3	80 or less	1.87 (1.82)
				1/2	17	0.31	4.6	20	0.33	5.4			
				3/4	18	0.28	4.7	21	0.30	5.4			
	Exhaust center	VFR540□	VFR541□	3/8	14	0.38	3.6	17 [16]	0.39 [0.35]	4.8 [4.3]	3	80 or less	1.87 (1.82)
				1/2	17	0.29	4.6	21 [18]	0.31 [0.34]	5.6 [5.0]			
				3/4	18	0.29	4.6	23 [20]	0.27 [0.33]	5.9 [5.2]			
	Pressure center	VFR550□	VFR551□	3/8	16 [9.4]	0.39 [0.40]	4.2 [2.6]	17	0.36	4.5	3	80 or less	1.87 (1.82)
				1/2	18 [9.7]	0.32 [0.45]	5.0 [2.9]	20	0.31	5.3			
				3/4	19 [9.2]	0.35 [0.48]	5.4 [2.8]	21	0.29	5.6			



Note 1) []: Denotes the normal position.


Note 2) Min. operating frequency is once in 30 days.

Note 3) Based on dynamic performance test, JIS B 8375-1981. (Coil temperature: 20°C, at rated voltage, without surge voltage suppressor)

Note 4) For VFR5□00-□FZ-06, (): VFR5□10-□DZ-06

How to Order

Electrical entry
F: Plug-in type, conduit type

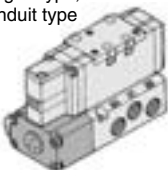

Option

Nil	None
Z *	With light/surge voltage suppressor

Porting specifications

Nil	Side ported
B *	Bottom ported

* In the case of external pilot (Option), bottom piping is not available.

Port size

Nil	Without sub-plate
03	3/8
04	1/2
06	3/4

Thread type

Nil	Rc
F	G
N	NPT
T	NPTF

Plug-in VFR5 0 0 - 5 F - 06 -

Non plug-in VFR5 1 1 - 1 D - 06 -

Symbol

1	2 position single (A)(B) 4 2 5 1 3 (EA)(P)(EB)
2	2 position double (A)(B) 4 2 5 1 3 (EA)(P)(EB)
3	3 position closed center (A)(B) 4 2 5 1 3 (EA)(P)(EB)
4	3 position exhaust center (A)(B) 4 2 5 1 3 (EA)(P)(EB)
5	3 position pressure center (A)(B) 4 2 5 1 3 (EA)(P)(EB)

Body option

0	Standard
1 *	Direct manual override

* Option

Pilot type

Nil	Internal pilot
R *	External pilot

* Option

Coil rated voltage

1	100 VAC, 50/60 Hz
2	200 VAC, 50/60 Hz
3 *	110 to 120 VAC, 50/60 Hz
4 *	220 VAC, 50/60 Hz
5	24 VDC
6 *	12 VDC
7 *	240 VAC, 50/60 Hz
9 *	Other

* Option

Electrical entry

E: Grommet terminal



D: DIN terminal



Pilot valve Manual override

Nil: Non-locking push type



A *: Non-locking push type A (Extended)



B *: Locking type B (Tool required)



C *: Locking type C (Lever)



* Option

CE-compliant

Nil	—
Q	CE-compliant *

* Electrical entry: D and F only

How to Order Pilot Valve Assembly

SF4 - 1 F - 70 -

Coil rated voltage

Symbol	Rated voltage
1	100 VAC, 50/60 Hz
2	200 VAC, 50/60 Hz
3 *	110 to 120 VAC, 50/60 Hz
4 *	220 VAC, 50/60 Hz
5	24 VDC
6 *	12 VDC
7 *	240 VAC, 50/60 Hz
9 *	Other

* Option

Manual override

Nil	Non-locking push type
A *	Non-locking push type A (Extended)
B *	Locking type B (Tool required)
C *	Locking type C (Lever)

* Option

CE-compliant


Nil	—
Q	CE-compliant

5 Port Pilot Operated Solenoid Valve
Rubber Seal, Plug-in/Non Plug-in

Series VFR5000

Use as a guide for selection.
Please confirm the actual conditions with SMC
Sizing Program.

Cylinder Speed Chart

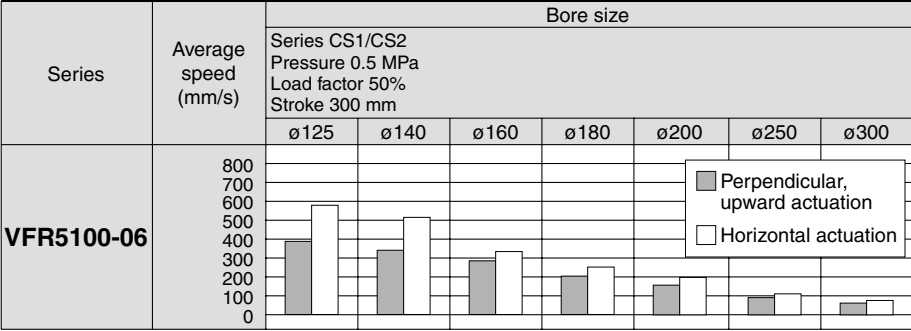


* It is when the cylinder is extending that is meter-out controlled by speed controller which is directly connected with cylinder, and its needle valve with being fully open.
* The average velocity of the cylinder is what the stroke is divided by the total stroke time.
* Load factor: ((Load weight x 9.8)/Theoretical force) x 100%

Conditions

		Series CS1/CS2
VFR5110-06	Tube x Length	SGP20A x 1 m
	Speed controller	AS500-06
	Silencer	AN500-06

How to Order Sub-plate Assembly

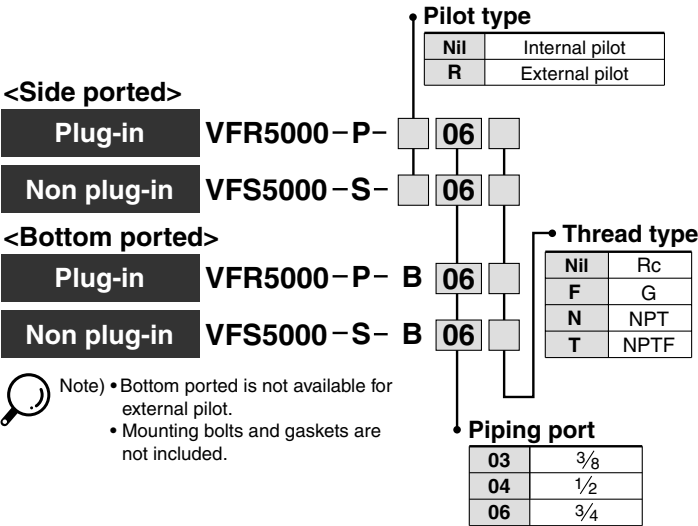


- SJ
- SY
- SV
- SYJ
- SZ
- VP4
- S0700
- VQ
- VQ4
- VQ5
- VQC
- VQZ
- SQ
- VFS
- VFR
- VQ7


Series VFR5000

Construction

2 position single

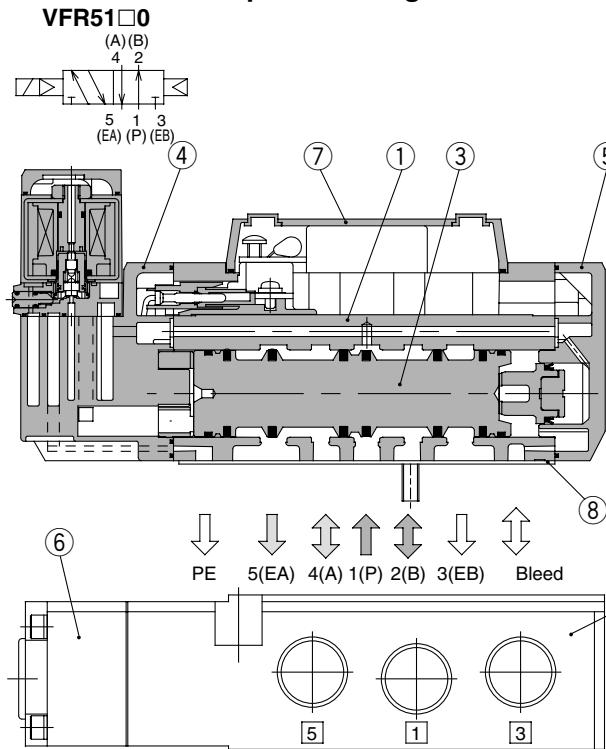


2 position double

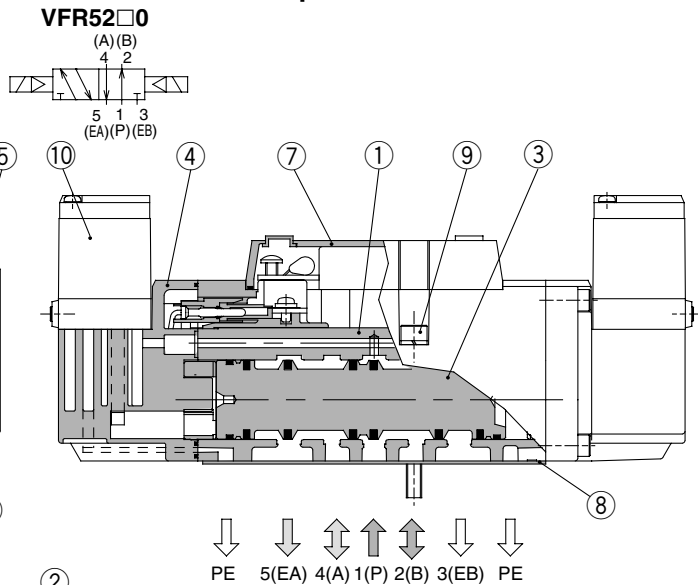


3 position closed center/exhaust center/pressure center



Closed center: VFR53□0



Exhaust center: VFR54□0



Pressure center: VFR55□0

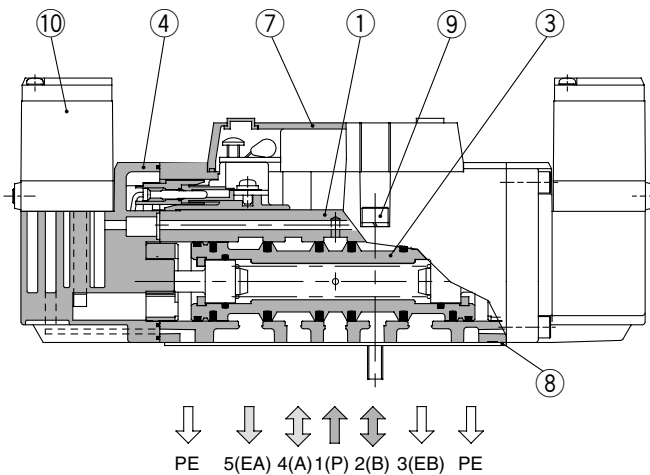

This figure shows a closed center type.

Component Parts

No.	Description	Material	Note
1	Body	Aluminum die-casted	Platinum silver
2	Sub-plate	Aluminum die-casted	Platinum silver
3	Spool valve	Aluminum, NBR	
4	Adapter plate	Resin	Black

Component Parts

No.	Description	Material	Note
5	End plate	Resin	Black
6	Junction cover	Resin	Black
7	Light cover	Resin	



Replacement Parts

No.	Description	Material	Part no.		
			VFR51□□	VFR52□□	VFR53□□/54□□/55□□
8	Gasket	NBR	AXT627-10-1	AXT627-10-1	AXT627-10-1
9	Hexagon socket head screw	Steel	AXT627-42-1 (M5 x 50)	AXT627-42-1 (M5 x 50)	AXT627-42-1 (M5 x 50)
10	Pilot valve assembly	—	Refer to "How to Order Pilot Valve Assembly" on page 1298.		

5 Port Pilot Operated Solenoid Valve Rubber Seal, Plug-in/Non Plug-in **Series VFR5000**

Plug-in: 2 Position Single/Double, 3 Position Closed Center/Exhaust Center/Pressure Center

2 position single: VFR510⁰-□F(Z)

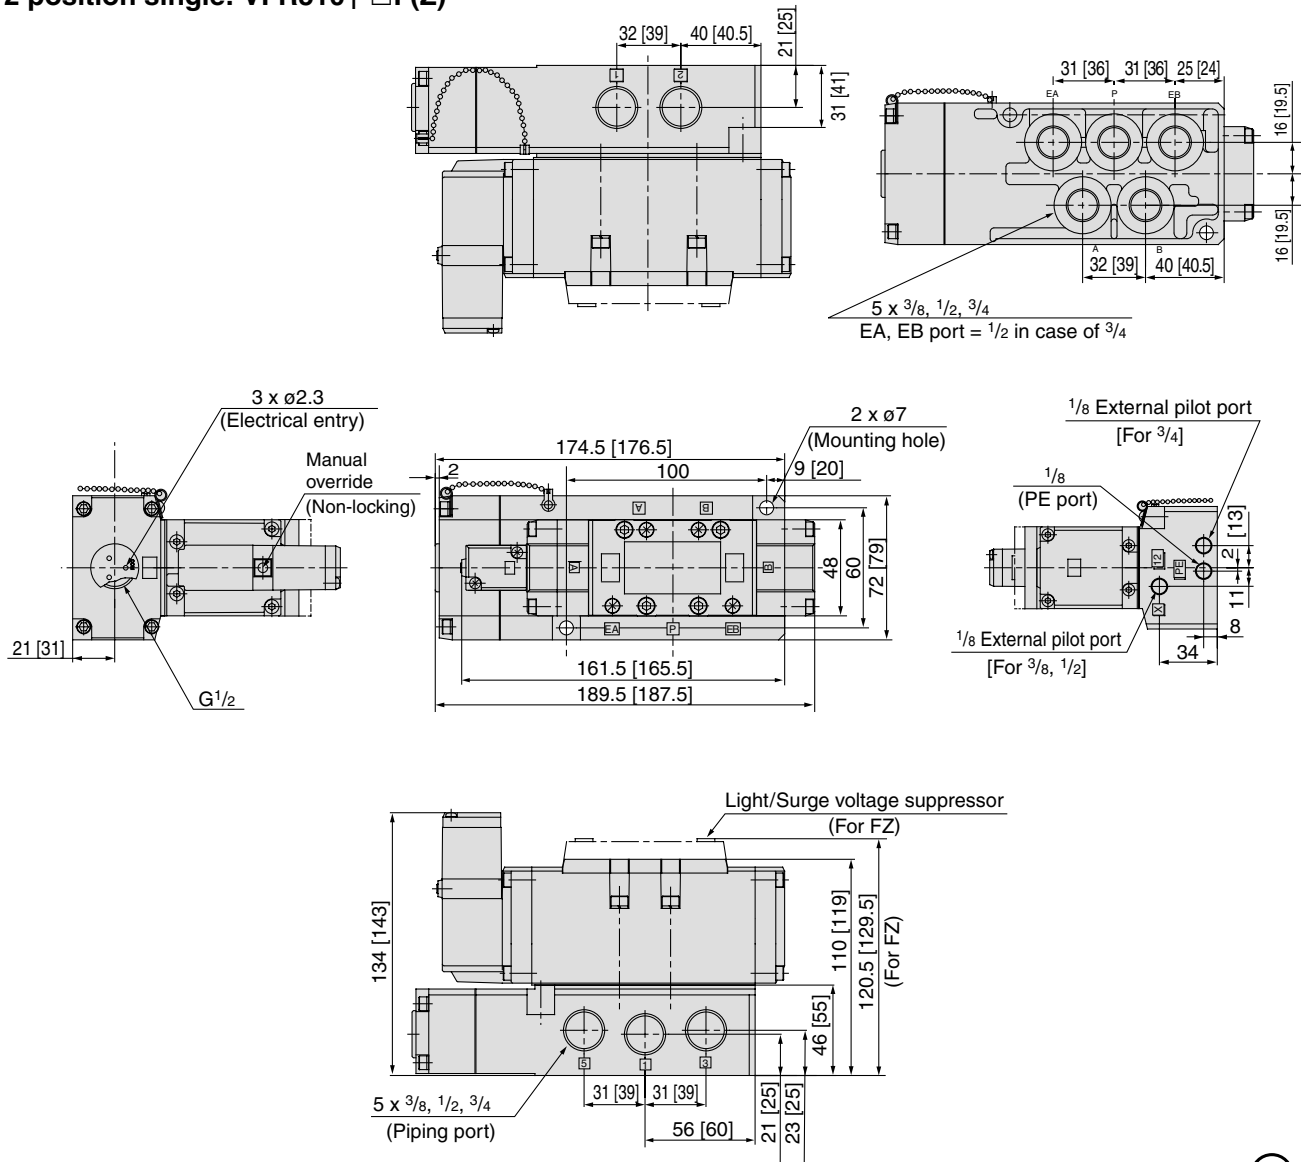


2 position double: VFR520⁰-□F(Z)

3 position closed center: VFR530⁰-□F(Z)

3 position exhaust center: VFR540⁰-□F(Z)

3 position pressure center: VFR550⁰-□F(Z)

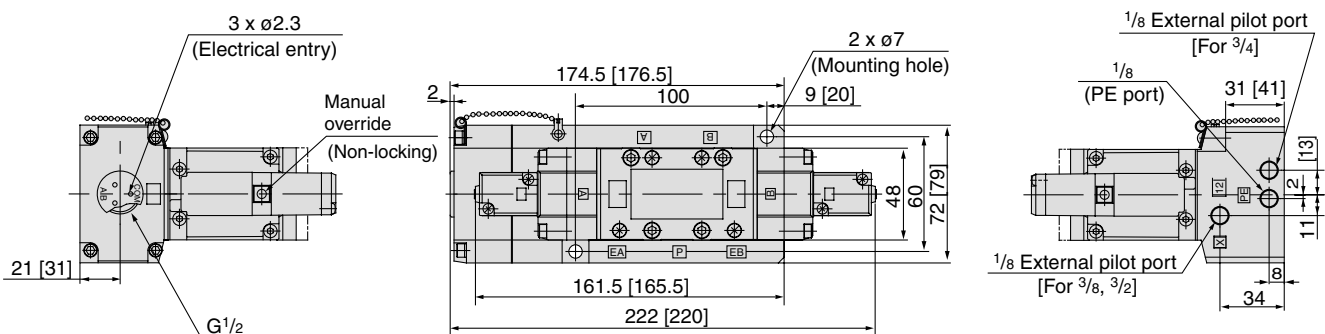


* Other dimensions are the same as the single type.
[] = 3/4

Series VFR5000

Plug-in: 2 Position Single/Double, 3 Position Closed Center/Exhaust Center/Pressure Center

2 position single: VFR511⁰-□E, VFR511⁰-□D(Z)

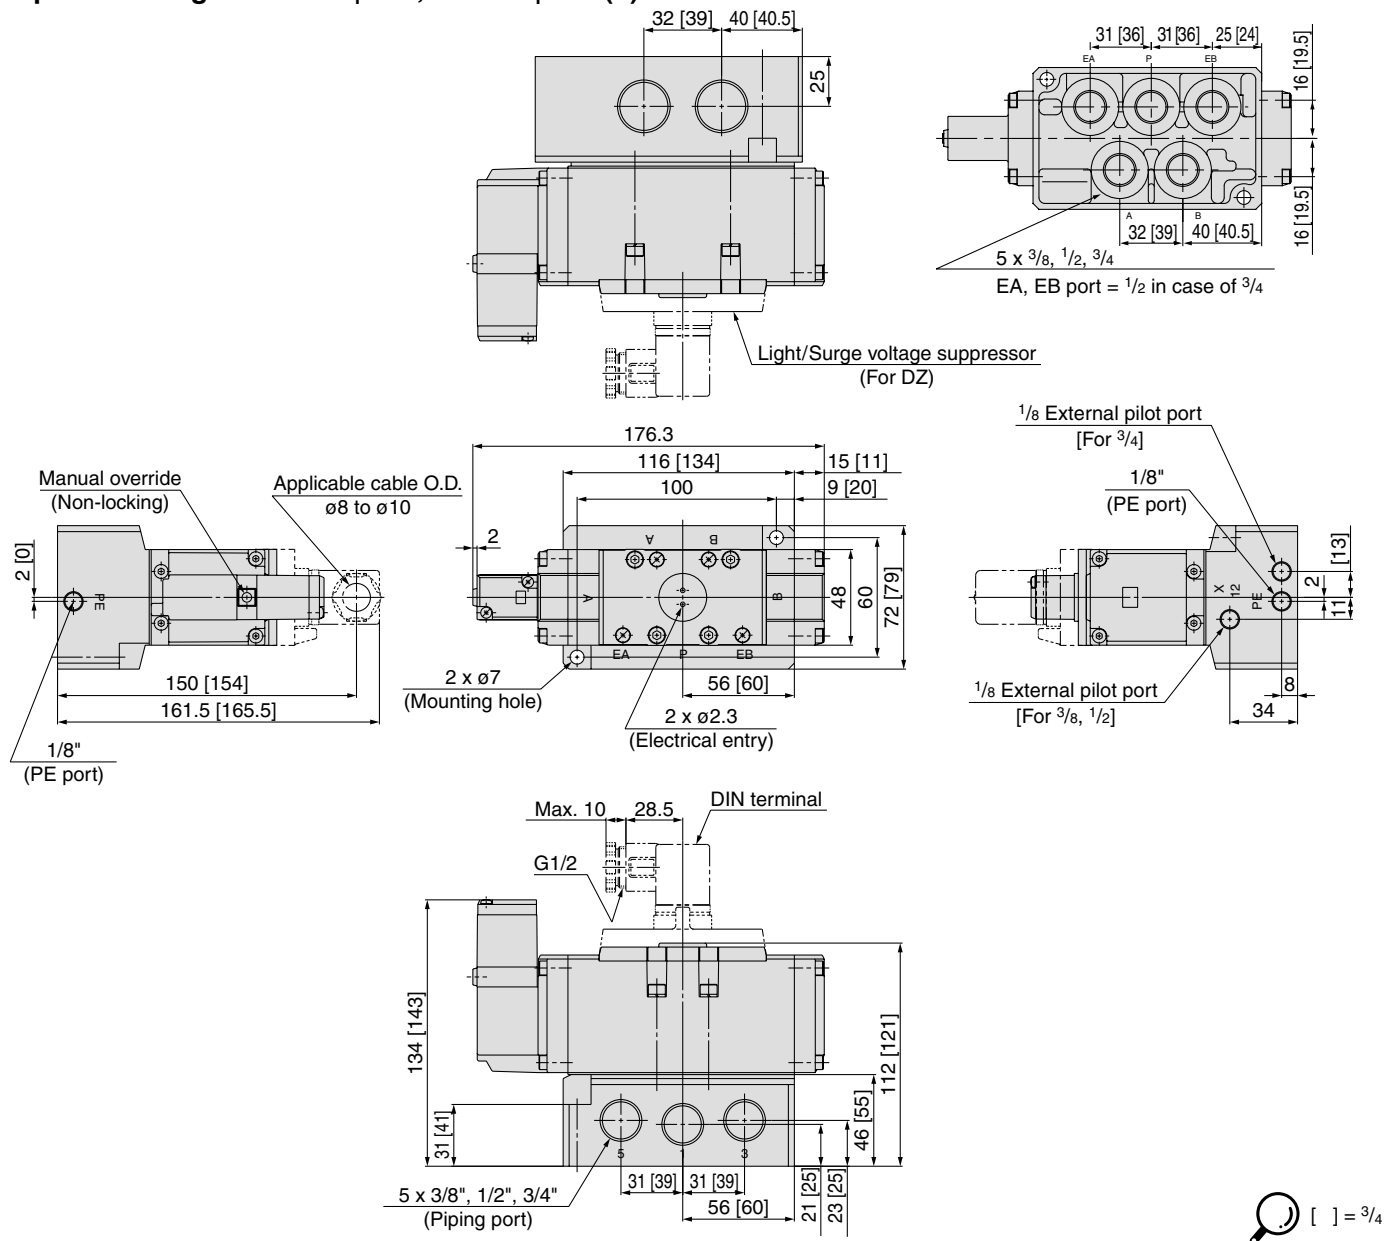


2 position double: VFR521⁰-□E, VFR521⁰-□D(Z)

3 position closed center: VFR531⁰-□E, VFR531⁰-□D(Z)

3 position exhaust center: VFR541⁰-□E, VFR541⁰-□D(Z)

3 position pressure center: VFR551⁰-□E, VFR551⁰-□D(Z)

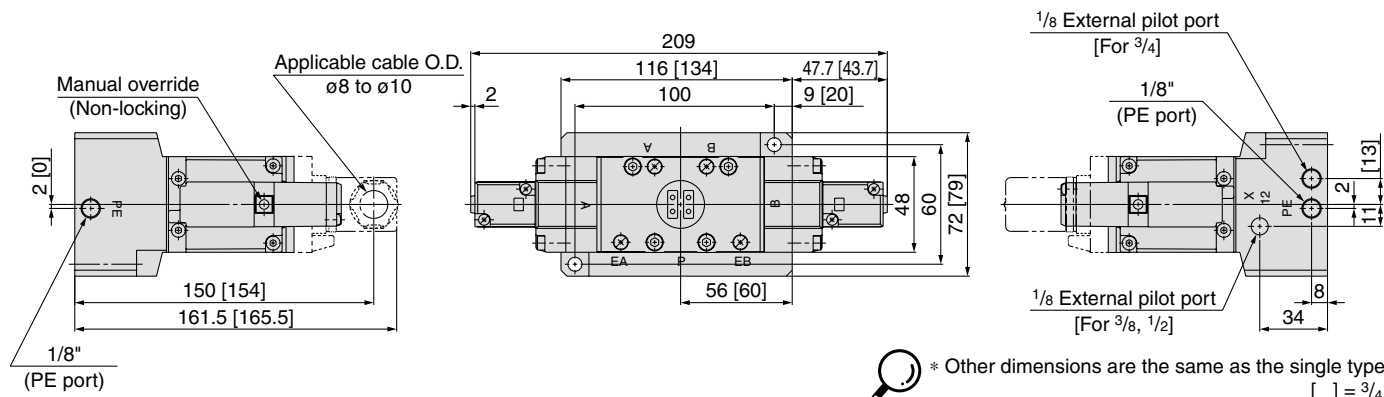

* Other dimensions are the same as the single type.
[] = 3/4

Series VFR5000 Manifold Specifications

Manifold Specifications

Base model	Wiring	Porting specifications	Port size Rc		Stations	Applicable valve model
		A, B port	P, EA, EB	A, B		
Plug-in type VV5FR5-01□(-Q)	• With terminal block • With multi-connector • With D-sub connector	Side/Bottom	3/4	1/2, 3/4	2 to 10	VFR5□0□-□F(-Q)
					2 to 8	
Non plug-in type VV5FR5-10(-Q)	• Grommet terminal • DIN terminal				2 to 10	



How to Order Manifold Assembly

Instruct by specifying the valves, blanking plate and manifold option parts assembly to be mounted on the manifold along with the manifold base model no.

<Example> Plug-in type with terminal block: 6 stations

VV5FR5-10T-061-04 1 set (Manifold part number)
***VFR5100-5FZ** 3 sets (2 position single)
***VFR5200-5FZ** 2 sets (2 position double)
***VVFS5000-10A** 1 set (Blanking plate assembly part no.)

→ The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

Valve arrangement is counted from the D side.

When ordering, specify the part nos. in order from the 1st. station in the D side.

When entry of part numbers becomes complicated, indicate on the manifold specification sheet.

<Example> Non plug-in type: 6 stations

VV5FR5-10-061-04 1 set (Manifold part number)
***VFR5110-5D** 5 sets (2 position single)
***VFR5410-5D** 1 set (3 position exhaust center)
***VVFS5000-R-04-2** 1 set (Individual EXH spacer)

→ The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.


Valve arrangement is counted from the D side.

When ordering, specify the part nos. in order from the 1st. station in the D side.

When entry of part numbers becomes complicated, indicate on the manifold specification sheet.

Plug-in Type: With Terminal Block

- Since lead wires of solenoid valve are connected with the terminals on upper surface of terminal block corresponding lead wires from power source can be wired at the bottom of terminal block.

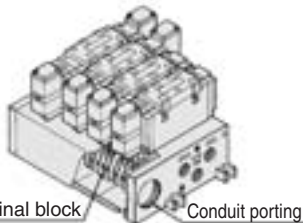

Terminal block Conduit porting

VV5FR5-01T-061-04

Series VFR5000 Manifold

Plug-in type with terminal block

Stations

02	2 stations
10	10 stations

Symbol

Symbol	Passage	Porting specifications (A, B)
1	Common	Common
2	Common	Bottom *

* Option

Port size

Symbol	P, EA, EB	A, B *
04		1/2
06	3/4	3/4
M		Mixed

* For bottom ported: 1/2 only.

CE-compliant


Nil	—
Q	CE-compliant

Thread type

Nil	Rc
F	G
N	NPT
T	NPTF

Plug-in Type: With Multi-connector (For wiring specifications, refer to page 1326.)

- Master connection of power and solenoid valves.
- Quick wiring permits ease of installation.

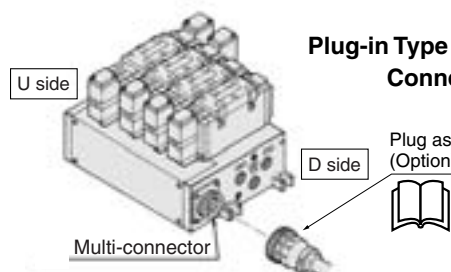

Plug-in Type with multi-connector

Connector mounting direction

D	D side mounting
U	U side mounting

VV5FR5-01CD-051-04

Series VFR5000 Manifold

Plug-in Type with multi-connector

Stations

02	2 stations
08	8 stations

* Max: 8 stations

Symbol

Symbol	Passage	Porting specifications (A, B)
1	Common	Common
2	Common	Bottom *

* Option

Port size

Symbol	P, EA, EB	A, B *
04		1/2
06	3/4	3/4
M		Mixed

* For bottom ported: 1/2 only.

CE-compliant

Nil	—
Q	CE-compliant



Thread type

Nil	Rc
F	G
N	NPT
T	NPTF

Series VFR5000



Plug-in Type: With D-sub Connector (For wiring specifications, refer to page 1326.)

- Wide range of interchangeability (D-sub connector (25P) conforming to MIL standard)
- Quick wiring permits easier installation.

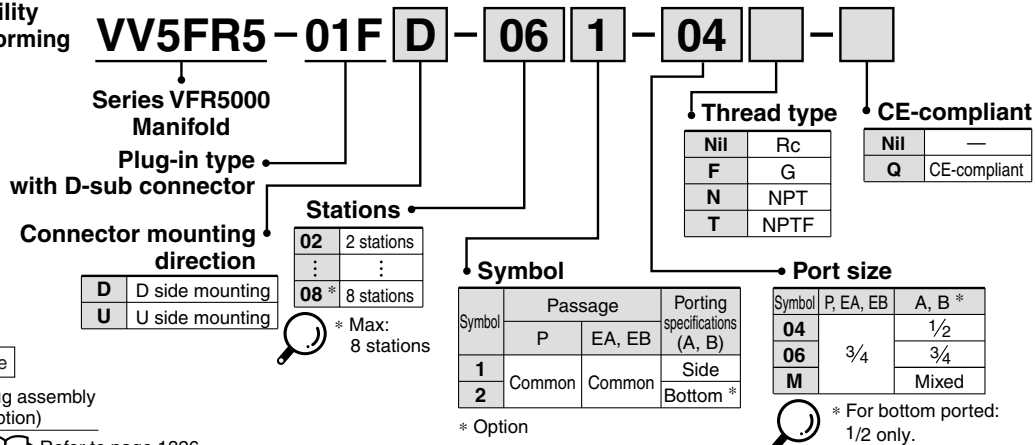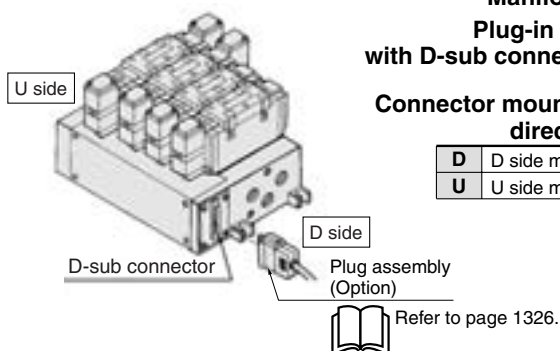

Non Plug-in Type: Grommet Terminal, DIN Terminal

- Wiring for every valve

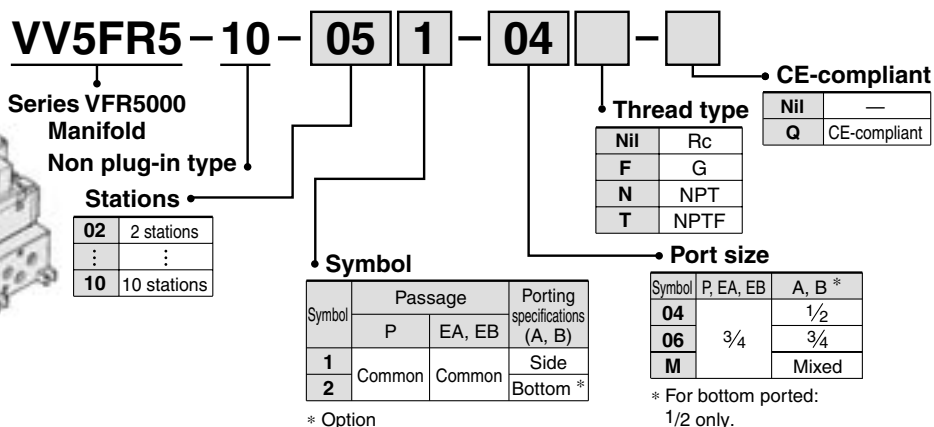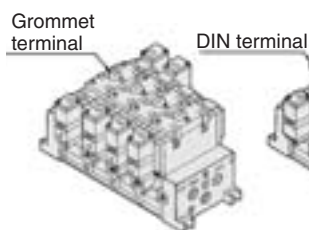

Note) Manifold base is common for Series VFS5000. Terminal block is not required.


5 Port Pilot Operated Solenoid Valve Rubber Seal, Plug-in/Non Plug-in *Series VFR5000*

Manifold/Option Parts Assembly

Individual SUP spacer

Supply port can be located at each valve individually after individual SUP spacer is mounted on manifold block.


Body type	Plug-in type	Non plug-in type
Part no.	VVFS5000-P-04-1	VVFS5000-P-04-2



Individual EXH spacer

Exhaust port can be located at each valve individually after individual EXH spacer is mounted on manifold block. (Common EXH type)

Body type	Plug-in type	Non plug-in type
Part no.	VVFS5000-R-04-1	VVFS5000-R-04-2



SUP block disk

When 2 or more pressures (high and low) are supplied to one manifold, insert a disk between the stations which are supplied different pressures.

Body type	Plug-in type	Non plug-in type
Part no.	AXT628-12A	

EXH block disk

Use exhaust blocks to eliminate back flow to other stations. Use supply disks to operate two pressures on the same manifold.

Body type	Plug-in type	Non plug-in type
Part no.	AXT512-14-1A	



EXH block disk



SUP block disk

Throttle valve spacer

Mount interface speed control on manifold block. Cylinder speed can be controlled by metered out flow.


Body type	Plug-in type	Non plug-in type
Part no.	VVFS5000-20A-1	VVFS5000-20A-2



Interface regulator

When interface regulator is mounted on manifold block, regulation to that valve is possible. (Refer to "Flow Characteristics" on page 1324 before operation.)

Body type	Plug-in type	Non plug-in type
P port regulation	ARBF5050-00-P-1	ARBF5050-00-P-2
A port regulation	ARBF5050-00-A-1	ARBF5050-00-A-2
B port regulation	ARBF5050-00-B-1	ARBF5050-00-B-2

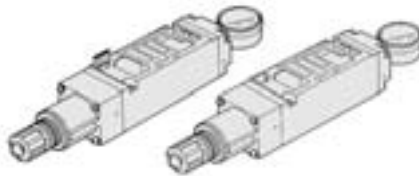

Blanking plate


It is used by attaching on the manifold block for being prepared for removing a valve for maintenance reasons or planning to mount a spare valve, etc.

Body type	Plug-in type	Non plug-in type
Part no.	VVFS5000-10A	

Manifold Option

With exhaust cleaner Plug-in type/Non plug-in type

- High noise reduction effect: 35 dB or more
- Drainage and mist are collected (99.9% or more).
- Piping work is reduced.

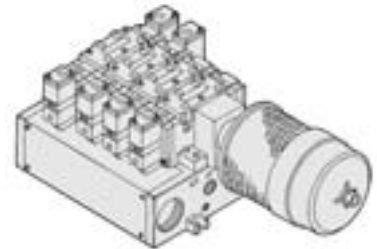

For details, refer to page 1308.

SJ

SY

SV

SYJ

SZ

VP4

S0700

VQ

VQ4

VQ5

VQC

VQZ

SQ

VFS


VFR

VQ7

Series VFR5000

Manifold/Plug-in type: With Multi-connector/With D-sub connector

Plug-in type/With multi-connector: VV5FR5-01CD- Station 1- Bore size , VV5FR5-01CU- Station 1- Bore size

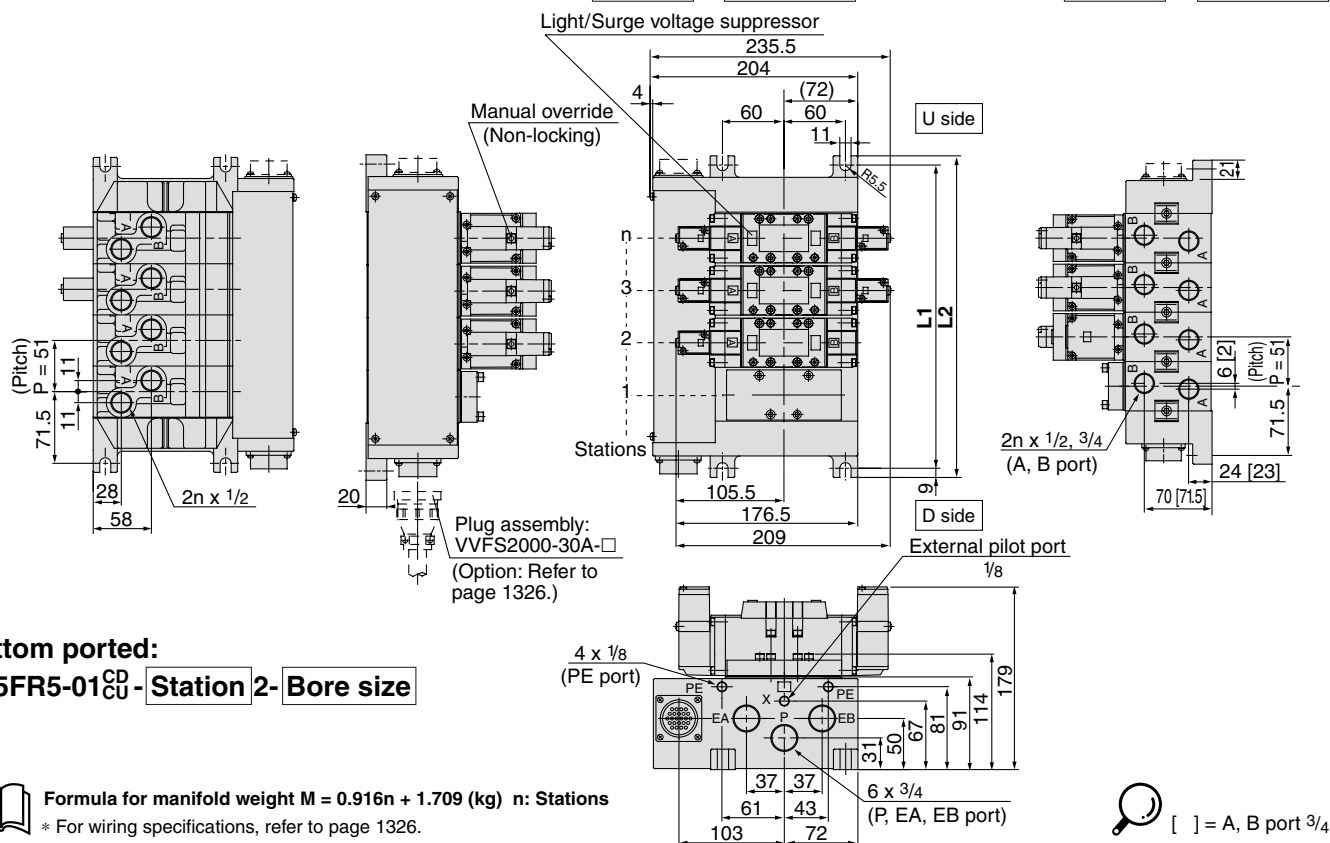

Bottom ported:

VV5FR5-01^{CD}_{CU} - Station 2- Bore size




Formula for manifold weight $M = 0.916n + 1.709$ (kg) n: Stations

* For wiring specifications, refer to page 1326.

[] = A, B port 3/4

Plug-in type/With D-sub connector: VV5FR5-01FD- Station 1- Bore size , VV5FR5-01FU- Station 1- Bore size

Plug-in type/With D-sub connector: VV5FR5-01FD- Station 1- Bore size , VV5FR5-01FU- Station 1- Bore size

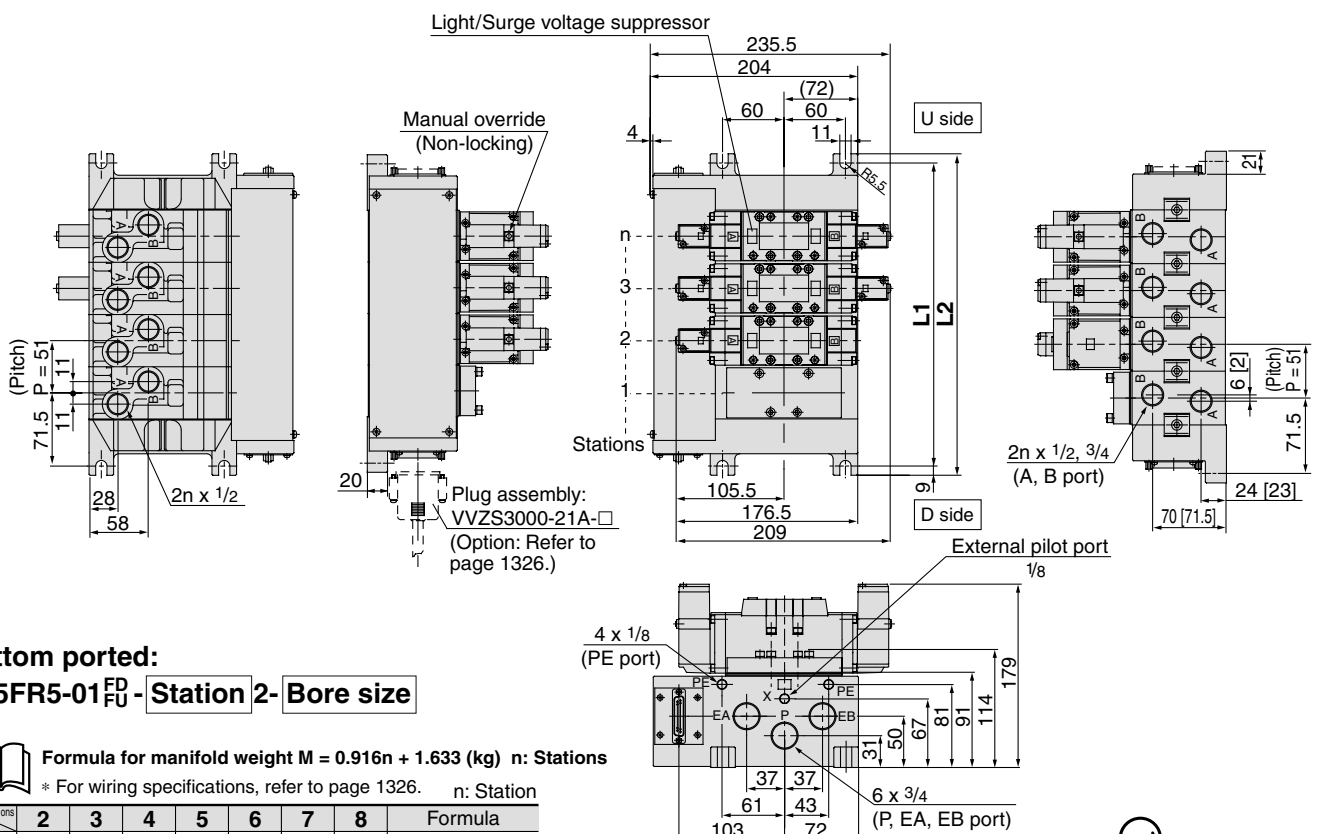

Bottom ported:

VV5FR5-01^{FD}_{FU} - Station 2- Bore size



Formula for manifold weight $M = 0.916n + 1.633$ (kg) n: Stations

* For wiring specifications, refer to page 1326.

n: Station

Stations	2	3	4	5	6	7	8	Formula
L ₁	194	245	296	347	398	449	500	$L_1 = 51 \times n + 92$
L ₂	212	263	314	365	416	467	518	$L_2 = 51 \times n + 110$





$[\quad] = A, B \text{ port } 3/4$



5 Port Pilot Operated Solenoid Valve Rubber Seal, Plug-in/Non Plug-in **Series VFR5000**

Manifold with Exhaust Cleaner: Plug-in Type/Non Plug-in Type

Plug-in type: VV5FR5-01T-Station 1-Port size - $\frac{CD}{CU}$

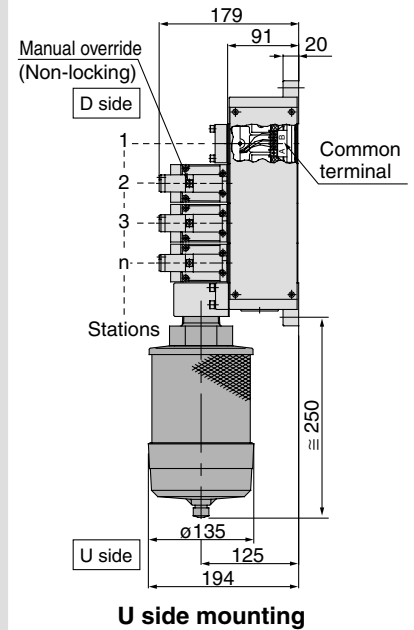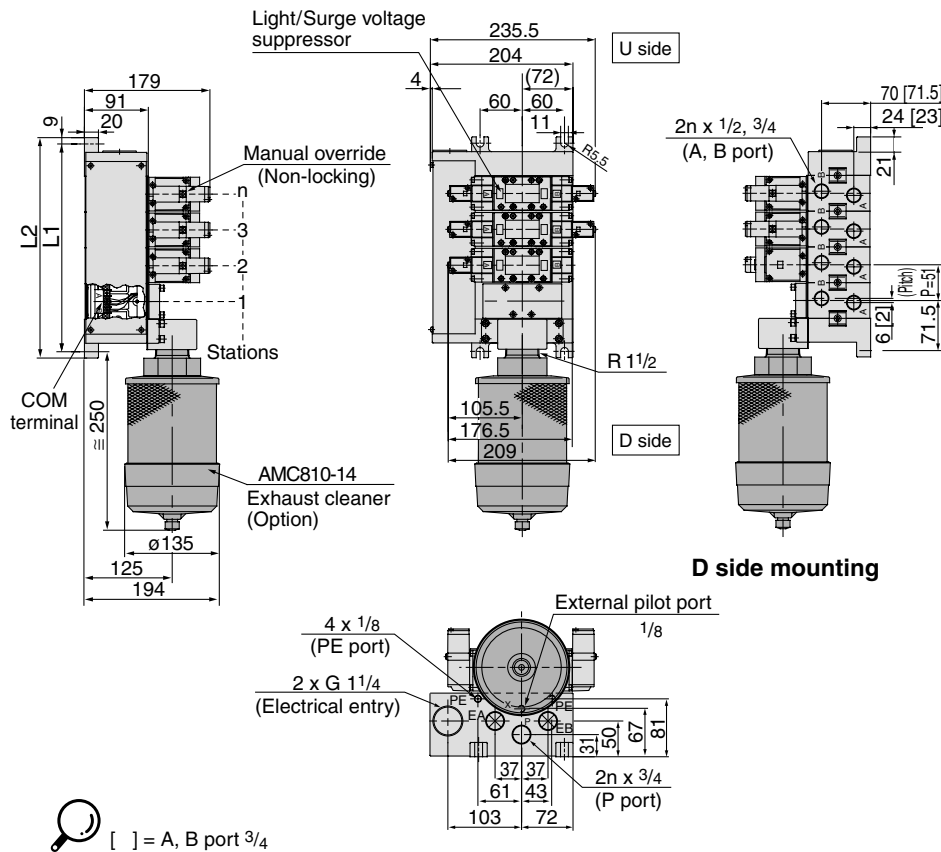

Non plug-in type: VV5FR5-10-Station 1-Port size - $\frac{CD}{CU}$

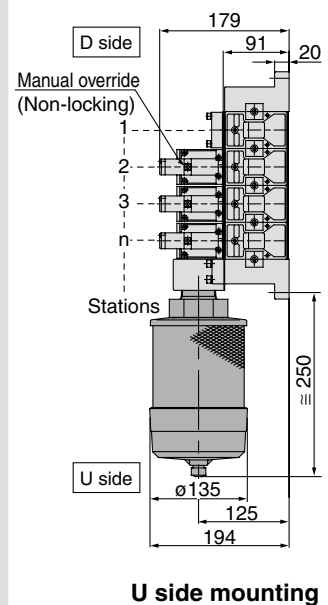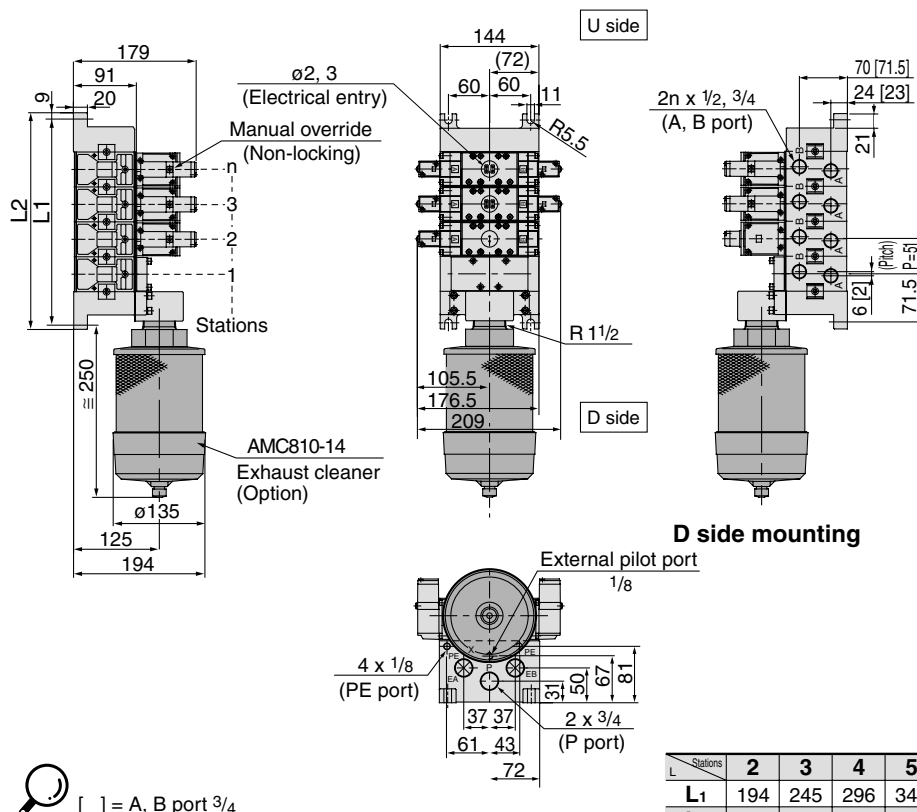

n: Stations										
Stations	2	3	4	5	6	7	8	9	10	Formula
L1	194	245	296	347	398	449	500	551	602	L1 = 51 x n + 92
L2	212	263	314	365	416	467	518	569	620	L2 = 51 x n + 110


Series VFR5000

Manifold Option Parts Assembly/Plug-in Type, Non Plug-in Type

Individual SUP spacer

VVFS5000-P-04-1 (Plug-in type)


VVFS5000-P-04-2 (Non plug-in type)

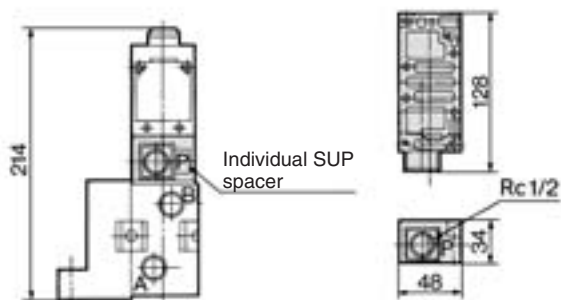

Interface regulator/P port regulation

ARBF5050-00-P-1 (Plug-in type)


ARBF5050-00-P-2 (Non plug-in type)

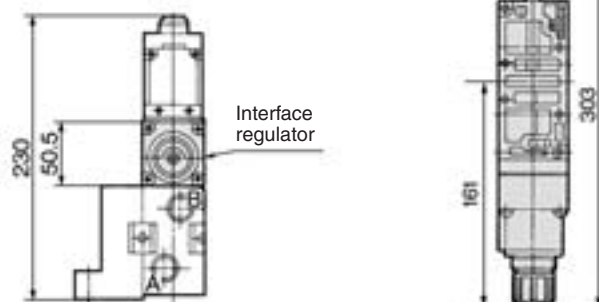

Individual EXH spacer

VVFS5000-R-04-1 (Plug-in type)


VVFS5000-R-04-2 (Non plug-in type)

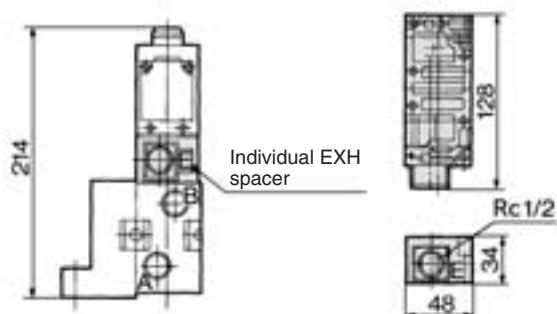

Interface regulator/A port regulation


ARBF5050-00-A-1 (Plug-in type)

ARBF5050-00-A-2 (Non plug-in type)

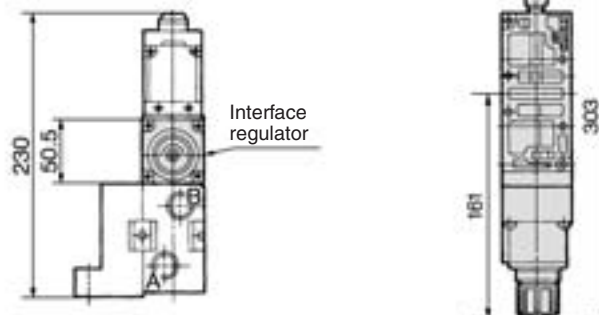

SUP block disk: AXT628-12A


EXH block disk: AXT512-14-1A

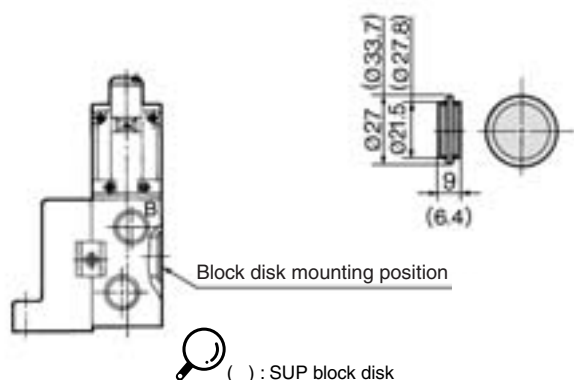

Interface regulator/B port regulation

ARBF5050-00-B-1 (Plug-in type)


ARBF5050-00-B-2 (Non plug-in type)

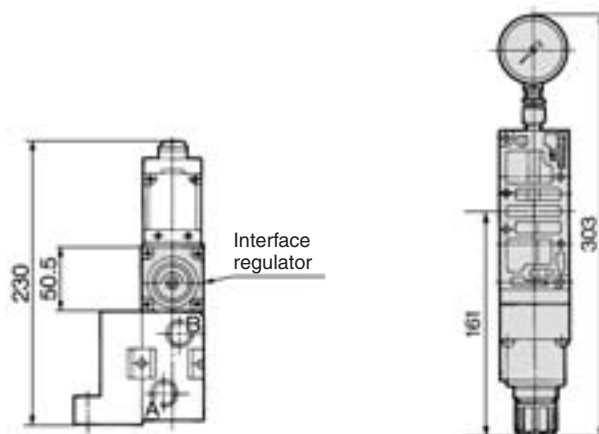


Throttle valve spacer

VVFS5000-20A-1 (Plug-in type)

VVFS5000-20A-2 (Non plug-in type)

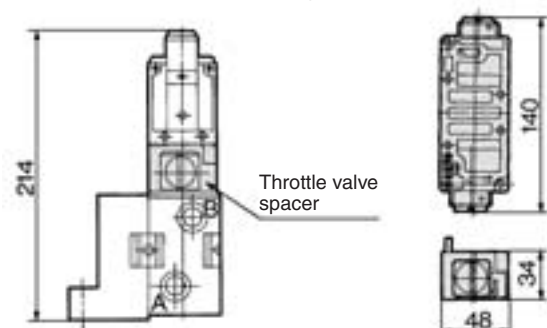

Manifold Base Construction: Plug-in Type/Non Plug-in Type

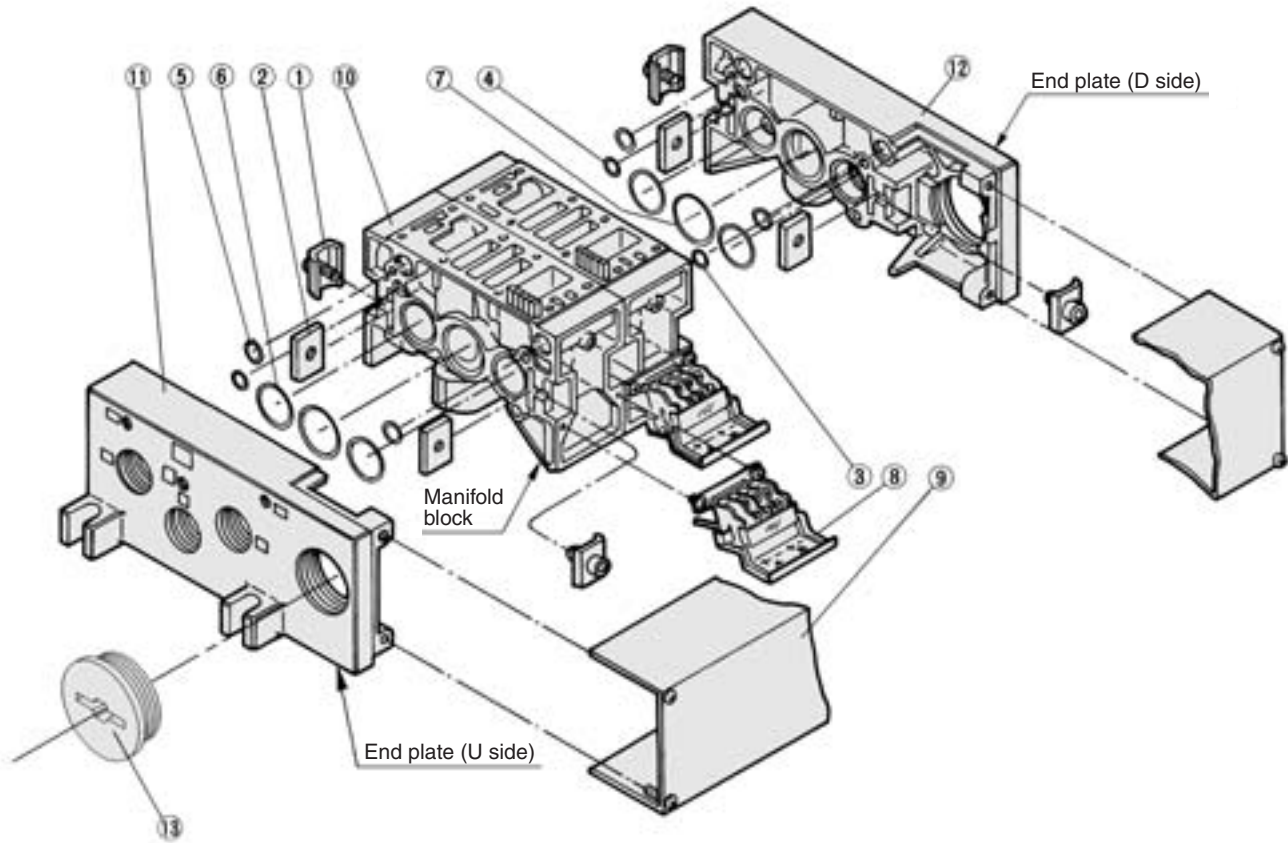

Replacement Parts

No.	Description	Material	Part no.
1	Connection fitting A	Steel plate	AXT628-6-1A
2	Connection fitting B	Steel plate	AXT628-6-2
3	O-ring	NBR	AS568-006
4	O-ring	NBR	AS568-010
5	O-ring	NBR	AS568-013
6	O-ring	NBR	AS568-022
7	O-ring	NBR	AS568-026
8	Terminal block assembly	—	VFR5000-21-1A
9	Junction cover assembly	For 01T	VVFS5000-4A- [Stations]
13	Rubber plug	NBR	AXT336-9

- When requiring replacement manifold stations, order replacement parts assembly no. ⑩: manifold block assembly part.
For plug-in type: The manifold base with terminal stand (integrated with a junction cover) is required with the ⑨ junction cover assembly.

Replacement Parts: Sub Assembly



Note) Manifold Base/Construction: Plug-in type with terminal block.

No.	Description	Assembly part no.	Component parts	Applicable manifold base
10	Manifold block assembly	VFR5000-20-1A- 04 06	Manifold block ⑩, Metal joint ①, ②, Terminal block ⑧, O-ring ③, ④, ⑤, ⑥, ⑦, Receptacle assembly	Plug-in type
		VVFS5000-1A-2- 04 06	Manifold block ⑩, Metal joint ①, ②, O-ring ③, ④, ⑤, ⑥, ⑦	Non plug-in type
11	End plate (U side) assembly	VVFS5000-2A-1	End plate (U) ⑪, Metal joint ①, ②	Plug-in type
		VVFS5000-2A-2	End plate (U) ⑪, Metal joint ①, ②	Non plug-in type
12	End plate (D side) assembly	VVFS5000-3A-1	End plate (D) ⑫, Metal joint ①, ②, O-ring ③, ④, ⑤, ⑥, ⑦	Plug-in type
		VVFS5000-3A-2	End plate (D) ⑫, Metal joint ①, ②, O-ring ③, ④, ⑤, ⑥, ⑦	Non plug-in type

* Contact SMC for CE-compliant products.

5 Port Pilot Operated Solenoid Valve Rubber Seal, Plug-in/Non Plug-in Series **VFR6000**




Plug-in type



Non plug-in type

JIS Symbol

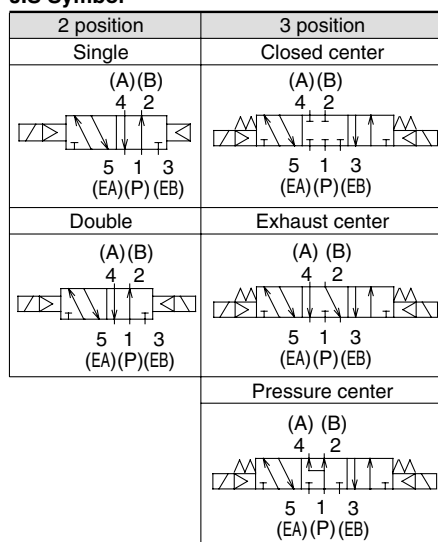

Caution

When double solenoid is used, spool valve should be mounted horizontally.
If there are vibrations, spool valve should be mounted perpendicular to the vibration direction.

Standard Specifications

Valve specifications	Fluid		Air	
	Operating pressure range	2 position single/3 position	0.2 to 0.9 MPa	
		2 position double	0.1 to 0.9 MPa	
	Ambient and fluid temperature		−10 to 50°C (No freezing. Refer to page 5.)	
	Lubrication		Non-lube ⁽¹⁾	
	Manual override		Non-locking push type	
	Shock/Vibration resistance		300/50m/s ² ⁽²⁾	
	Enclosure		Dustproof	
Electricity specifications	Coil rated voltage		100, 200 VAC (50/60 Hz), 24 VDC	
	Allowable voltage fluctuation		−15 to −10% of rated voltage	
	Apparent power (AC) ⁽³⁾	Inrush	5.6 VA/50 Hz, 5.0 VA/60 H	
		Holding	3.4 VA/50 Hz, 2.3 VA/60 Hz	
	Power consumption (DC) ⁽³⁾		1.8 W	
	Electrical entry		Plug-in type	Conduit terminal
Non plug-in type			Grommet terminal, DIN terminal	



Note 1) Use turbine oil Class 1 (ISO VG32), if lubricated.

Note 3) At rated voltage

Note 2) Impact resistance: No malfunction occurred when it is tested with a drop tester in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition. (Values at the initial period)

Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was performed at both energized and de-energized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)

Option Specifications

Main valve manual override	Direct manual override
Coil rated voltage	110 to 120, 220, 240 VAC 50/60 Hz 12 VDC
Option	With light/surge voltage suppressor

Model

Type of actuation		Model		Port size	Flow characteristics ⁽¹⁾						Max. operating cycle (Hz) ⁽²⁾	Response time (ms) ⁽³⁾	Mass (kg) ⁽⁴⁾
					1 → 4/2 (P → A/B)			4/2 → 5/3 (A/B → EA/EB)					
		Plug-in	Non plug-in		C [dm³/s-bar]	b	Cv	C [dm³/s-bar]	b	Cv			
2 position	Single	VFR610□	VFR611□	3/4	40	0.12	9.1	41	0.15	9.6	2	100 or less	4.73 (4.56)
	Double	VFR620□	VFR621□	3/4	40	0.14	9.2	41	0.17	9.7	2	100 or less	4.78 (4.61)
3 position	Closed center	VFR630□	VFR631□	3/4	39	0.17	9.3	39	0.15	9.3	1	150 or less	4.72 (4.55)
	Exhaust center	VFR640□	VFR641□	3/4	38	0.14	8.9	42 [40]	0.12 [0.15]	9.6 [9.4]	1	150 or less	4.72 (4.55)
	Pressure center	VFR650□	VFR651□	3/4	38 [20]	0.10 [0.44]	8.7 [5.7]	40	0.16	9.3	1	150 or less	4.72 (4.55)

Type of actuation		Model		Port size	Effective area (mm ²)
		Plug-in	Non plug-in		
2 position	Single	VFR610□	VFR611□	1	191
	Double	VFR620□	VFR621□	1	191
3 position	Closed center	VFR630□	VFR631□	1	180
	Exhaust center	VFR640□	VFR641□	1	P → A, B: 178 A, B → EA, EB: 212 Normal position: 193
	Pressure center	VFR650□	VFR651□	1	P → A, B: 183 Normal position: 82 A, B → EA, EB: 199



Note 1) []: Denotes the normal position.

Note 2) Min. operating frequency is once in 30 days.


Note 3) Based on dynamic performance test, JIS B 8375-1981. (Coil temperature: 20°C, at rated voltage, without surge voltage suppressor)

Note 4) For VFR6□00-□FZ-06, (): VFR6□10-□DZ-06

5 Port Pilot Operated Solenoid Valve Rubber Seal, Plug-in/Non Plug-in *Series VFR6000*

How to Order

Electrical entry
F: Plug-in type, conduit type

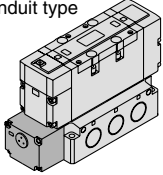

Option

Nil	None
Z	With light/surge voltage suppressor

Port size

Nil	Without sub-plate
06	3/4
10	1

Plug-in VFR6 0 0 - 5 F - 10 -

Non plug-in VFR6 1 1 - 1 D - 10 -

Symbol

1 2 position single (A)(B)
4 2
5 1 3
(EA)(P)(EB)

2 2 position double (A)(B)
4 2
5 1 3
(EA)(P)(EB)

3 3 position closed center (A)(B)
4 2
5 1 3
(EA)(P)(EB)

4 3 position exhaust center (A)(B)
4 2
5 1 3
(EA)(P)(EB)

5 3 position pressure center (A)(B)
4 2
5 1 3
(EA)(P)(EB)

Body option

0	Standard
1*	Direct manual override

* Option

Coil rated voltage

1	100 VAC, 50/60 Hz
2	200 VAC, 50/60 Hz
3*	110 to 120 VAC, 50/60 Hz
4*	220 VAC, 50/60 Hz
5	24 VDC
6*	12 VDC
7*	240 VAC, 50/60 Hz
9*	Other

* Option

Thread type

Nil	Rc
F	G
N	NPT
T	NPTF


CE-compliant

Nil	—
Q	CE-compliant *


* Electrical entry: D and F only

Electrical entry

E: Grommet terminal

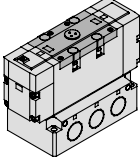

D: DIN terminal

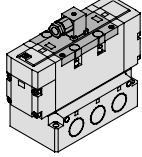

SJ
SY
SV
SYJ
SZ
VP4
S0700
VQ
VQ4
VQ5
VQC
VQZ
SQ
VFS
VFR
VQ7

How to Order Pilot Valve Assembly

SF4 - 1 F - 22 -

Coil rated voltage

Symbol	Rated voltage
1	100 VAC, 50/60 Hz
2	200 VAC, 50/60 Hz
3*	110 to 120 VAC, 50/60 Hz
4*	220 VAC, 50/60 Hz
5	24 VDC
6*	12 VDC
7*	240 VAC, 50/60 Hz
9*	Other

* Option


CE-compliant

Nil	—
Q	CE-compliant

Series VFR6000

Use as a guide for selection.
Please confirm the actual conditions with SMC
Sizing Program.

Cylinder Speed Chart

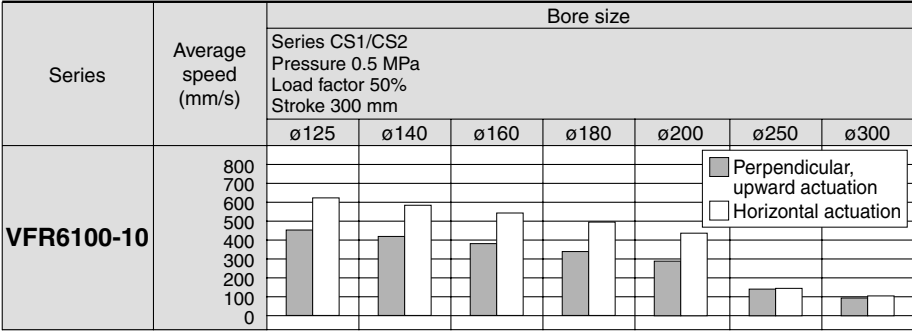

- * It is when the cylinder is extending that is meter-out controlled by speed controller which is directly connected with cylinder, and its needle valve with being fully open.
- * The average velocity of the cylinder is what the stroke is divided by the total stroke time.
- * Load factor: ((Load weight x 9.8)/Theoretical force) x 100%

Conditions

		Series CS1/CS2
VFR6110-10	Tube x Length	SGP25A x 1 m
	Speed controller	AS600-10
	Silencer	AN600-10

How to Order Sub-plate Assembly

Plug-in

VFR6000-P-10

Non plug-in

VFS6000-S-10

Note)

- Not applicable for external pilot.
- Not applicable for bottom ported.
- Mounting bolt and gasket are not included.

Piping port
(P, A, B, EA, EB port)

06	3/4
10	1


Thread type

Nil	Rc
F	G
N	NPT
T	NPTF


5 Port Pilot Operated Solenoid Valve Rubber Seal, Plug-in/Non Plug-in *Series VFR6000*

Construction

2 position single

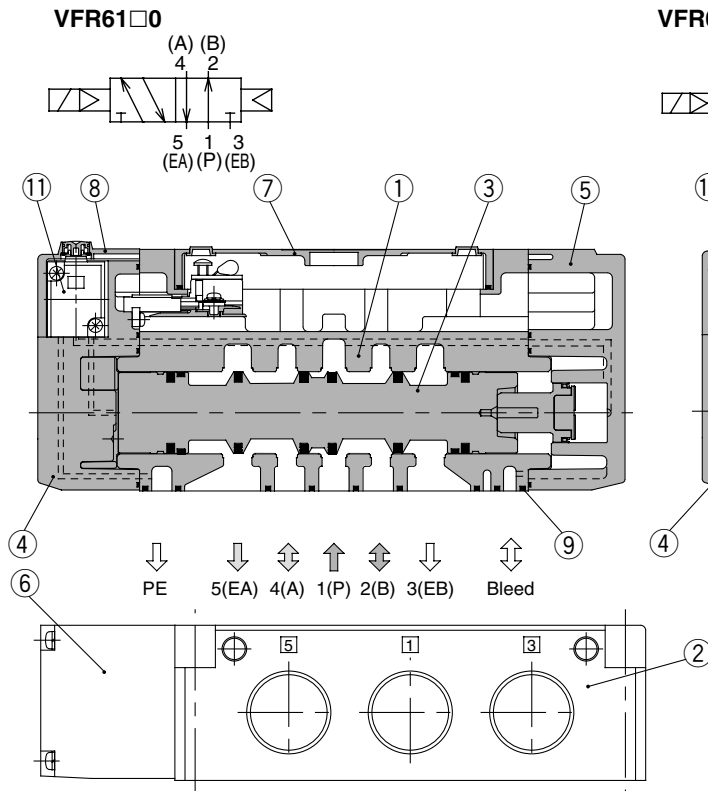


2 position double

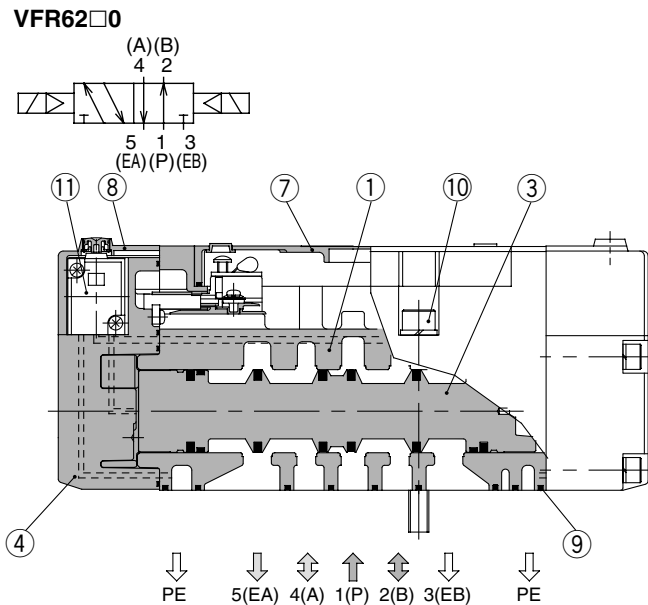


3 position closed center/exhaust center/pressure center



Closed center: VFR63□0

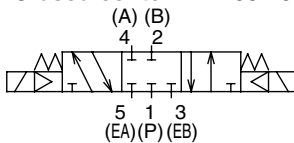

Exhaust center: VFR64□0

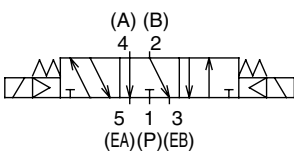

Pressure center: VFR65□0

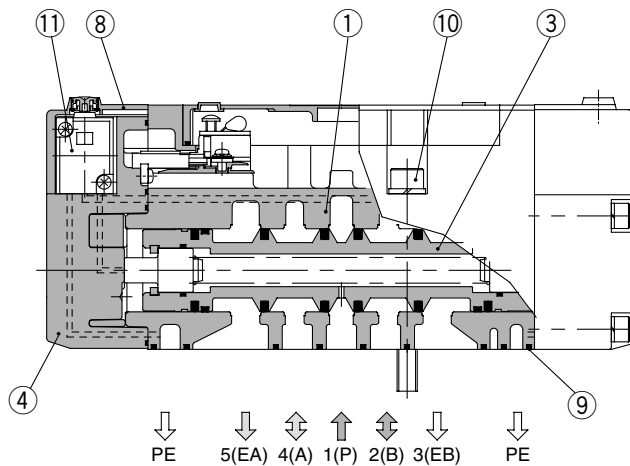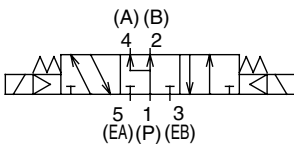

This figure shows a closed center type.

Component Parts

No.	Description	Material	Note
1	Body	Aluminum die-casted	Platinum silver
2	Sub-plate	Aluminum die-casted	Platinum silver
3	Spool valve	Aluminum, NBR	
4	Adapter plate	Aluminum die-casted	Black

Component Parts

No.	Description	Material	Note
5	End plate	Aluminum die-casted	Black
6	Junction cover	Resin	Black
7	Light cover	Resin	
8	Pilot valve cover	Resin	Black


Replacement Parts

No.	Description	Material	Part no.		
			VFR61□□	VFR62□□	VFR63□□/64□□/65□□
9	Gasket	NBR	VFS6000-15	VFS6000-15	VFS6000-15
10	Hexagon socket head screw	Steel	M8 x 80	M8 x 80	M8 x 80
11	Pilot valve assembly	—	Refer to "How to Order Pilot Valve Assembly" on page 1313.		

Series VFR6000

Plug-in: 2 Position Single/Double, 3 Position Closed Center/Exhaust Center/Pressure Center

2 position single: VFR610⁰-□F(Z)

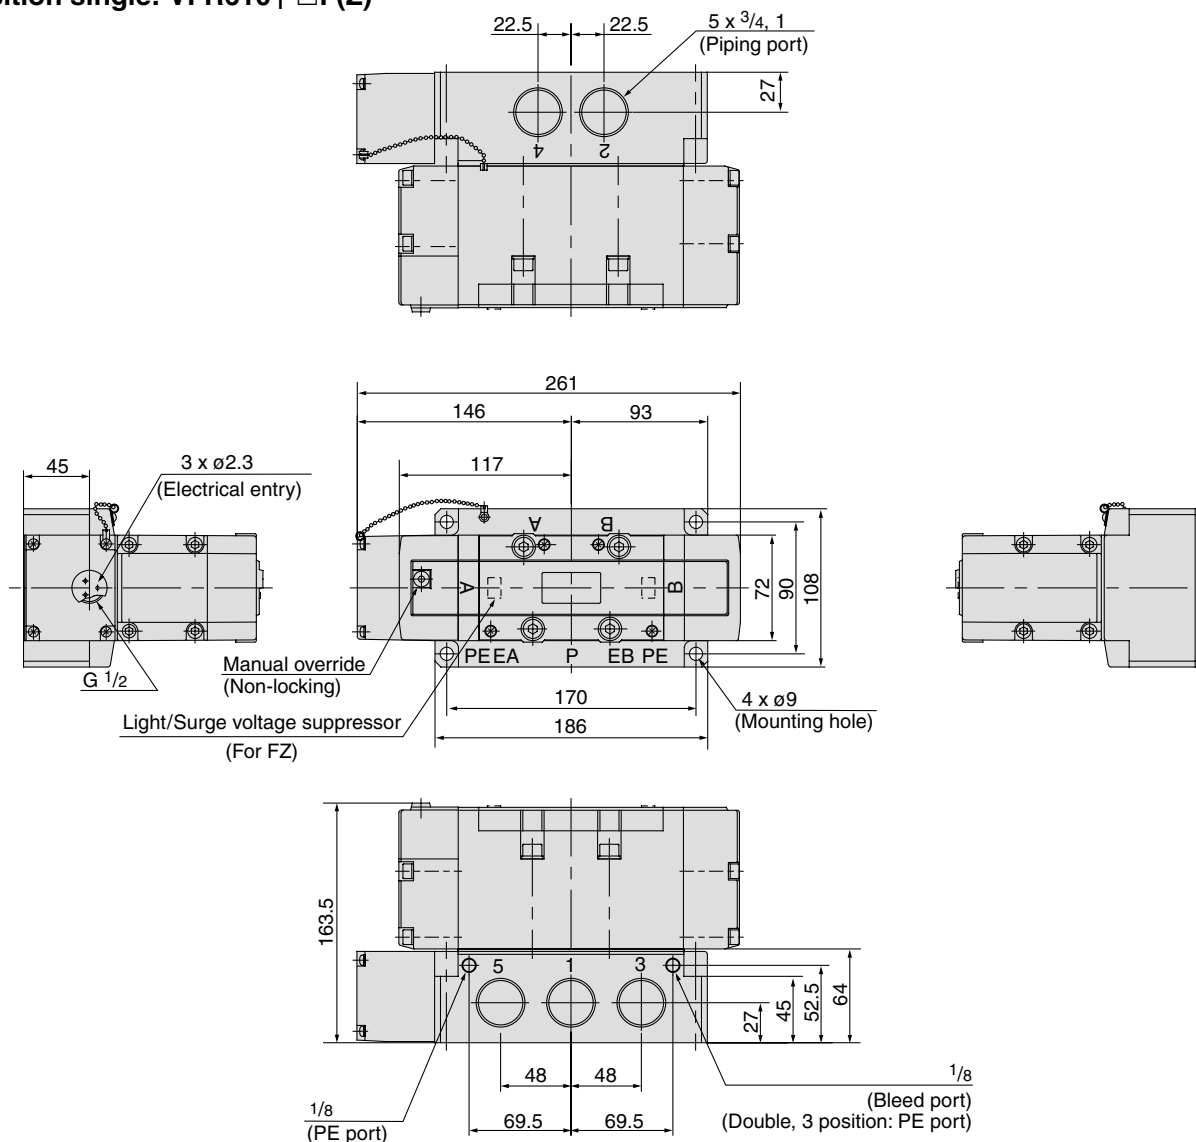


2 position double: VFR620⁰-□F(Z)

3 position closed center: VFR630⁰-□F(Z)

3 position exhaust center: VFR640⁰-□F(Z)

3 position pressure center: VFR650⁰-□F(Z)

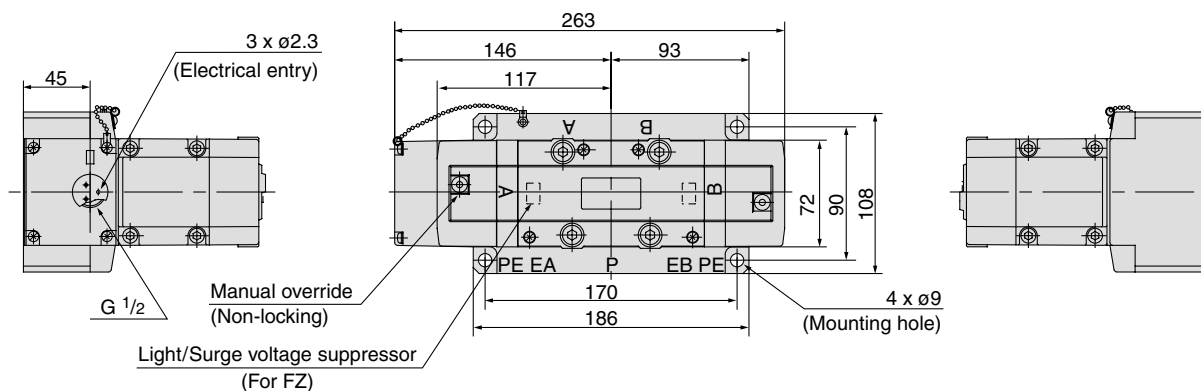


* Other dimensions are the same as the single type.


5 Port Pilot Operated Solenoid Valve Rubber Seal, Plug-in/Non Plug-in **Series VFR6000**

Non Plug-in: 2 Position Single/Double, 3 Position Closed Center/Exhaust Center/Pressure Center

2 position single: VFR611⁰-□E, VFR611⁰-□D(Z)

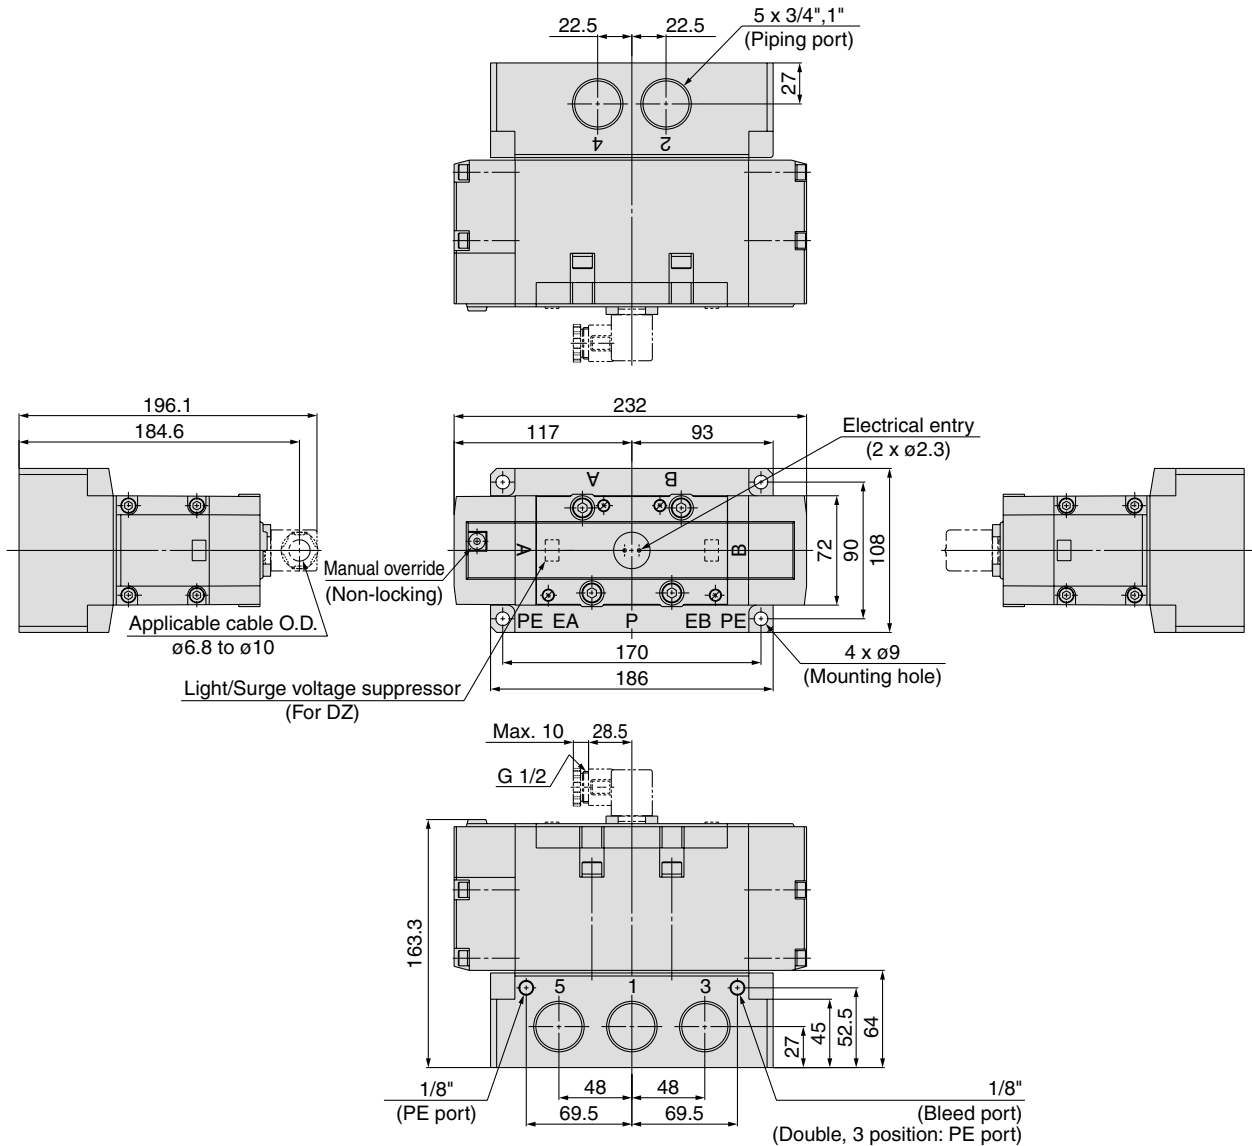

2 position double: VFR621⁰-□E, VFR621⁰-□D(Z) 3 position closed center: VFR631⁰-□E, VFR631⁰-□D(Z)
3 position exhaust center: VFR641⁰-□E, VFR641⁰-□D(Z)
3 position pressure center: VFR651⁰-□E, VFR651⁰-□D(Z)

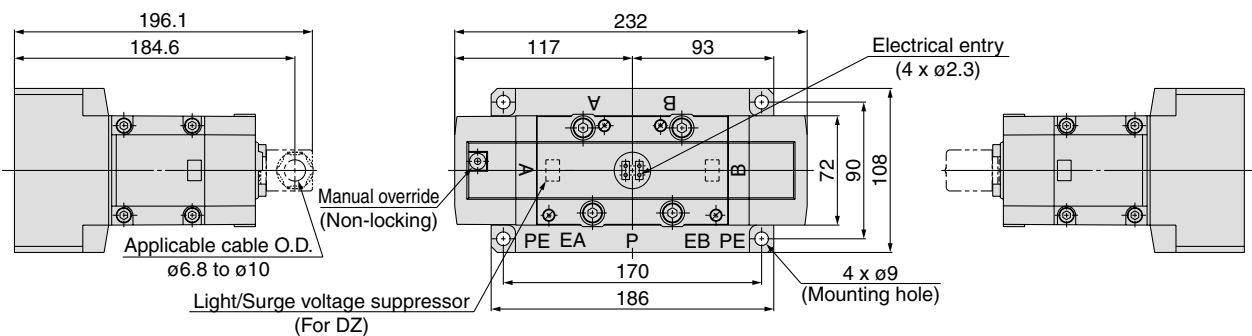

* Other dimensions are the same as the single type.

5 Port Pilot Operated Solenoid Valve Rubber Seal, Non Plug-in Series *VFR2000*



Non plug-in type


How to Order

Non plug-in



Conforming to
CSA standard

Symbol

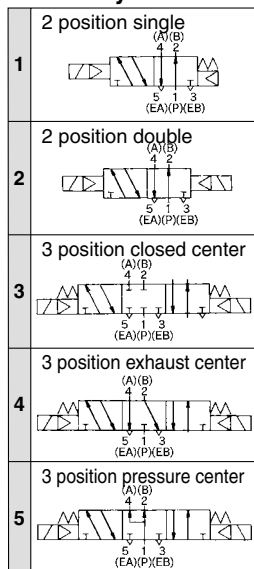

Pilot type

Nil	Internal pilot
R *	External pilot

* Option (External pilot is available only on sub-plate type.)

Coil rated voltage

1	100 VAC, 50/60 Hz
2	200 VAC, 50/60 Hz
3 *	110 to 120 VAC, 50/60 Hz
4 *	220 VAC, 50/60 Hz
5	24 VDC
6 *	12 VDC
7 *	240 VAC, 50/60 Hz

* Option

Piping (P, A, B, EA, EB port)

Nil	Side ported
-----	-------------

* Option

Port size (P, A, B port)

Nil	Without sub-plate
01	1/8
02	1/4

EA, EB port: 1/8

Thread type

Nil	Rc
N	NPT
T	NPTF
F	G

Pilot valve manual override

Nil: Non-locking push type	B*: Locking type B (Tool required)
A*: Non-locking push type A (Extended)	C*: Locking type C (Lever)


* Option

Option

Nil	None
Z	With light/surge voltage suppressor

Electrical entry

D: DIN terminal

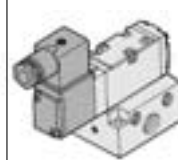

Refer to the standard product for product specifications, dimensions and model selection procedures.

5 Port Pilot Operated Solenoid Valve Rubber Seal, Non Plug-in Series *VFR3000*



How to Order

Non plug-in **30 – VFR3** **1** **4** **0** **-** **1** **D** **-** **02** **Individual electrical entry**

Symbol

1	2 position single
2	2 position double
3	3 position closed center
4	3 position exhaust center
5	3 position pressure center

Conforming to CSA standard

Body option

0	Standard
---	----------

Pilot type

Nil	Internal pilot
R *	External pilot

* Option

Coil rated voltage

1	100 VAC, 50/60 Hz
2	200 VAC, 50/60 Hz
3 *	110 to 120 VAC, 50/60 Hz
4 *	220 VAC, 50/60 Hz
5	24 VDC
6 *	12 VDC
7 *	240 VAC, 50/60 Hz

* Option

Piping (P, A, B, EA, EB port)

Nil	Side ported
B *	Bottom ported

* Option

Port size (P, A, B, EA, EB port)

Nil	Without sub-plate
02	1/4
03	3/8

* For bottom ported: 1/4

Thread type

Nil	Rc
N	NPT
T	NPTF
F	G

Pilot valve manual override

Nil: Non-locking push type	B*: Locking type B (Tool required)
A*: Non-locking push type A (Extended)	C*: Locking type C (Lever)

* Option

Option

Nil	None
Z	With light/surge voltage suppressor

Electrical entry

D: DIN terminal

SJ
SY
SV
SYJ
SZ
VP4
S0700
VQ
VQ4
VQ5
VQC
VQZ
SQ
VFS
VFR
VQ7

Refer to the standard product for product specifications, dimensions and model selection procedures.

5 Port Pilot Operated Solenoid Valve Rubber Seal, Non Plug-in Series **VFR4000**



How to Order

Non plug-in **30 – VFR4** **4** **0** **– 1 D** **–** **03** **Individual electrical entry**

Symbol

1 2 position single
2 2 position double
3 3 position closed center
4 3 position exhaust center
5 3 position pressure center

Conforming to CSA standard

Body option

0 Standard
1 * Direct manual override
* Option

Pilot type

Nil Internal pilot
R * External pilot
* Option

Coil rated voltage

1	100 VAC, 50/60 Hz
2	200 VAC, 50/60 Hz
3 *	110 to 120 VAC, 50/60 Hz
4 *	220 VAC, 50/60 Hz
5	24 VDC
6 *	12 VDC
7 *	240 VAC, 50/60 Hz

* Option

Piping (P, A, B, EA, EB port)

Nil	Side ported
B *	Bottom ported

* Option: Bottom ported is not available for external pilot.

Port size (P, A, B port)

Nil	Without sub-plate
03	3/8
04 *	1/2

EA, EB port: 3/8

Thread type

Nil	Rc
N	NPT
T	NPTF
F	G

Pilot valve manual override

Nil: Non-locking push type
B*: Locking type B (Tool required)
A*: Non-locking push type A (Extended)
C*: Locking type C (Lever)

* Option

Option

Nil	None
Z	With light/surge voltage suppressor

Electrical entry

D: DIN terminal

Refer to the standard product for product specifications, dimensions and model selection procedures.



Series VFR2000/3000/4000/5000/6000 Specific Product Precautions 1

Be sure to read before handling. Refer to front matters 58 and 59 for Safety Instructions Instructions and pages 3 to 7 for 3/4/5 Port Solenoid Valve Precautions.


⚠ Caution

Lead Wire Connection


Plug-in type (With terminal block)

Series VFR2000/3000/4000

- If you remove the junction cover ① on the sub-plate, you will see the plug-in terminal block ② attached to the inside of sub-plate.

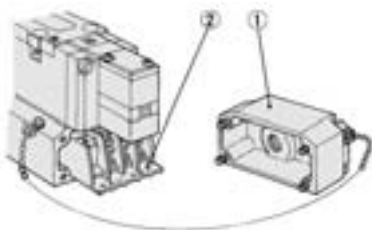

- The following markings are on the terminal block. Connect with corresponding power side.

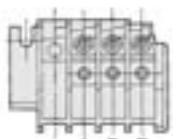


B side solenoid
Common (COM) terminal
A side solenoid


- Although "A-", "B+" and "B-" marks are indicated on the terminal block, this can be used as either "+COM" or "-COM".
- Applicable terminal:
VFR2000, VFR3000: 1.25-3, 1.25-3S, 1.25Y-3N, 1.25Y-3S
VFR4000: 1.25-3.5M, 1.25Y-3L, 1.25Y-3M

Series VFR5000

- Remove junction cover for sub-plate ①, depress levers ③ of terminal block assembly ②, pull out terminal block assembly.

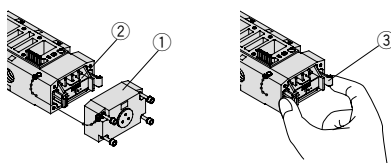

- Terminal block assembly is marked as below. Connect it to power supply side.

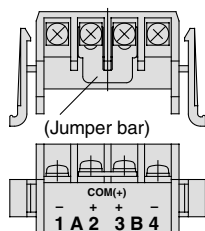


Model	Terminal block marking	A- (1)	B+ (3)	B- (4)
VFR510□		A side	COM	
VFR520□		A side	COM	B side
VFR540□ 3 5		A side	COM	B side


- Terminal block assembly can be used as "+" and "-" common regardless of markings. Do not remove jumper bar because it is used for common connection.
- Applicable terminal:
1.25-4, 1.25-4M

Series VFR6000

- If you remove the junction cover ① on the sub-plate, you will see the plug-in terminal block ② attached to the inside of sub-plate.

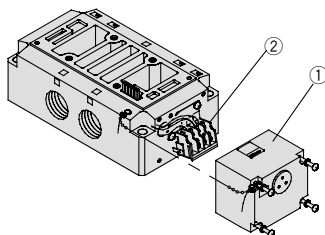

- Terminal block assembly is wired like the following figure. Connect it to each power supply side.

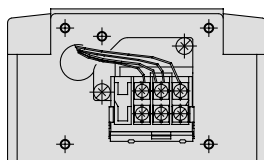

Model	Position	Left	Center	Right
VFR610□		A side	COM	
VFR620□		A side	COM	B side
VFR640□ 3 5		A side	COM	B side

- Can be used as either "+COM" or "-COM".
- Applicable terminal:
1.25-4, 1.25-4M

Non plug-in type


Series VFR2000

Series VFR3000/4000 (VFR3□40/4□40)

- Type G: Lead wire comes directly from the solenoid part. Connect it with the power source. Grommet with DC voltage surge voltage suppressor has polarity. Connect red lead wire to + (positive) side and black to - (negative) side.

Surge voltage suppressor	
DC	AC
Red (+) Black (-)	Varistor

- Type E, T, D, Y: In the case of DIN terminal block and terminal block, there is no polarity of positive [+] and negative [-]. Connect no. 1 and no. 2 terminals with corresponding power side.

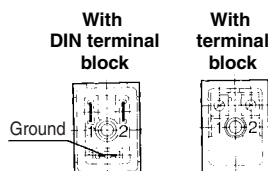


- Applicable cable O.D.
Type T: $\phi 6$ to $\phi 8$ mm
Type E: $\phi 2.3$ to $\phi 2.8$ mm
Type D (Series VFR2000): $\phi 6$ to $\phi 8$ mm
Type D (Series VFR3000/4000): $\phi 4.5$ to $\phi 7$ mm
Type Y: $\phi 4.5$ to $\phi 7$ mm
- Applicable crimp terminal
Type E, T: 1.25-3, 1.25-3S, 1.25Y-3N, 1.25Y-3S (Round shape or Y shape crimp terminal cannot be used for Type D.)

Series VFR3000/4000/5000/6000

(VFR3□10/4□10)


DIN terminal block type

- Male pin terminal of DIN terminal block of solenoid valves are wired as shown below. Connect to corresponding terminal on the connector.




Terminal no.	Internal wiring
1	SOL. A side
2	SOL. B side
3	COM
	Ground

- Can be used as either "+COM" or "-COM".
- Applicable cable
Cross section of the wire: 0.5 to 1.5 mm²
Cable O.D.: $\phi 8$ to $\phi 10$
- Applicable crimp terminal shown below.

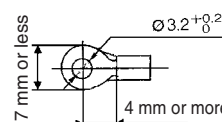

Corresponding to R1.25-3 of JIS C 2805


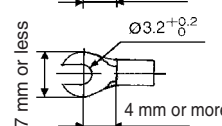


J.S.T. Mfg. Co., Ltd.
Equivalent to R1.25-3

- Proper tightening torque of the connector
Connector set screw 0.5 to 0.6 N·m
Terminal screw 0.5 to 0.6 N·m
- Incorrect connection of "COM terminal" (DIN terminal no. 3) can cause damage on power source circuit.

Terminal block type

- Remove cover ①, over terminal block ② attached to the inside of body. Connect with corresponding power side. For a style with light and surge voltage suppressor, straightly pull out the light and surge voltage suppressor substrate ③ and then connect them.

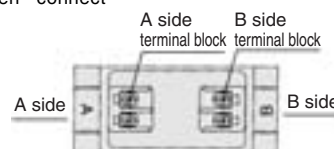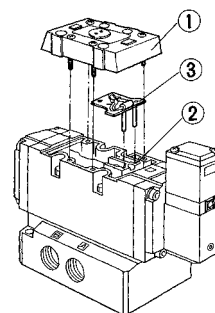

- Applicable terminal:
VFR3000: 1.25-3, 1.25-3S, 1.25Y-3N, 1.25Y-3S
VFR4000: 1.25-3.5M, 1.25Y-3L, 1.25Y-3M
VFR5000/6000: 1.25-3.5M, 1.25-3L, 1.25-3M




Series VFR2000/3000/4000/5000/6000 Specific Product Precautions 2

Be sure to read before handling. Refer to front matters 58 and 59 for Safety Instructions Instructions and pages 3 to 7 for 3/4/5 Port Solenoid Valve Precautions.

⚠ Caution


Attaching and Detaching Connectors

1. To attach a connector, hold the lever and connector unit between your fingers and insert straight onto the pins of the solenoid valve so that the lever's pawl is pushed into the groove and locks.
2. To detach a connector, remove the pawl from the groove by pushing the lever downward with your thumb, and pull the connector straight out.

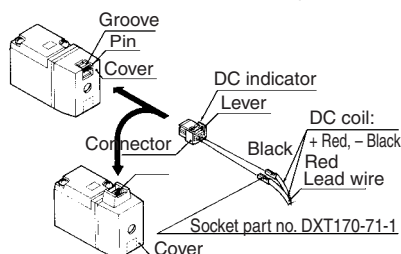

Attaching and Detaching Lead Wires with Sockets

Peel 3.2 to 3.7 mm of the tip of lead wire, enter the core wires neatly into a socket and crimp it with a special crimp tool. Be careful so that the cover of lead wire does not enter into the crimping part.

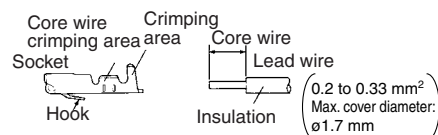


Attaching and Detaching Lead Wires with Sockets

1. Attaching

Insert the sockets into the square holes of the connector (with + and - indication) and, continue to push the sockets all the way in until the lock by hooking into the seats in the connector. (When they are pushed in, their hooks open and they are locked automatically.) Then confirm that they are locked by pulling lightly on the lead wires.

2. Detaching

To detach a socket from a connector, pull out the lead wire while pressing the socket's hook with a stick having a thin tip (approx. 1 mm). If the socket will be used again, first spread the hook outward.

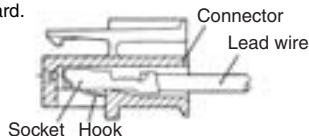

Plug Connector Lead Wire Length

Standard length is 300 mm, but the following lengths are also available.

How to Order Connector Assembly

DXT170-80-□A-□

Lead wire color

Symbol	Lead wire with socket	Note
Nil	Sockets (2 pcs.) only	Without lead wire
1	Blue (2 pcs.)	For 100 VAC
2	Red (2 pcs.)	For 200 V AC
3	Gray (2 pcs.)	Other VAC
4	Red: + Black: -	For DC

Lead wire length

Symbol	Lead wire length (L mm)
Nil	300
6	600
10	1000
15	1500
20	2000
25	2500
30	3000

How to Order

Include the connector assembly part number together with the part number for the plug connector's solenoid valve without a connector.

<Example> For lead wire length 2000 mm
VFR2210-5MO-02 3 pcs.
DXT170-80-4A-20 6 pcs.

Light/Surge Voltage Suppressor

Refer to table 1 for "Series VFR2000 Plug-in type", "VFR3□□0, VFR4□□0 type of Series VFR3000/4000" and "VFR5000/6000", and table 2 for "Series VFR2000 Non plug-in type" and "VFR3□40, VFR4□40 type of Series VFR3000/4000".

Series VFR2000


Plug-in type (VFR2□□00)

Light/Surge voltage suppressor




Non plug-in type (VFR2□10)

Light/Surge voltage suppressor

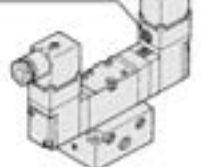


Light/Surge voltage suppressor

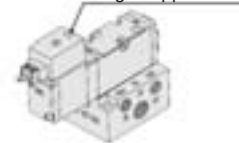

Series VFR3000, 4000


Plug-in type (VFR3□00/4□00)

Light/Surge voltage suppressor

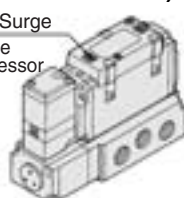


Non plug-in type (VFR3□10/4□10)

Light/Surge voltage suppressor

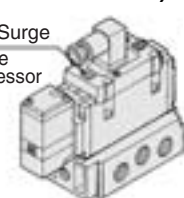

Non plug-in type (VFR3□40/4□40)


Light/Surge voltage suppressor

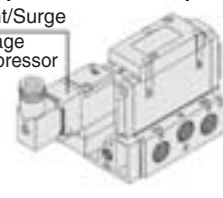

Series VFR5000/6000

Plug-in type (VFR5□00/6□00)

Light/Surge voltage suppressor

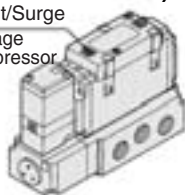

Non plug-in type (VFR5□10/6□10)

Light/Surge voltage suppressor

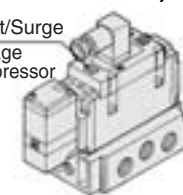


Table (1) Series VFR2000 (VFR2□□0)

Series VFR3000/4000 (VFR3□□0/4□□0)
Series VFR5000/6000

Voltage		Light/Surge voltage suppressor
AC	Single solenoid	
	Double solenoid	
24 VDC or less	Single solenoid	
	Double solenoid	

Table (2) Series VFR2000 (VFR2□10)

Series VFR3000/4000 (VFR3□40/4□40)

Voltage		Light/Surge voltage suppressor
AC	SOL. A or SOL. B	
	SOL. A or SOL. B	
24 VDC or less	SOL. A or SOL. B	
	SOL. A or SOL. B	

* Light/Surge voltage suppressor is not available for grommet type.
For grommet type with surge voltage suppressor, refer to page 1321.



Series VFR2000/3000/4000/5000/6000 Specific Product Precautions 3

Be sure to read before handling. Refer to front matters 58 and 59 for Safety Instructions Instructions and pages 3 to 7 for 3/4/5 Port Solenoid Valve Precautions.

⚠ Caution

Used as a 3 Port Valve

Plugging one of the cylinder ports (A or B) enables use as a normally closed (N.C.) or normally open (N.O.) 3 port valve.

It is convenient when 3 port valve is needed on a manifold, etc., but it can't be used in special applications such as using as a non-leakage valve. Use it with the exhaust port leaving open.

Plug	B port	A port
Type of actuation	N.C.	N.O.
Number of solenoids	Single	
	Double	
Number of solenoids	Single	
	Double	

Change Direction of DIN Connector/Cable Entry

- Unscrew retaining screw, pull off outer cover, rotate connector block through 180°. Replace cover and tighten screw.

How to Calculate the Flow Rate

For obtaining the flow rate, refer to front matter 44 to 47.

SJ

SY

SV

SYJ

SZ

VP4

S0700

VQ

VQ4

VQ5

VQC

VQZ

SQ

VFS

VFR

VQ7

How to Exchange Solenoid Valves, Pilot Valve Assemblies

How to exchange solenoid valves

- Loosen set screw and take solenoid valve out vertically, otherwise it may cause damage to the solenoid valve. Never remove valve at an angle.
- When mounting solenoid valve on to the base, plug pin assembly (base-side) into receptacle assembly (body-side) vertically.

Tightening Torque for Mounting Bolt

Model	Thread	Tightening torque
Pilot valve assembly	M3 (2 pcs.)	0.6 N·m
VFR2000	M3 (3 pcs.)	0.9 N·m
VFR3000	M3 (3 pcs.)	1.1 N·m
VFR4000	M4 (4 pcs.)	1.4 N·m
VFR5000	M5 (4 pcs.)	2.8 N·m
VFR6000	M8 (4 pcs.)	16 N·m

Note) For more information about the procedure, refer to the instruction manual.


How to exchange pilot valve assemblies

- Possible to exchange pilot valve assemblies like the following figures.

Note) Do not change the rated voltage.


Series VFR2000

Pilot valve assembly

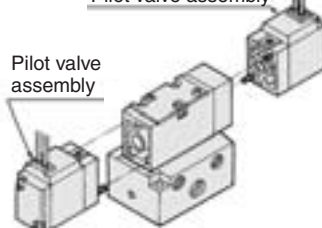

Series VFR3000/4000/5000

Pilot valve assembly

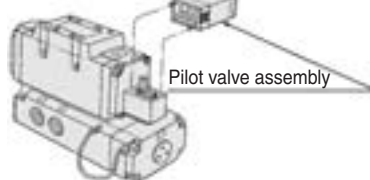


Series VFR6000


Pilot cover

Pilot valve assembly


Mounting screw

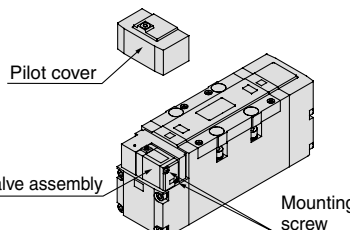


Series VFR2000

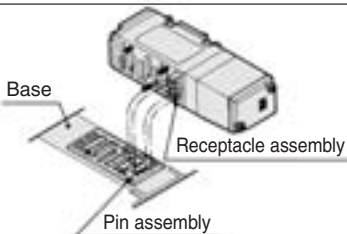

Series VFR3000/4000/5000

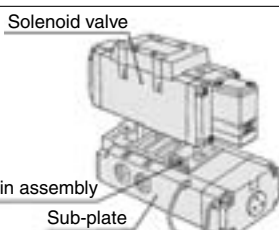

Series VFR6000

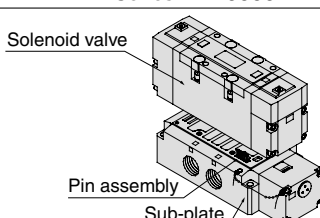



Series VFR2000/3000/4000/5000/6000

Specific Product Precautions 4

Be sure to read before handling. Refer to front matters 58 and 59 for Safety Instructions Instructions and pages 3 to 7 for 3/4/5 Port Solenoid Valve Precautions.

Interface Regulator

Caution

Specifications

Interface regulator		ARBF2000		ARBF3050		ARBF4050		ARBF5050				
Applicable solenoid valve series		VFR2000		VFR3000		VFR4000		VFR5000				
Regulating port		P		A	B	P	A	B	P	A	B	P
Maximum operating pressure		1.0 MPa ⁽¹⁾										
Set pressure range		0.05 to 0.83 MPa				0.1 to 0.83 MPa ⁽²⁾						
Ambient and fluid temperature		-5 to 60°C (No freezing) ⁽³⁾										
Port size for connection of pressure gauge		M5 x 0.8		Rc 1/8								
Weight (kg)		0.16		0.46			0.72			0.83		
Effective area at supply side (mm ²)	P → A	5.5	21	18.5	11	35	31	26	44	38	32	
S at P ₁ = 0.7 MPa/P ₂ = 0.5 MPa	P → B	5.1	18.5	22	12	31	31	24	38	40	31	
Effective area at exhaust side (mm ²)	A → EA	12	40			55			90			
S at P ₂ = 0.5 MPa	B → EB	11	36			45			77			

Note 1) Maximum operating pressure of solenoid valve is 0.9 MPa.

Note 2) Set the pressure within operating pressure range of solenoid valve.

Note 3) Solenoid valve: Max. 50°C

Note 4) Synthesized effective area with 2 position.

Note 5) • Operate an interface regulator only by applying pressure from the "P" port of the base, except when using it as a reverse pressure valve.

• To combine a pressure center valve and the A and B port pressure reduction interface regulator, use the ARBF3000, ARBF4000, or the ARBF5000 model.


• To combine a reverse pressure valve and an interface regulator, use the ARBF3000, ARBF4000, or the ARBF5000 model. The P port pressure reduction cannot be used.

• When combining a double check valve and an interface regulator, use a manifold or subplate as a basis, and stack them in the following order; the perfect spacer → the interface regulator → the valve.

• When a closed center valve is combined with the interface regulator's A, B port regulation, note that it cannot be used for intermediate stops of a cylinder because there is leakage from relief port on the regulator.


Flow Characteristics (P → A) (Condition: Inlet pressure 0.7 MPa when 2 position solenoid valve is mounted.)

JIS Symbol

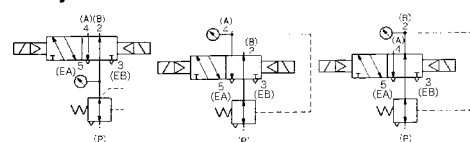


P port regulation A port regulation B port regulation


ARBF2000-00-P

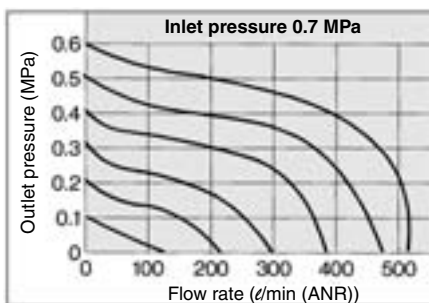


ARBF3050-00-P

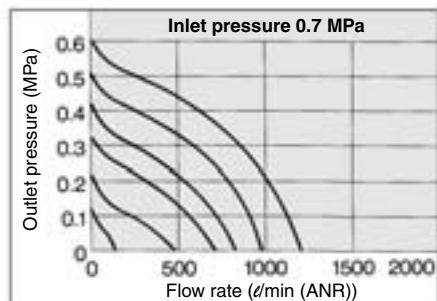


ARBF4050-00-P

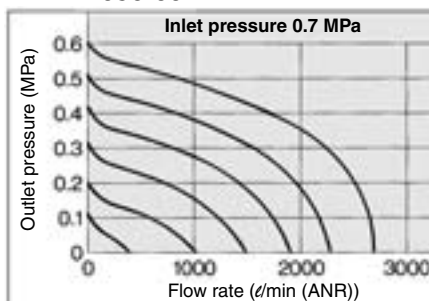


ARBF5050-00-P

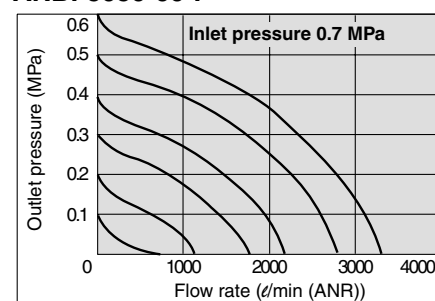


ARBF3050-00-A

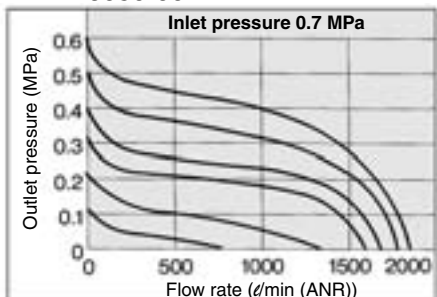

ARBF4050-00-A

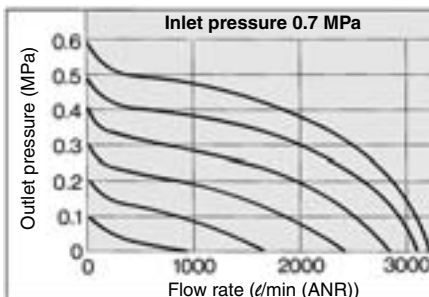

ARBF5050-00-A

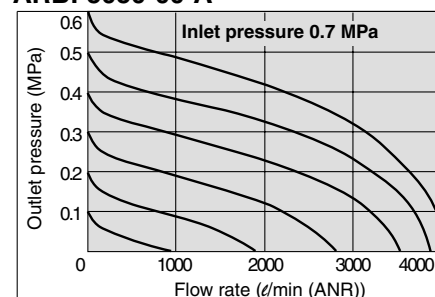



Series VFR2000/3000/4000/5000/6000 Specific Product Precautions 5

Be sure to read before handling. Refer to front matters 58 and 59 for Safety Instructions Instructions and pages 3 to 7 for 3/4/5 Port Solenoid Valve Precautions.

Lead Wire Connection

⚠ Caution


Type 01T with Terminal Block

Series VFR2000

- Remove junction cover of manifold, exposing terminal block attached to the manifold block. Lead wires from solenoid valve are connected with the terminals on upper side of terminal block. (On the terminal block, lead wire is connected with both A and B sides of solenoid valve in accordance with the corresponding markings A and B on the block.)
- Connect each lead wire of power side corresponding to respective solenoid valve on the lower terminal block.
- Terminal block wiring specifications is in accordance with COM.

Model \ Terminal block marking	A –	B +	B –
VFR2100	A side	COM	
VFR2200	A side	COM	B side
VFR2 ³ / ₅ 00	A side	COM	B side

- Applicable terminal: 1.25-3, 1.25-3S, 1.25Y-3N, 1.25Y-3S
- Although “A–”, “B+” and “B–” marks are indicated on the terminal block, VFR2000 can be used as either “+COM” or “–COM”.

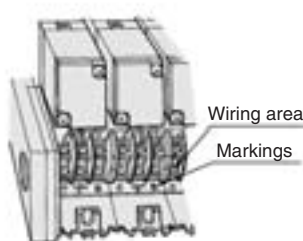

Series VFR3000

Model \ Terminal block marking	A –	COM +	B –
VFR3100	A side	COM	
VFR3200	A side	COM	B side
VFR3 ³ / ₅ 00	A side	COM	B side

- Applicable terminal: 1.25-3.5M, 1.25Y-3L, 1.25-3M
- Although “A–”, “COM+” and “B–” marks are indicated on the terminal block, VFR3000 can be used as either “+COM” or “–COM”.

Series VFR4000

Model \ Terminal block marking	A –	B +	B –
VFR4100	A side	COM	
VFR4200	A side	COM	B side
VFR4 ³ / ₅ 00	A side	COM	B side

- Applicable terminal: 1.25-3.5M, 1.25Y-3L, 1.25-3M
- Although “A–”, “B+” and “B–” marks are indicated on the terminal block, VFR4000 can be used as either “+COM” or “–COM”.

Series VFR5000

Model \ Terminal block marking	A –	B +	B –
VFR5100	A side	COM	
VFR5200	A side	COM	B side
VFR5 ³ / ₅ 00	A side	COM	B side

- Applicable terminal: 1.25-3.5M, 1.25Y-3L, 1.25-3M
- Although “A–”, “B+” and “B–” marks are indicated on the terminal block, VFR5000 can be used as either “+COM” or “–COM”.

SJ

SY

SV

SYJ

SZ

VP4

S0700

VQ

VQ4

VQ5

VQC

VQZ

SQ

VFS

VFR

VQ7



Series VFR2000/3000/4000/5000/6000 Specific Product Precautions 6

Be sure to read before handling. Refer to front matters 58 and 59 for Safety Instructions Instructions and pages 3 to 7 for 3/4/5 Port Solenoid Valve Precautions.

⚠ Caution


Lead Wire Connection

Manifold/Plug-in Type


Type 01C Circular Connector

Series VFR2000/3000/4000/5000

- When multi-connector is used, mass-termination between power supply side and solenoid valve can be done. This saves the wiring connection labor.
- Wire connection specifications
Lead wire for both solenoid A and B sides in manifold are connected to connector terminal as COM specifications.

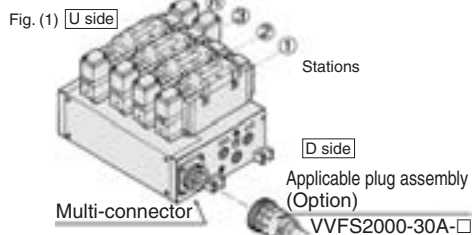

Manifold internal wiring

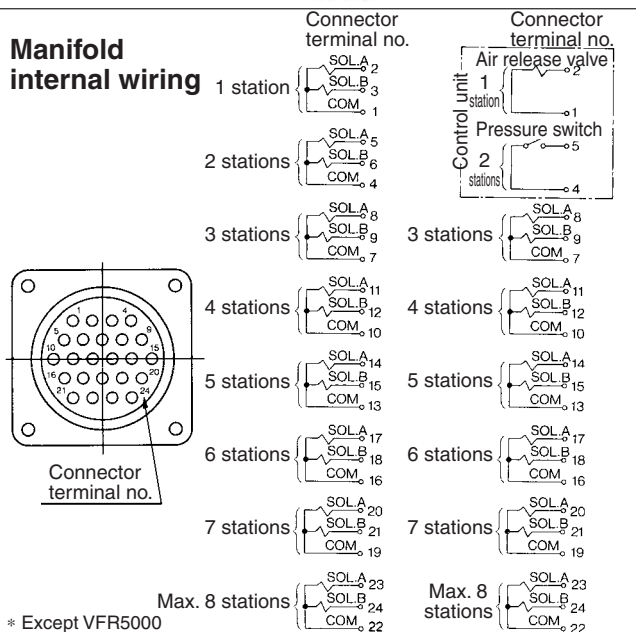

Note 1) Maximum number is 8 stations. Note 2) It is used as +COM and -COM.
Note 3) Station numbers are started from D side although connector is mounted

Applicable Plug Assembly (Option)

Assembly part no.	Cable length	Component parts
VVFS2000-30A-1	1.5 m	Plug 206837-1 1 pc. Cable clamp 206138-1 1 pc. Socket 66101-2 24 pcs. Cable VCTF 24 cores x 0.75 mm ² made by Tyco Electronics AMP K.K.
VVFS2000-30A-2	3 m	
VVFS2000-30A-3	5 m	
VVFS2000-30A-4 *	7 m	
VVFS2000-30A-5 *	10 m	
VVFS2000-30A-6 *	15 m	
VVFS2000-30A-7 *	20 m	

* Option

Cable Color List of Each Terminal No.


Terminal no.	1	2	3	4	5	6	7	8	9	10	11	12	13
Lead wire color	Orange	Orange	Black	Black	Green	Green	Red	Red	Blue	Blue	Yellow	Yellow	Brown
Dot marking	—	Yes	—	Yes	—	Yes	—	Yes	—	Yes	—	Yes	—

Terminal no.	14	15	16	17	18	19	20	21	22	23	24
Lead wire color	Brown	White	White	Pink	Pink	Gray	Gray	Sky blue	Sky blue	Light green	Light green
Dot marking	Yes	—	Yes	—	Yes	—	Yes	—	Yes	—	Yes


Type 01F D-sub Connector

Series VFR2000/3000/4000/5000

- MIL standard type D connector (Terminal: 25 pins) has wide exchangeability and saves wiring labor.
- Wire connection specifications
Lead wire for both solenoid A and B sides in manifold are connected to connector terminal as COM specifications.

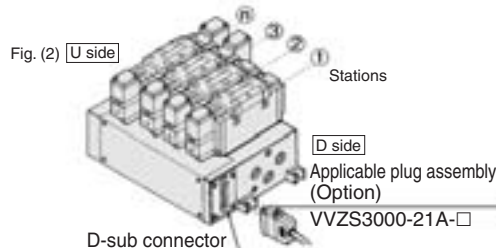

Manifold internal wiring

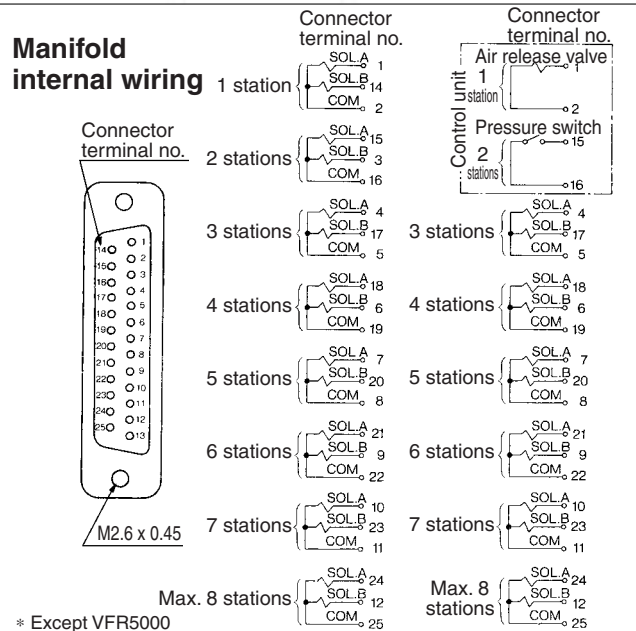

Note 1) Maximum number is 8 stations. Note 2) It is used as +COM and -COM.
Note 3) Station numbers are started from D side although connector is mounted

Applicable Plug Assembly (Option)

Assembly part no.	Cable length	Component parts
VVZS3000-21A-1	1.5 m	Plug MIL standard type D connector Number of terminals: 25 pins Cable: 25 cores x 0.3 mm ²
VVZS3000-21A-2	3 m	
VVZS3000-21A-3	5 m	
VVZS3000-21A-4 *	8 m	
VVZS3000-21A-5 *	10 m	
VVZS3000-21A-6 *	15 m	
VVZS3000-21A-7 *	30 m	
VVZS3000-21A-8 *	20 m	

* Option

Cable Color List of Each Terminal No.

Terminal no.	1	2	3	4	5	6	7	8	9	10	11	12
Lead wire color	Black	Brown	Red	Orange	Yellow	Pink	Blue	Purple	Gray	White	White	Yellow
Dot marking	—	—	—	—	—	—	—	—	White	Black	Black	Red

Terminal no.	13	14	15	16	17	18	19	20	21	22	23	24	25
Lead wire color	Orange	Yellow	Pink	Blue	Purple	Gray	Orange	Red	Brown	Pink	Gray	Black	White
Dot marking	Red	Black	Black	White	—	—	Black	White	White	Red	Red	White	—